



HTC Droid Incredible MicroSD card Replacement

MicroSD card removal.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Use this guide to remove or replace your current MicroSD card. The Droid Incredible supports a MicroSD card up to 32 GB.

Step 1 — Battery



- Press your thumbnail into the slot between the rear panel and the front case located in the bottom of the phone.
- ⓘ Useful tip: a penny or dime works in a pinch if you can't use your thumbnail.
- Gently pry the rear panel up and away from the phone. You may need to slide your thumb up the crack to separate the rear panel from the front case.

Step 2



- Remove the rear panel from the phone.

Step 3



- Insert a fingertip into the gap between the battery and the rear inner frame, located between the battery and the speaker. Slide the battery away from the speaker, widening the gap.
- Lift the top of the battery up and remove the battery from the rear inner frame.

Step 4 — MicroSD card



- Press the MicroSD card further into its slot until it clicks.
- Release the MicroSD card, and it will pop out slightly.

Step 5



- Pull the MicroSD card straight out of its slot.

To reassemble your device, follow these instructions in reverse order.