


Dell Alienware 13 R2 Hard Drive Replacement

Dell Alienware 13 R2 Hard Drive Replacement

Written By: Terrence15

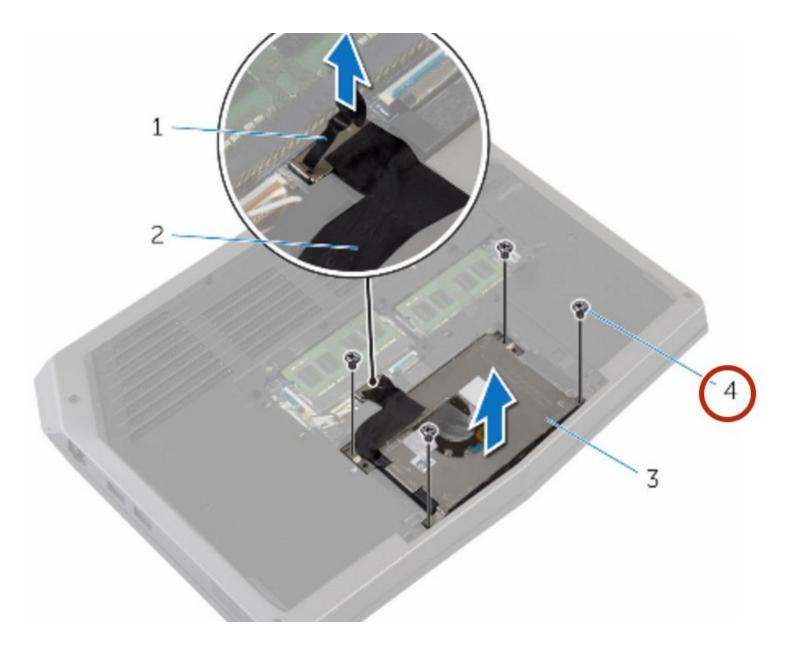

INTRODUCTION


In this guide, we will be removing and replacing the hard-drive of the Dell Alienware 13 R2.

TOOLS:

۶


• Phillips #0 Screwdriver (1)

Step 1 — Remove the Screws

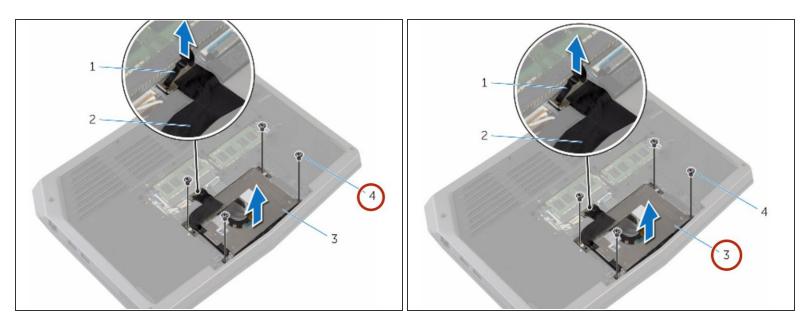

- MARNING: Before working inside your computer, read the safety information that shipped with your computer and <u>Before Working Inside Your Computer</u>. After working inside your computer, follow the instructions in <u>After Working Inside Your Computer</u>.
- Remove the screws that secure the hard-drive assembly to the computer base.

Step 2 — Disconnecting the Hard-Drive Cable

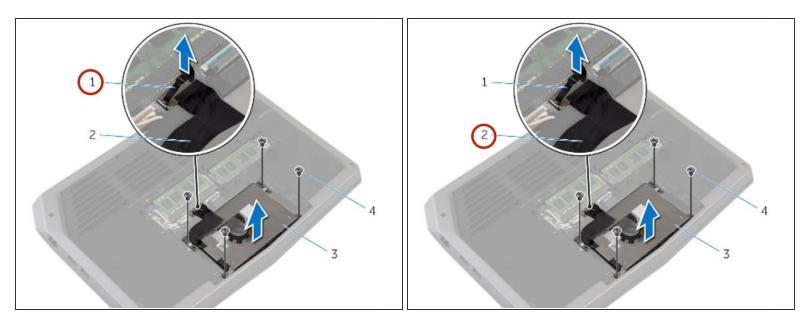

• Using the pull tab, disconnect the hard-drive cable from the system board.

To reassemble your device, follow these instructions in reverse order.