



Dell Inspiron 13-7359 Screen Replacement

Must know how to remove the battery, hard drive, and cooling fan. Learn how to remove the screen from your laptop and replace it with a new one.

Written By: Austin Navarro




INTRODUCTION

This guide to remove your Dell Inspiron 13-7359 screen. You will need a phillips #0 screwdriver and a small plastic spudger. This guide will require more time and is more difficult than the other replacement guides.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

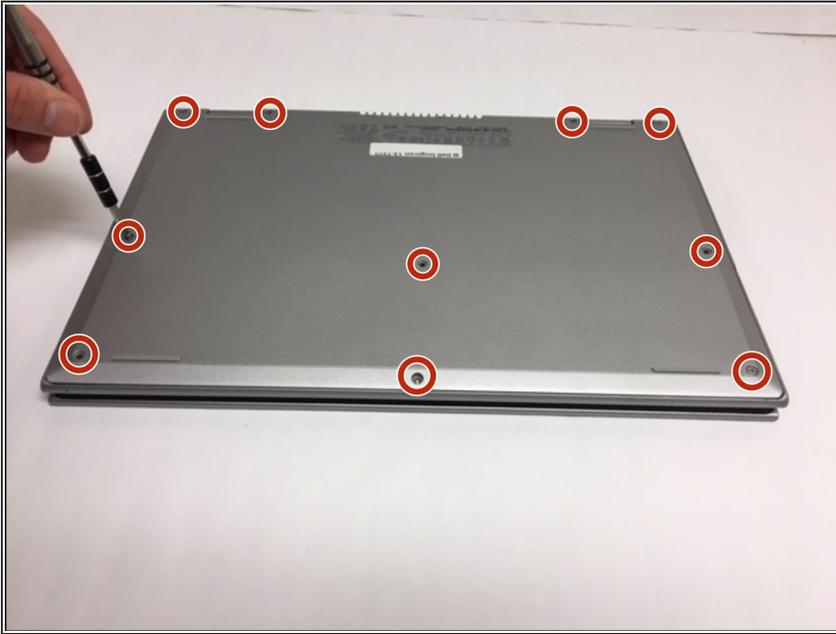


- First flip over the laptop to expose the back panel
- Use a Phillips #0 screwdriver to unscrew all ten 7mm Phillips head screws holding the back panel in place.

Step 2



- With a plastic spudger, carefully remove the back panel by prying each corner off individually
- Slowly pick up the panel and set it aside

Step 3

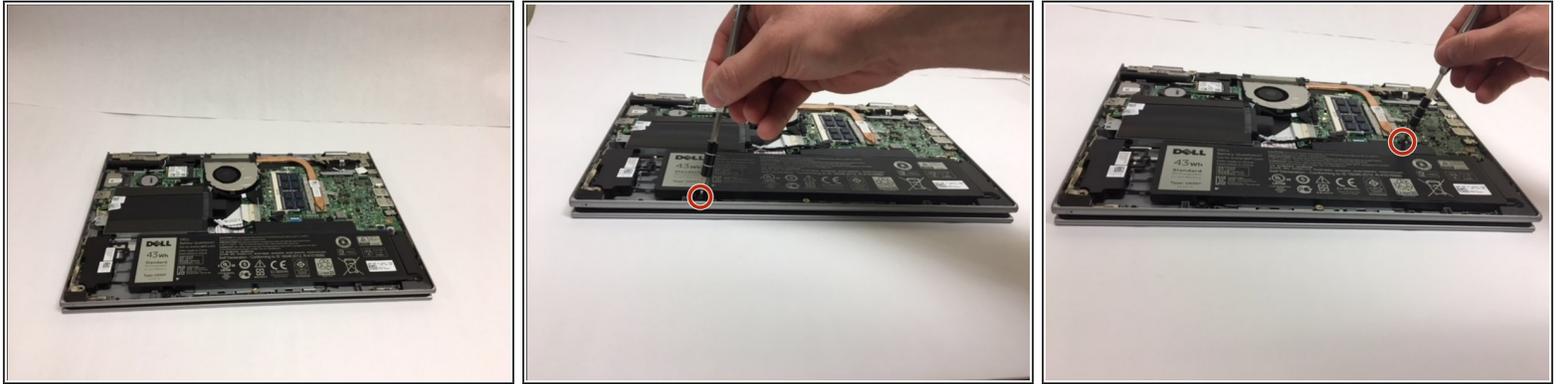

- The battery will be the largest black component in the device located near the bottom edge. Using a Phillips #0 screwdriver, unscrew the two 3mm Phillips head screws holding in the battery.

Step 4





- To remove the old battery, slightly lift the bottom edge of the battery with your hands
- Now slowly pull the battery towards you to fully detach the battery

Step 5 — Hard Drive



- Unscrew and remove the 2 of the 3mm Phillips head screws holding the hard drive in place.

Step 6

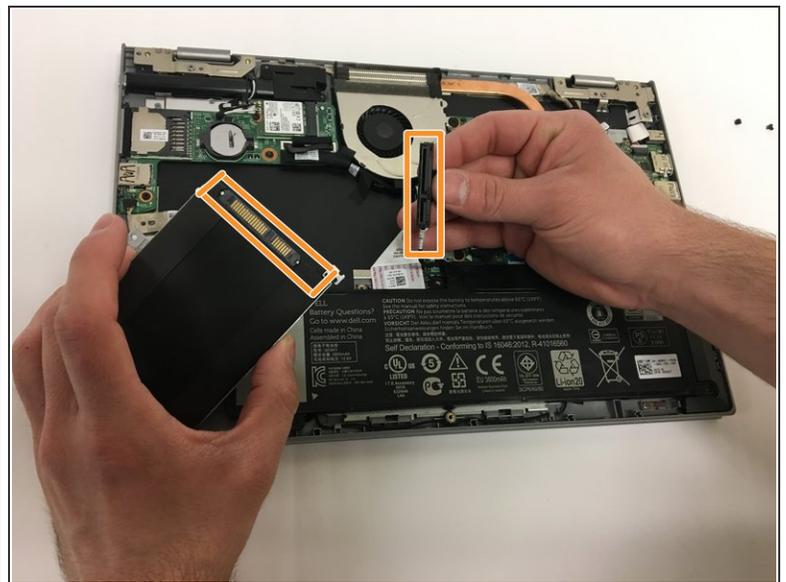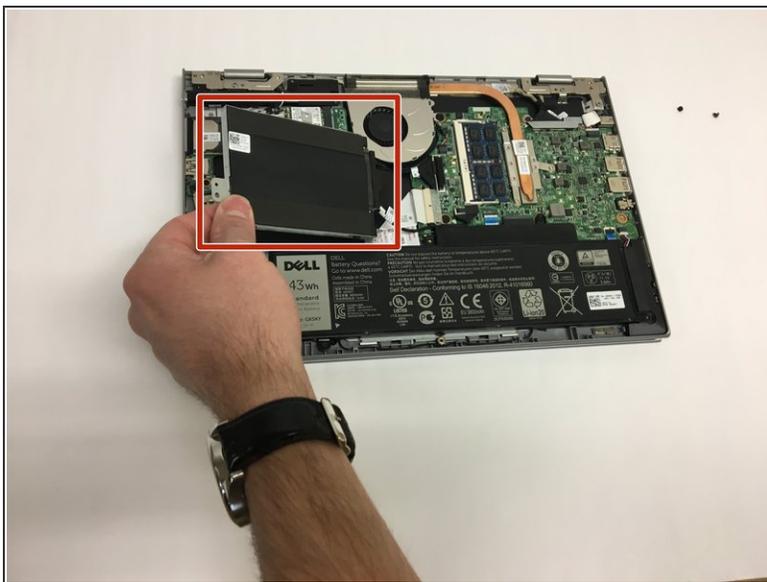


- Lift and hold the hard drive in your left hand.
- Use your right hand to grab hold of the black wire connector attached on the right of the hard drive.
- Carefully pull the connector away from the hard drive to completely disconnect from the laptop.

Step 7 — Cooling Fan




- Unscrew and remove the 2 of the 7mm Phillips head screws holding the cooling fan in place.

Step 8

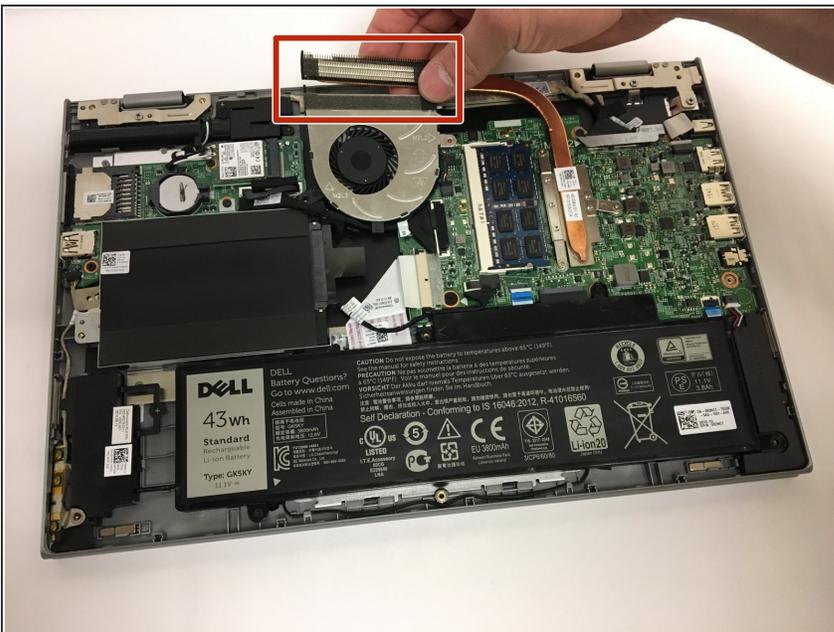


- Hold the cooling fan with one hand.
- With the other hand, grab hold of the part of the copper heat sink that is attached to the cooling fan.
- Carefully pull the cooling fan away from the attached part so that it becomes fully disconnected.

Step 9 — Screen

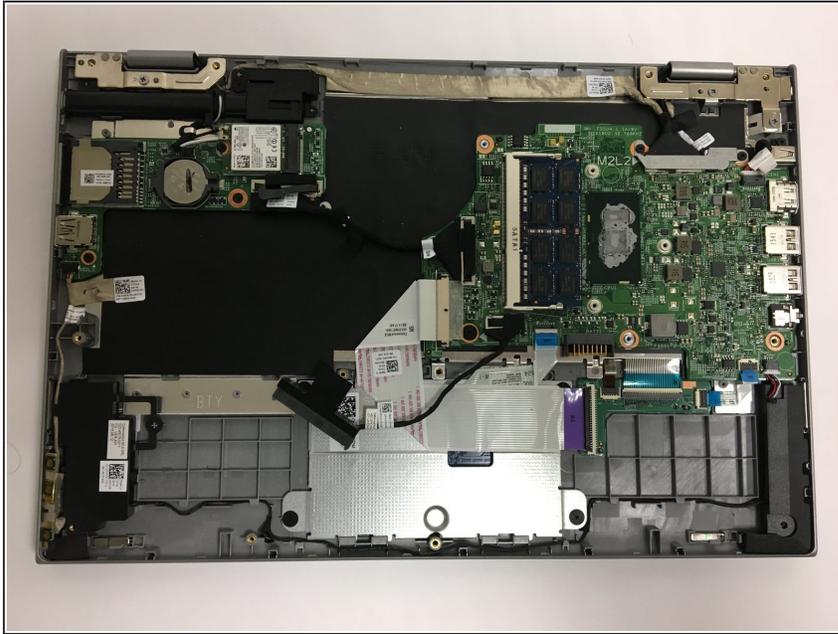



- Make sure that the Battery, Hard Drive, and Cooling Fan are safely removed.

Step 10

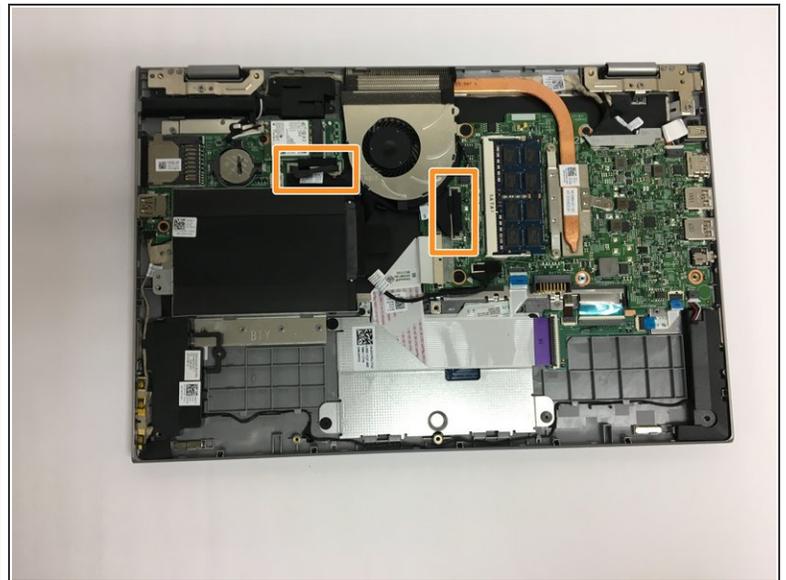



- Unplug antenna cables located at the top left corner.
- Unplug daughter board located to the bottom left of the cooling fan.

Step 11

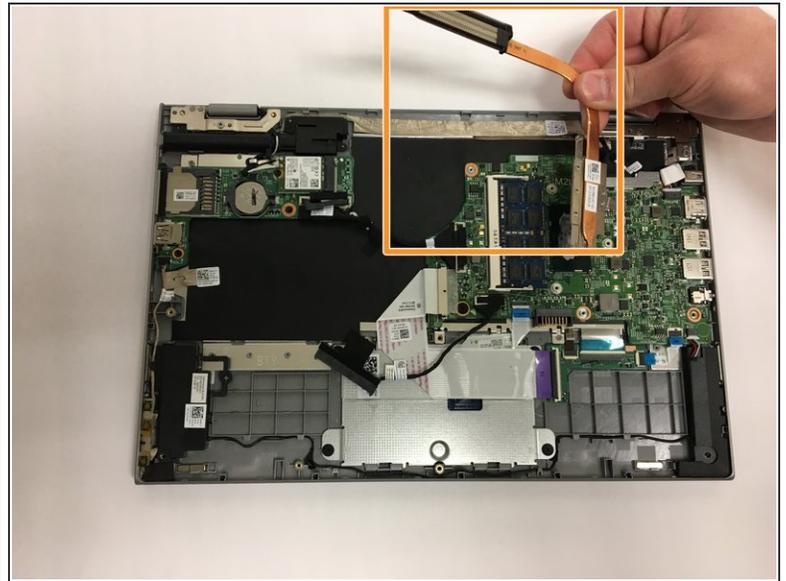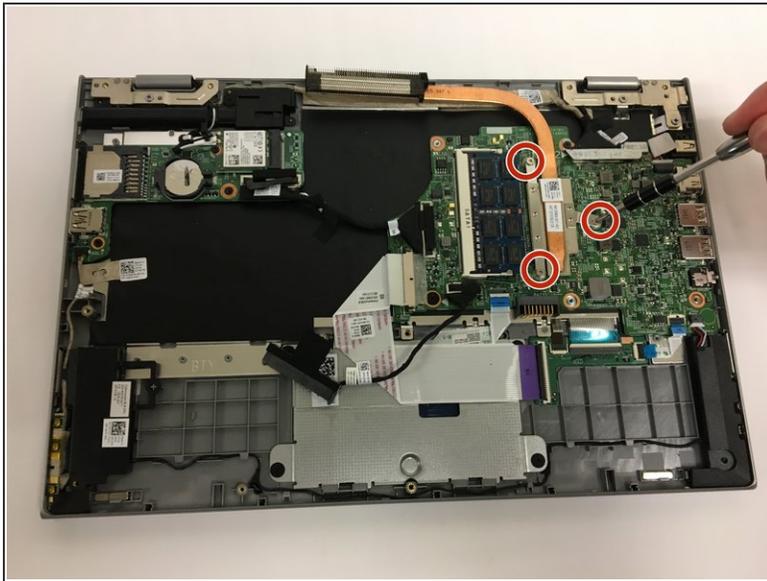

- Find the heat sink (copper colored metal).
- Use Phillips 0 screwdriver to loosen the 3 of the 3mm Phillips head screws from the heat sink.
- Remove the heat sink

Step 12

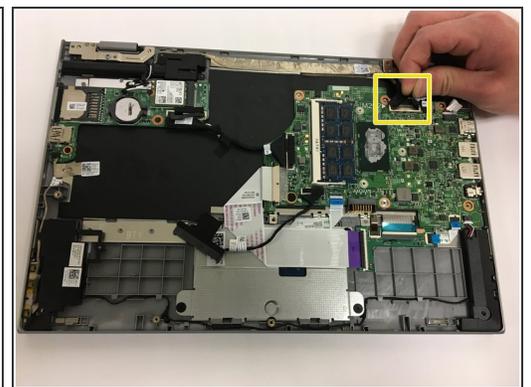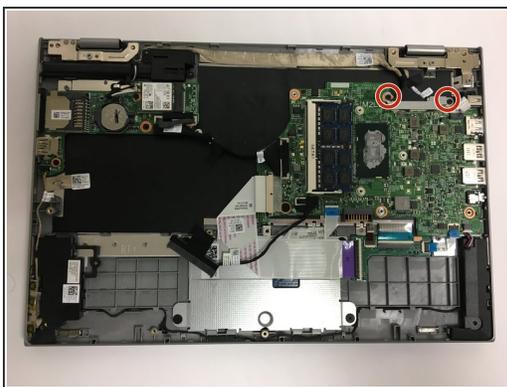

- Use Phillips 0 screwdriver to unscrew the 2 of the 3mm screws holding the LCD cable bracket in place.
- Remove the LCD cable bracket.
- Unplug LCD and touchscreen cables.

Step 13



- Use Phillips 0 screwdriver to unscrew and remove the 3 of the 7mm screws from the LCD display.
- Open the laptop so that the screen and keyboard are face down on the desk.
- Carefully disconnect the LCD display by lifting the screen upward and away from the bottom half of the laptop.

Step 14




- Using a plastic spudger carefully separate the casing of the screen.

Step 15



- Use the plastic spudger to disconnect the mini circuit board from the casing.
- Disconnect the small wires connecting the screen to the casing.

Step 16

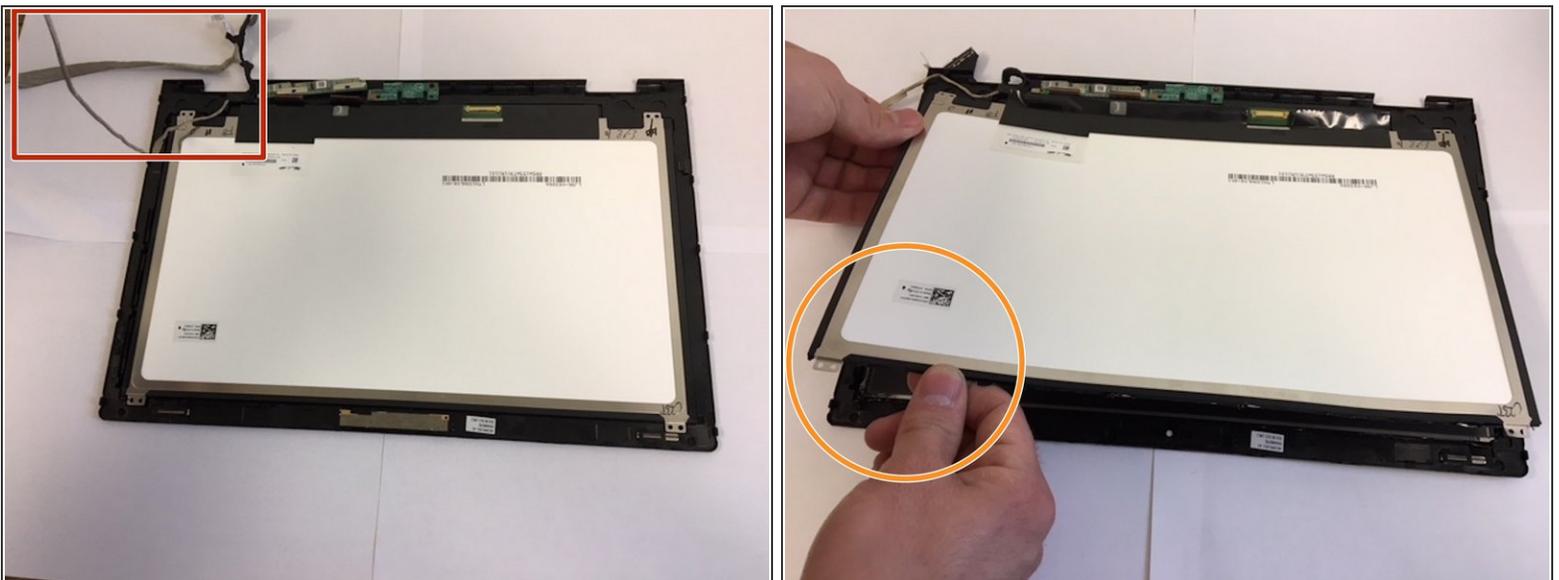

- Remove the loose wiring from the perimeter of the screen.
- Gently separate the LCD screen from the laptop casing.

To reassemble your device, follow these instructions in reverse order.