



HP Stream 13-c010nr Battery Replacement

Follow this guide to replace the battery on a HP Stream 13-c010nr laptop.

Written By: Keegan Lapham



INTRODUCTION

A short battery life on the HP Stream 13-c010nr is a common problem experienced. Follow this guide to do the replacement yourself.

TOOLS:

- [Spudger](#) (1)
- [Precision Tweezers Set](#) (1)
- [Phillips #0 Screwdriver](#) (1)

PARTS:

- [HP ME03XL Replacement Laptop Battery](#) (1)

Step 1 — HP Stream 13-c010nr Disassembly




- Remove the five rubber feet from the bottom of the laptop with a plastic opening tool.

Step 2




- Remove the thirteen 5mm Phillips #0 screws from the bottom case.

Step 3

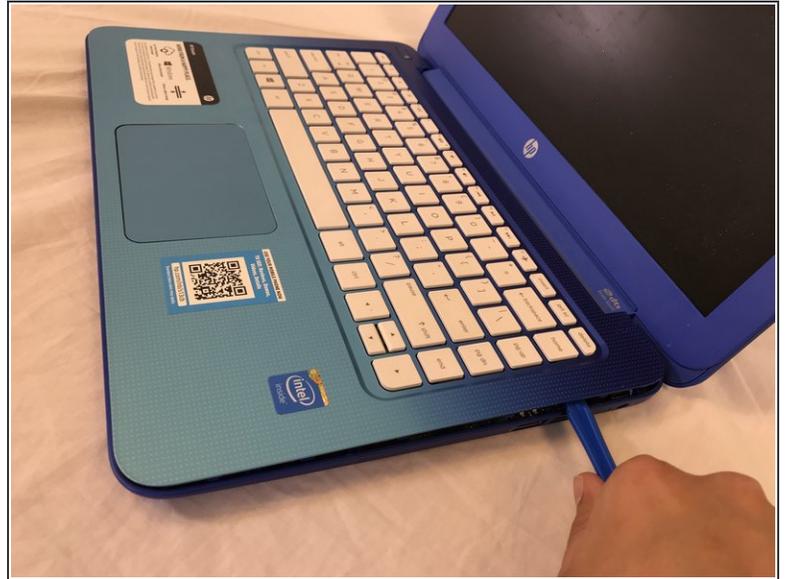


- Flip the laptop over and open it up.
- Wedge a plastic opening tool between the keyboard and bottom case, pry upwards to separate the two pieces.
- Lift up the keyboard.
- ⓘ Ribbon cables still connect the two pieces.

Step 4

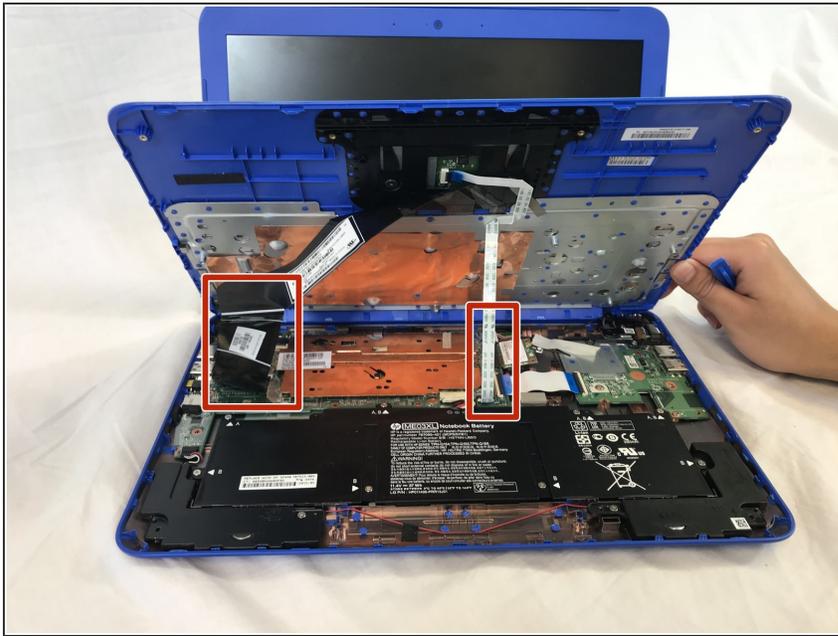

- Use a spudger to flip up the retaining flaps on the keyboard ribbon cable [ZIF](#) sockets.
- Pull up the ribbon cables from their sockets.

Step 5 — Battery

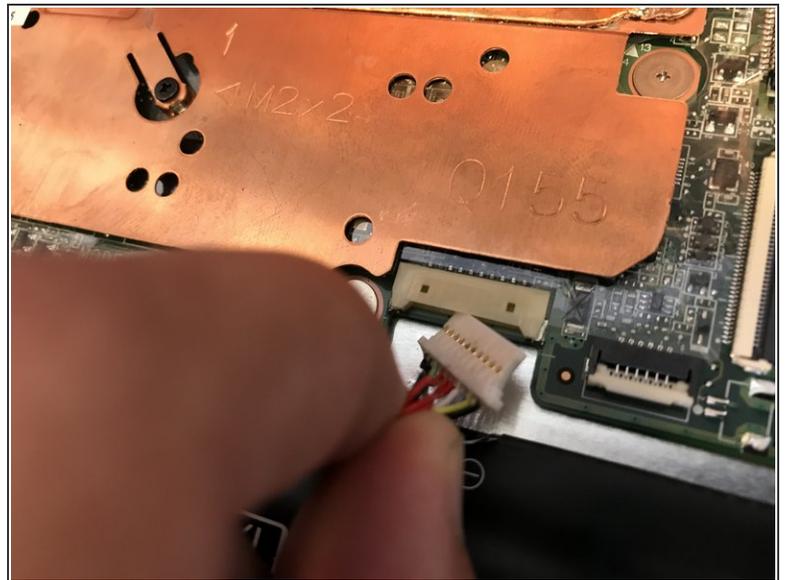

- Remove the eight 5mm Phillips #0 screws from the battery.
- Disconnect the battery from the motherboard.
- Pull the battery up and out of the laptop.

To reassemble your device, follow these instructions in reverse order.