


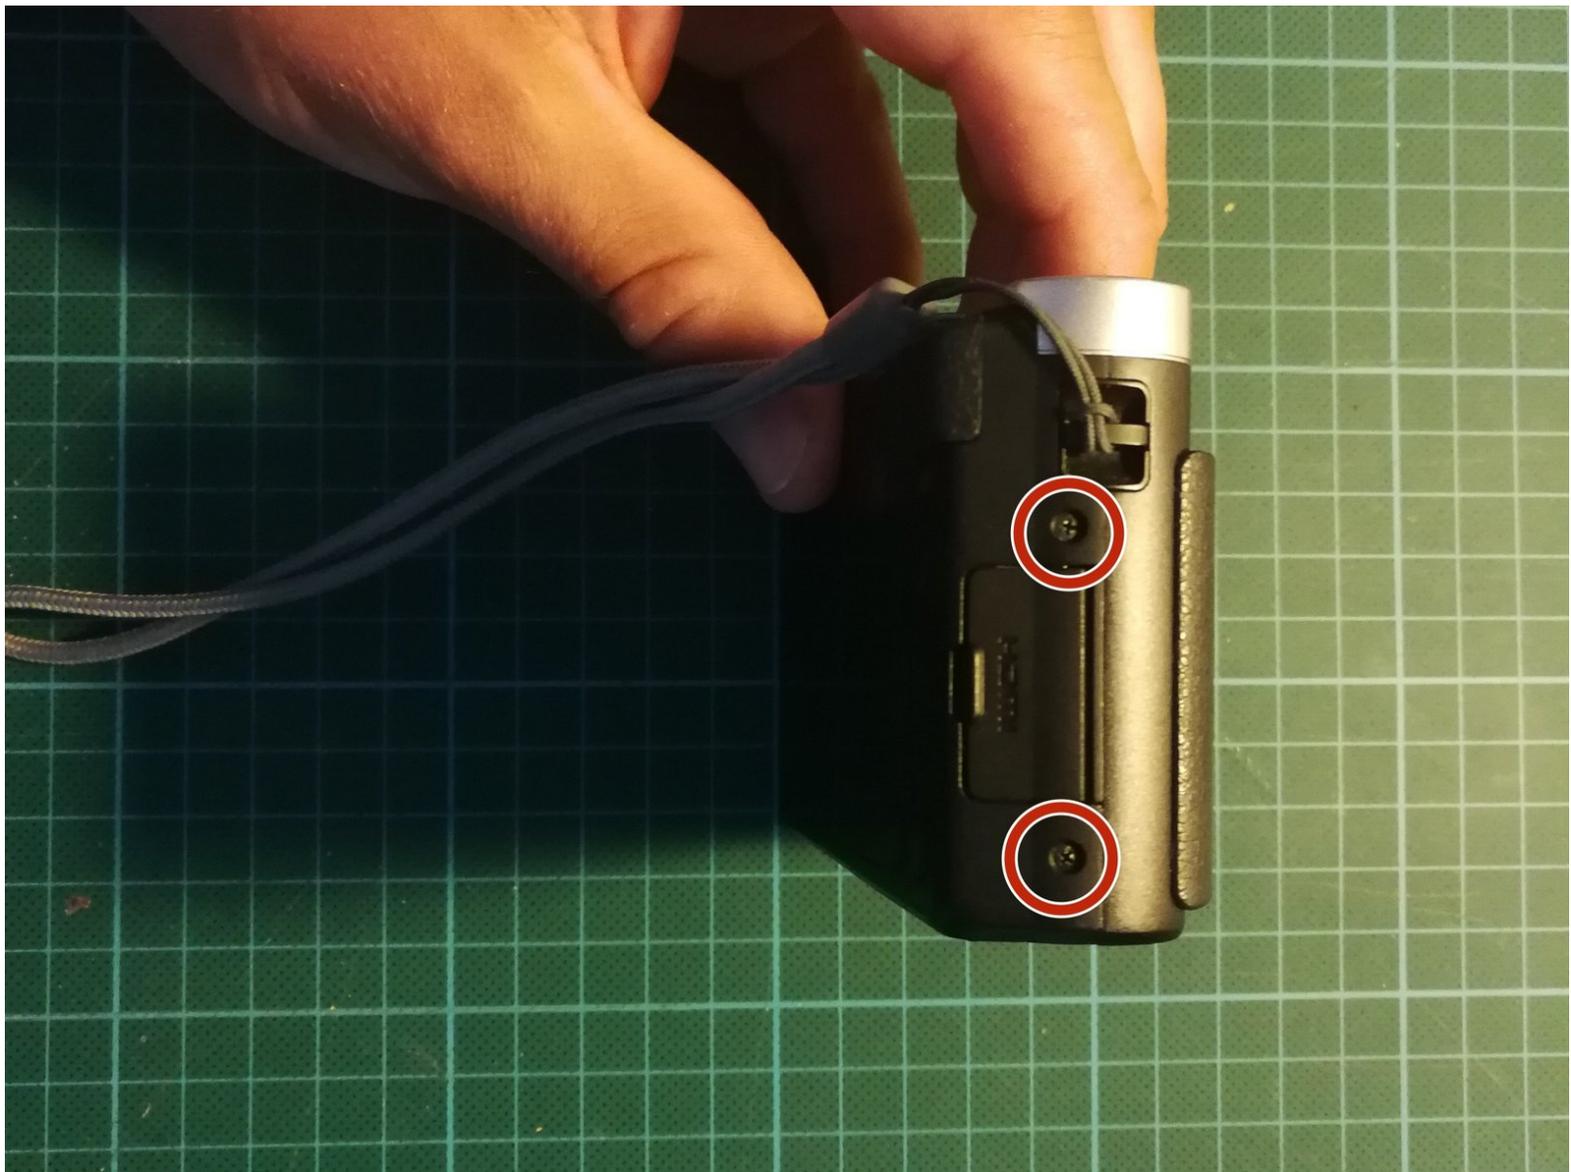

Display Replacement Panasonic Lumix TZ71 (TZ70 or ZS50)

Changing the display of the Panasonic Lumix ZS50 and their versions outside North America TZ70 and TZ71

Written By: Johannes



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)

 **PARTS:**

- [New Item](#) (1)
-

Step 1 — Display



- Open all 7 screws with a fitting philips screwdriver.

Step 2



- The backbody is loose now, remove it carefully and it reveals the controls and the display

Step 3



- Remove the green board with the controls first.
- **DON'T USE FORCE**, it should get loose easily. Don't bend the cables too much.
- Remove the cable from the control board
- Lift the display off, don't bend the cable too much.
- Open the connector of the cable carefully. Don't scratch the board and don't use too much force. Ideally, use a plastic spudger of the ifixit-kit
- The display got removed, not just fit the new display in reversed order.

Follow the steps in reverse order to reassemble.