




Farberware FST0100 Power Supply Replacement

Use this guide to repair the power supply with...

Written By: Tony Wang

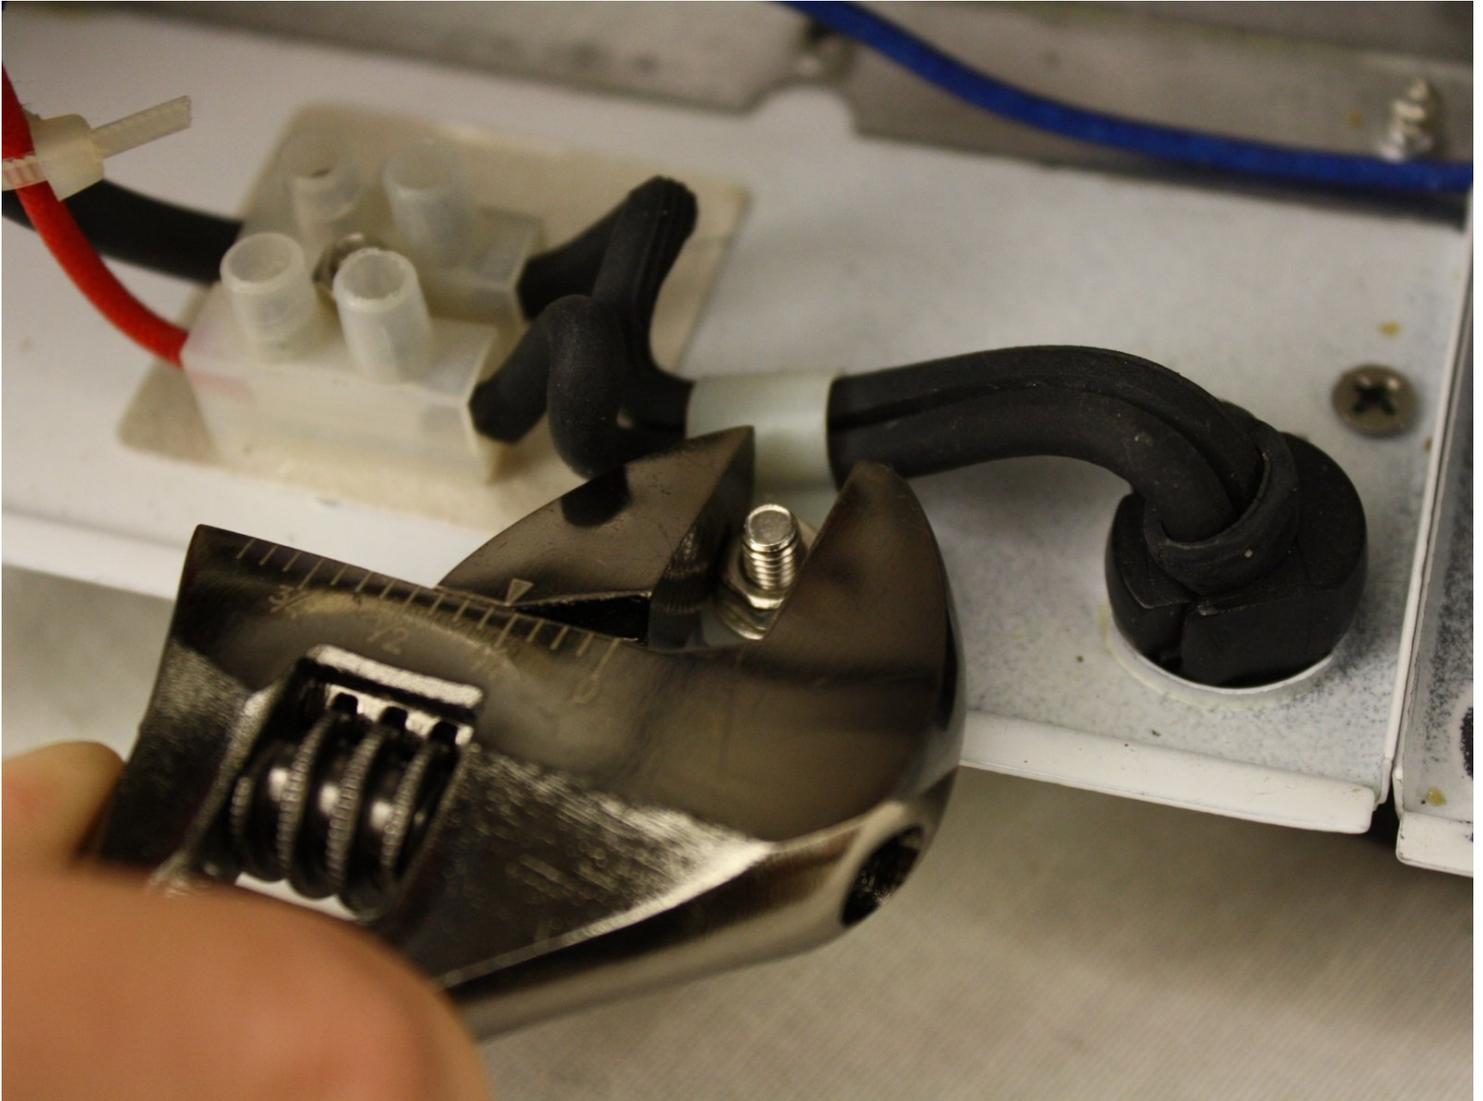

INTRODUCTION

Use this guide to repair the power supply with a Phillips head screwdriver, a wrench, and pliers. These tools will help secure the screw holding the wire.

TOOLS:

9/32" Crescent Wrench (1)

Phillips #0 Screwdriver (1)

Flathead 3/32" or 2.5 mm Screwdriver

(1)


Step 1 — Power Supply



 **Make sure the toaster is unplugged.**


- First, to remove the plastic bracket, turn toaster oven on its side.

Step 2

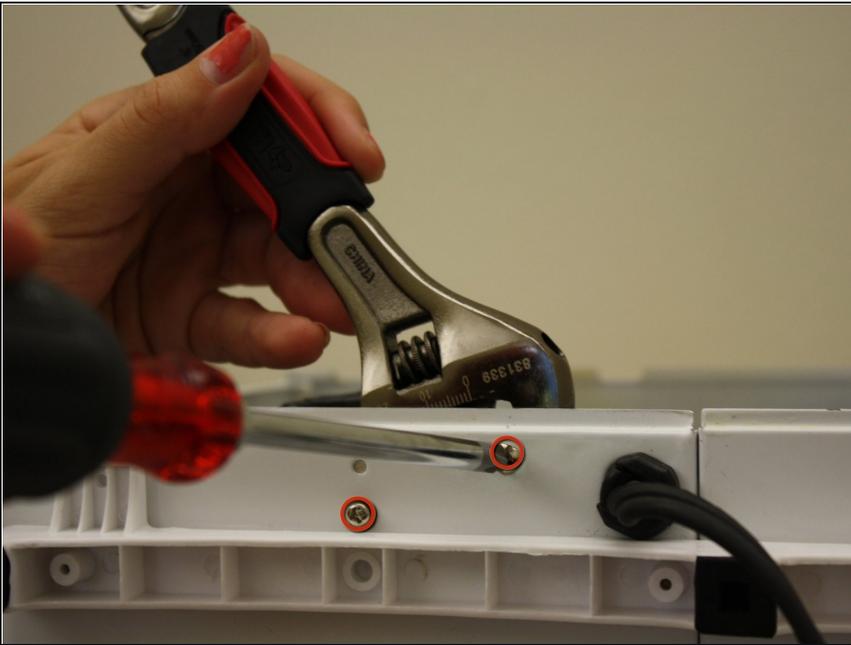


- Use Phillips head screwdriver and wrench to remove screw and nut securing the plastic bracket.

Step 3

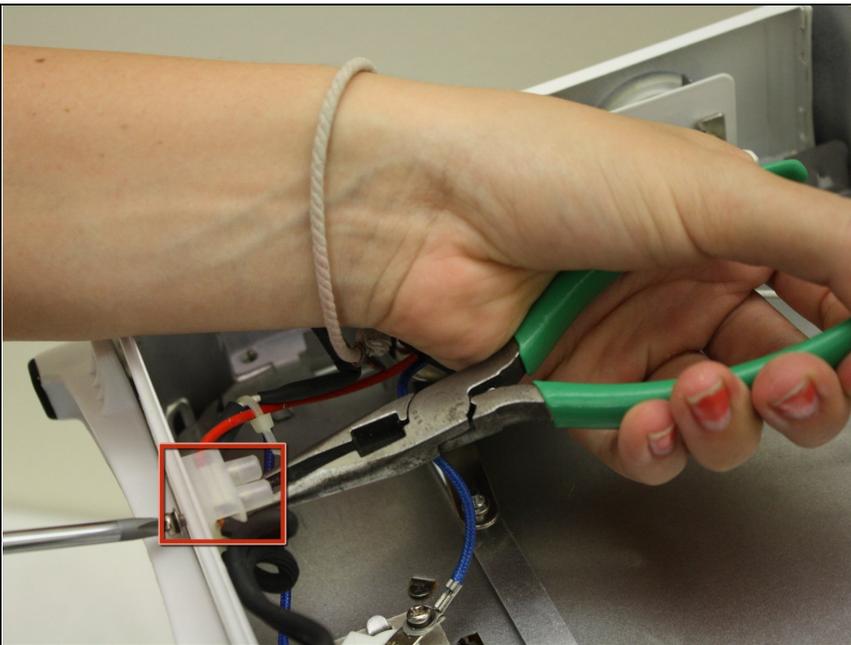

- Use Phillips head screwdriver and pliers to remove screw and nut securing transformer.

Step 4

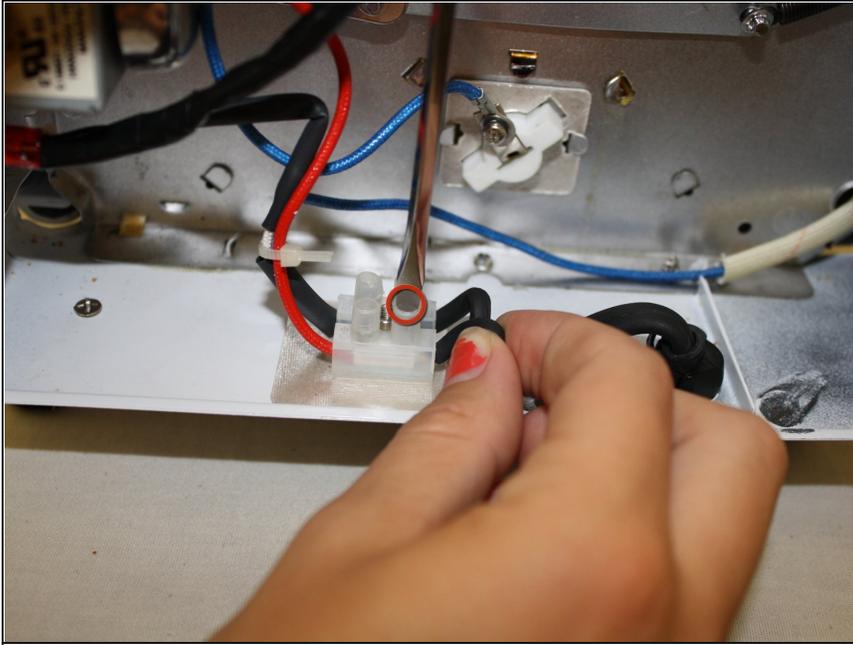

- ⓘ If the wire gets pulled out of the transformer, reinsert it.
- Use a small flathead screwdriver to secure the screw that holds the wire in place.

To reassemble your device, follow these instructions in reverse order.