



Polaroid OneStep 2 Film roller Replacement

Replace the film roller in order to eject your pictures from your Polaroid OneStep 2.

Written By: Abby Boucher



INTRODUCTION

If you need to replace the film roller, access the inside of the camera using this guide. You may need to replace the roller if the pictures are jammed or if the roller is broken. For this guide you will not need to do any difficult steps, but you will need tweezers.



TOOLS:

- [Tweezers](#) (1)
-

Step 1 — Film roller



- Pull the hinge button over to open the camera.

Step 2



- Remove the left and right springs with a pair of tweezers.

Step 3



- Lift out the top roller. The gold and black pieces will remain attached to the roller.

To reassemble your device, follow these instructions in reverse order.