




# DigiTech RP70 Amp/Mixer Switch Replacement

This is the guide to replace any of the three input/output jacks on the RP70.

Written By: Elijah Smith

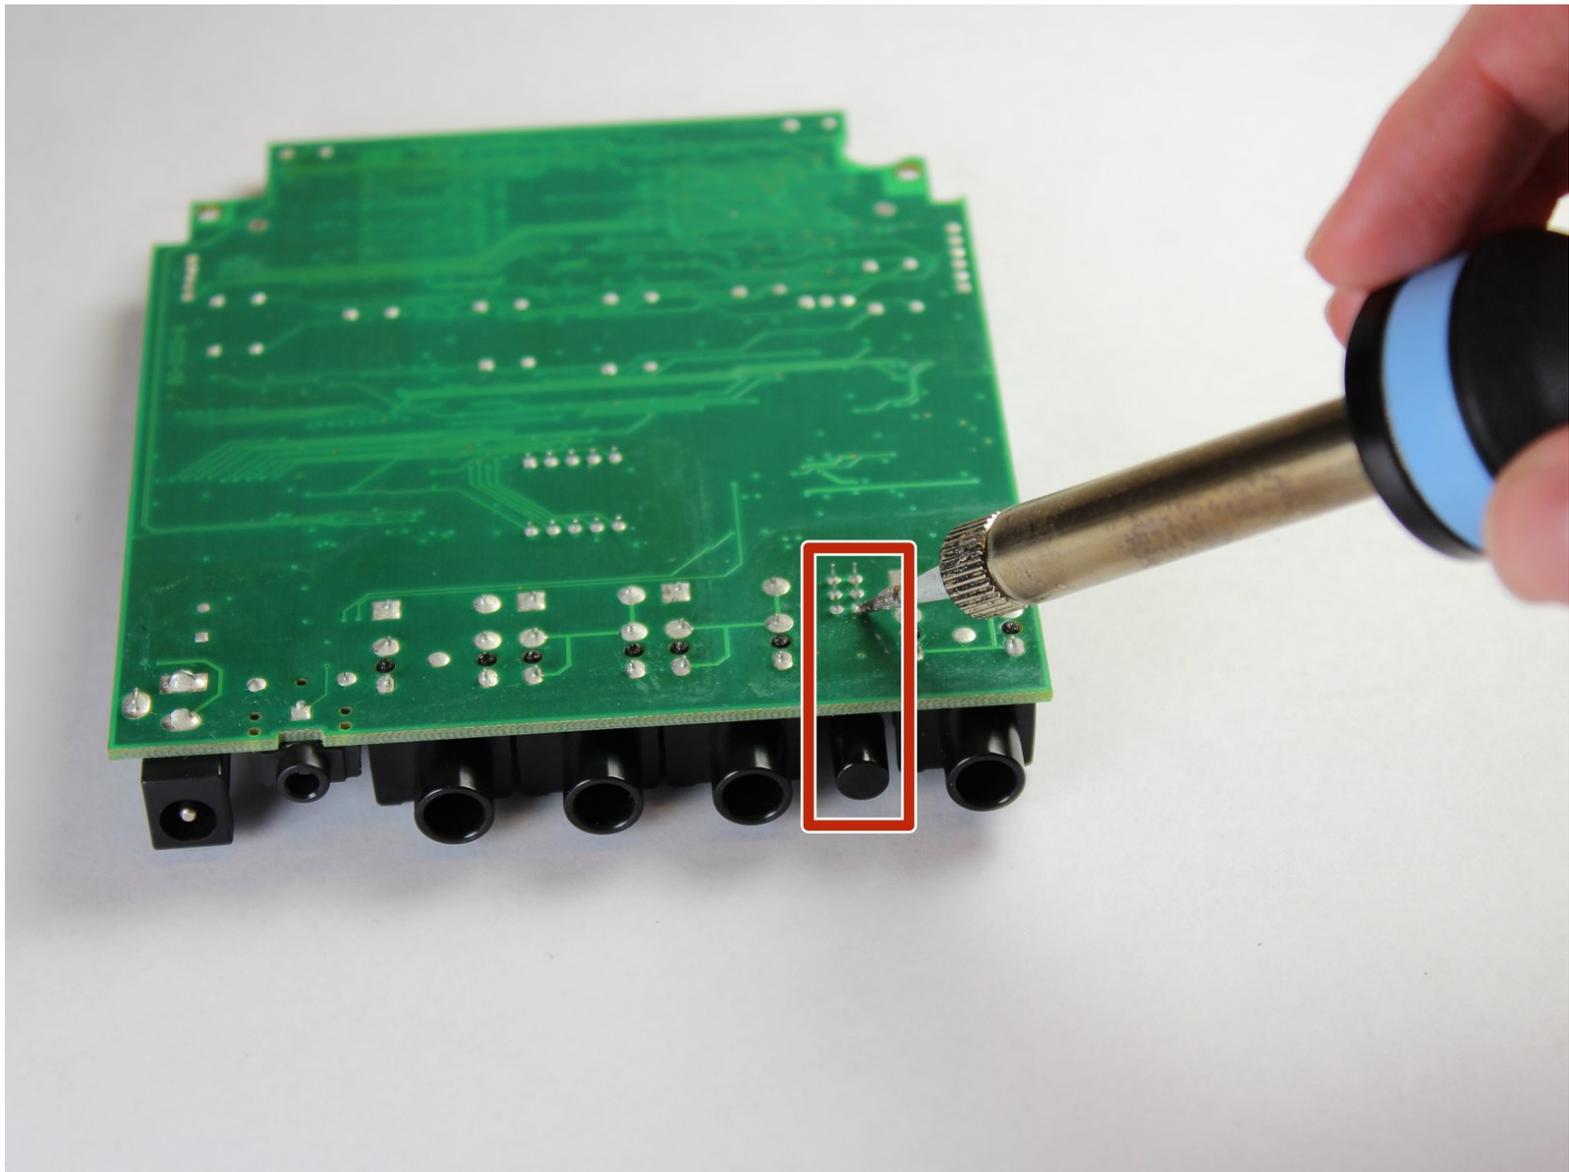

---

## INTRODUCTION

If the amp/mixer switch is broken this guide will teach you how to remove the broken component for replacement.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Motherboard



**⚠** Unplug the device from its AC power adapter; unplug anything connected to the input/output jacks.


- Remove the four 8mm Phillips #0 screws located on the back panel.

## Step 2



- Remove the back panel to expose the motherboard.

### Step 3

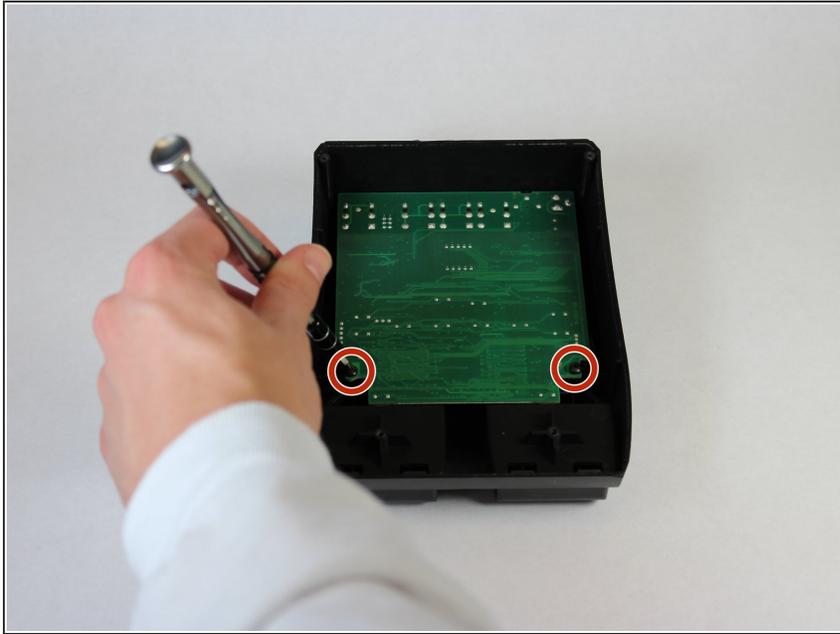


- Remove the two 11mm #0 Phillips screws located at the bottom of the motherboard.

## Step 4



- Lift the indented end of the motherboard opposite the input/output jacks. Then, pull away from the input/output jacks to slide the motherboard out of the casing.

## Step 5 — Amp/Mixer Switch

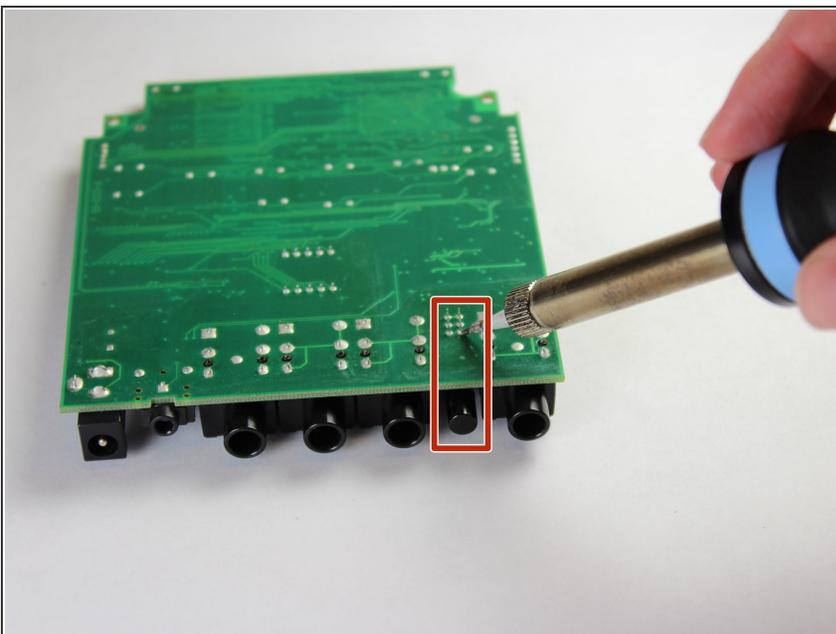

- [Desolder](#) the back of the motherboard where you want to replace the switch.

To reassemble your device, follow these instructions in reverse order.