




Acer Aspire R7-572-6423 Speakers Replacement

This guide will cover removing and replacing the speakers in the Acer Aspire R7-572-6423.

Written By: Evan Casey

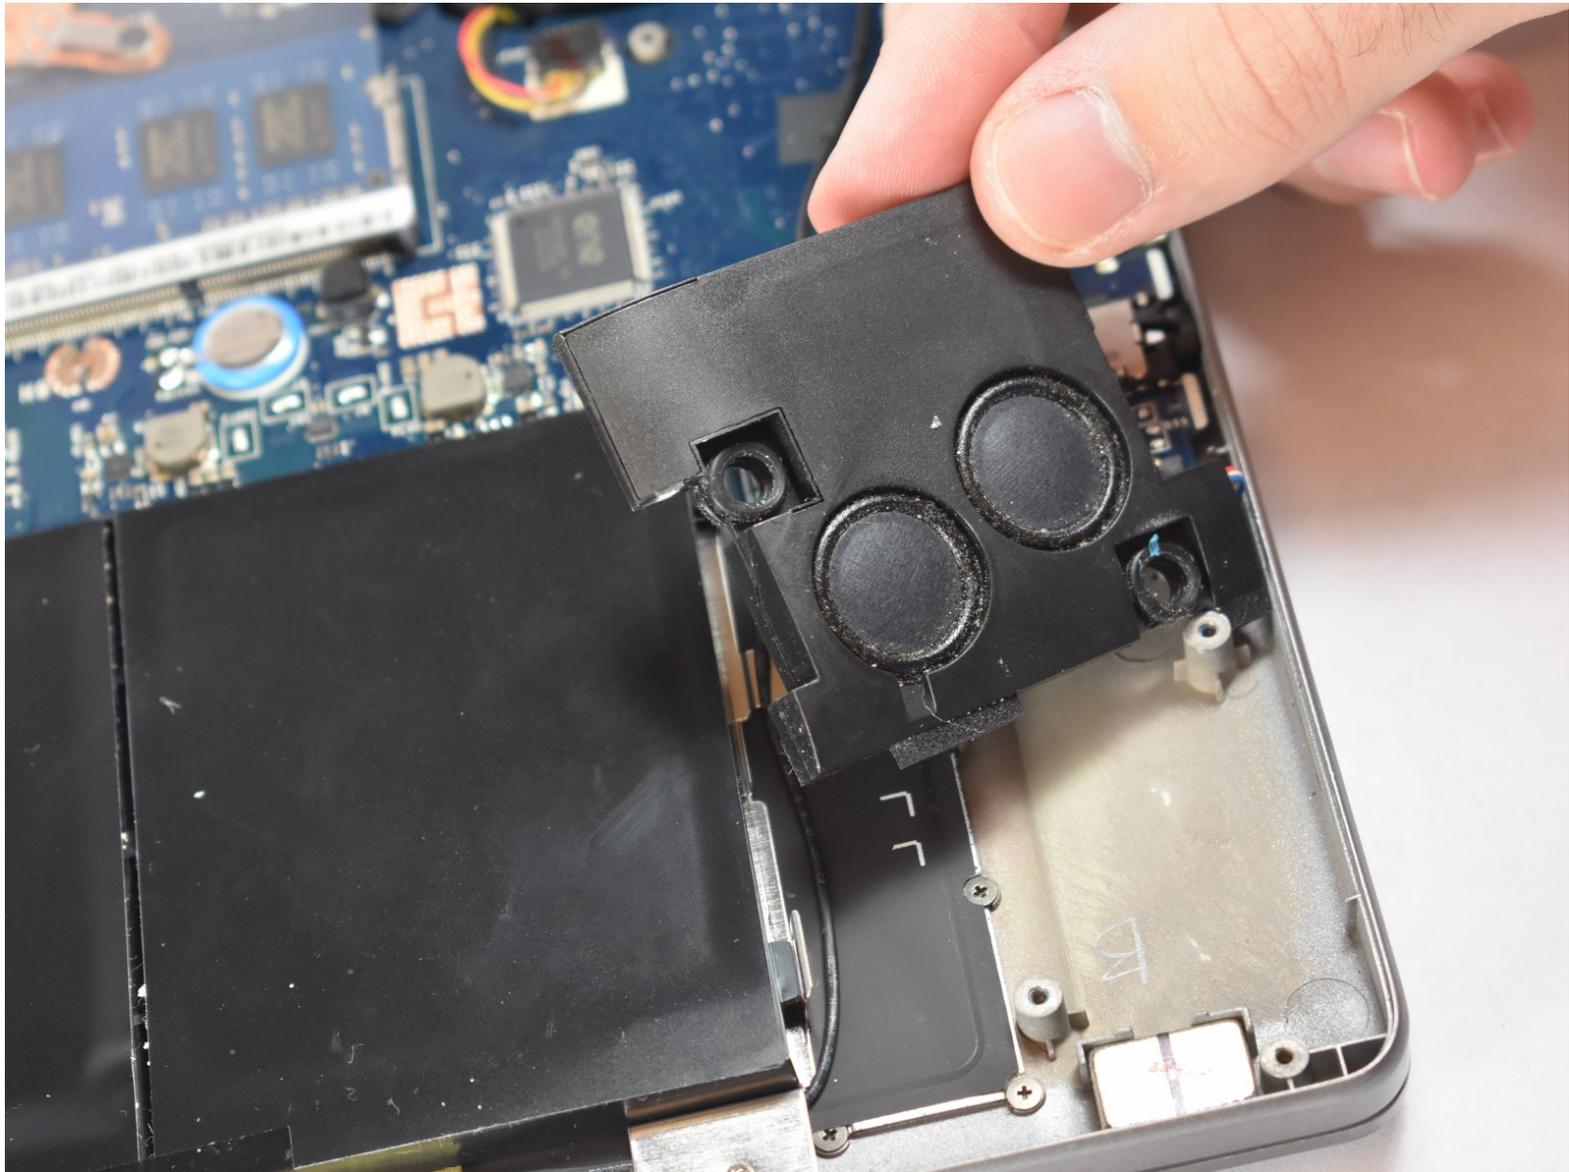

INTRODUCTION

Speakers are a common point of failure for the Acer Aspire R7. If your audio sounds distorted, tinny, or isn't playing at all, consider replacing your speakers following this guide. Be very careful not to damage the speaker cable connections when disassembling the device.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [T9 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speakers



 Turn off the laptop and disconnect the power adapter before attempting this guide. Failure to do so can result in a shock hazard.

Step 2





- Remove the top and middle grips that conceal 3 additional screws.
- Remove the (8) 10mm T9 screws.
- Remove the (5) 6mm T9 screws.

Step 3




- Remove back panel.

Step 4

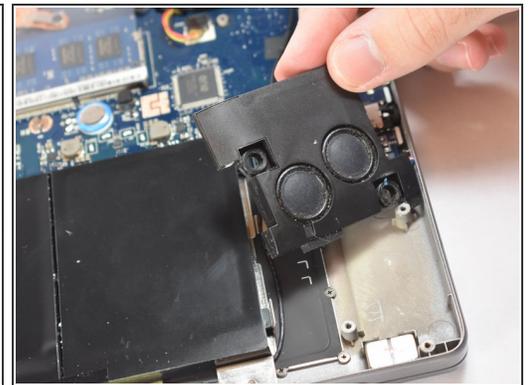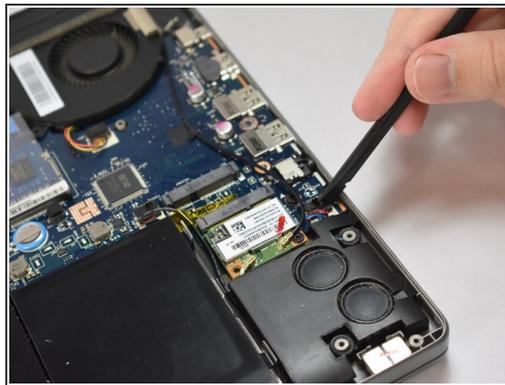

- Unscrew the (2) 3mm Philips #0 wide head screws.
- Carefully disconnect the speaker connection.
- Remove the speaker.

Step 5

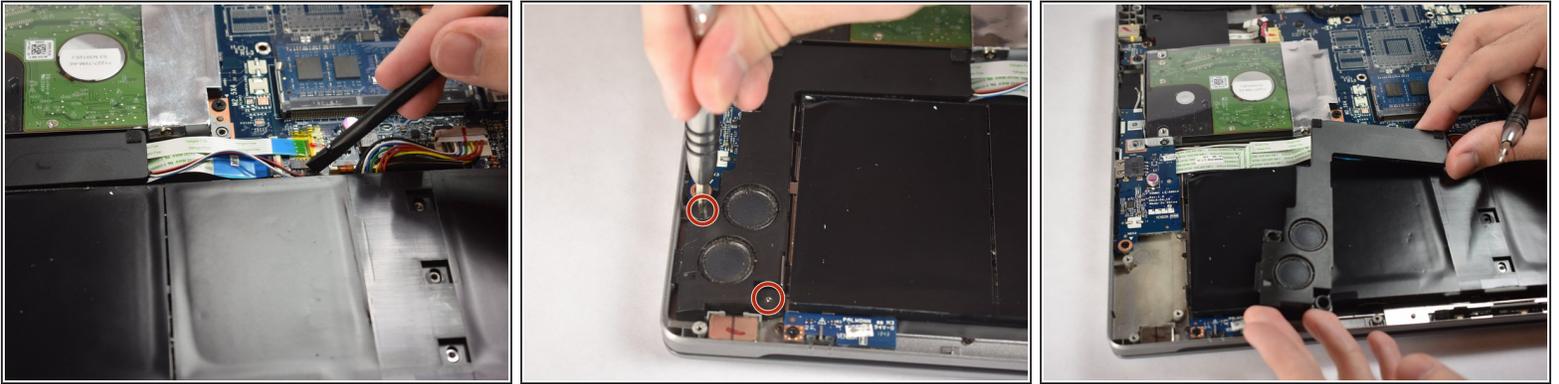

- Disconnect the speaker from the main board.
- Unscrew the (2) 3mm Philips #0 wide head screws.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.