



Asus Q550LF-BBI7T07 Battery Replacement

If your battery does not hold a charge or is...

Written By: Mildred Fregoso



INTRODUCTION

If your battery does not hold a charge or is having issues with battery life, it may need to be replaced. In this guide, we will show you how to replace the battery.

TOOLS:

T4 Torx Screwdriver (1)

Phillips #0 Screwdriver (1)

iFixit Opening Tool (1)

Step 1 — Battery





- Use a T4 Torx screwdriver head to remove the ten 4mm Torx head screws on the bottom of the laptop.

Step 2




- Use an opening tool to pry open the rear cover. Lift the cover off and away from the board.

Step 3

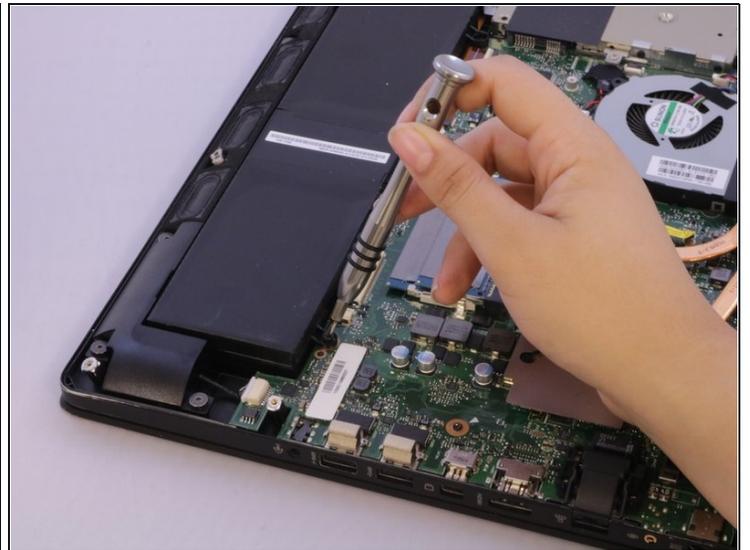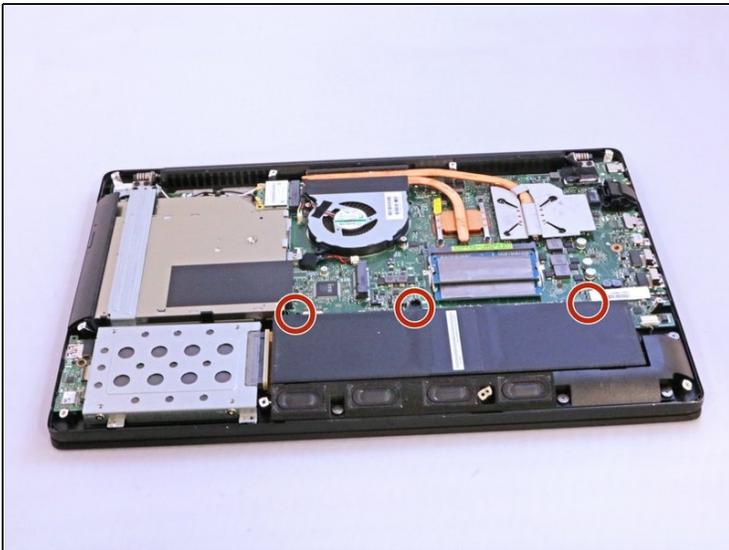

- Use a Phillips #0 screwdriver head to remove the three black 7mm Phillips head screws that hold the battery in place.

Step 4

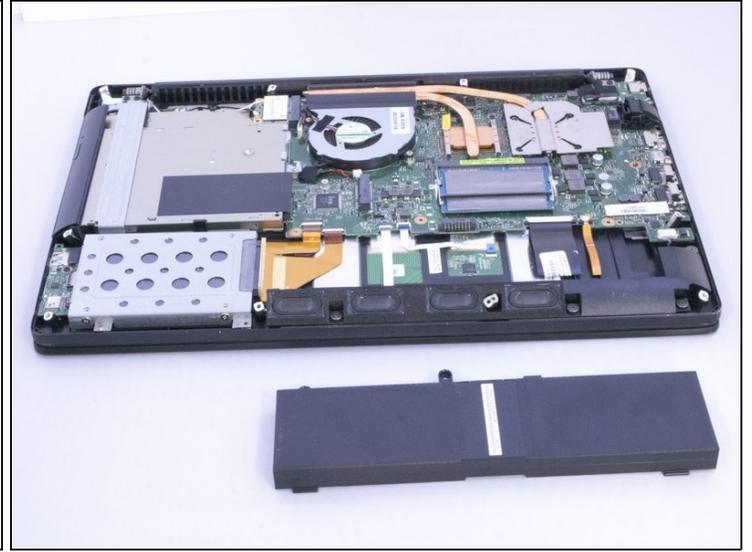

- Once the screws have been removed, gently lift the battery out.

To reassemble your device, follow these instructions in reverse order.