




# HP Color LaserJet Pro MFP M277dw Power Button Replacement

How do I replace the power button on an HP Color LaserJet Pro MFP M277dw

Written By: Christopher Fahey

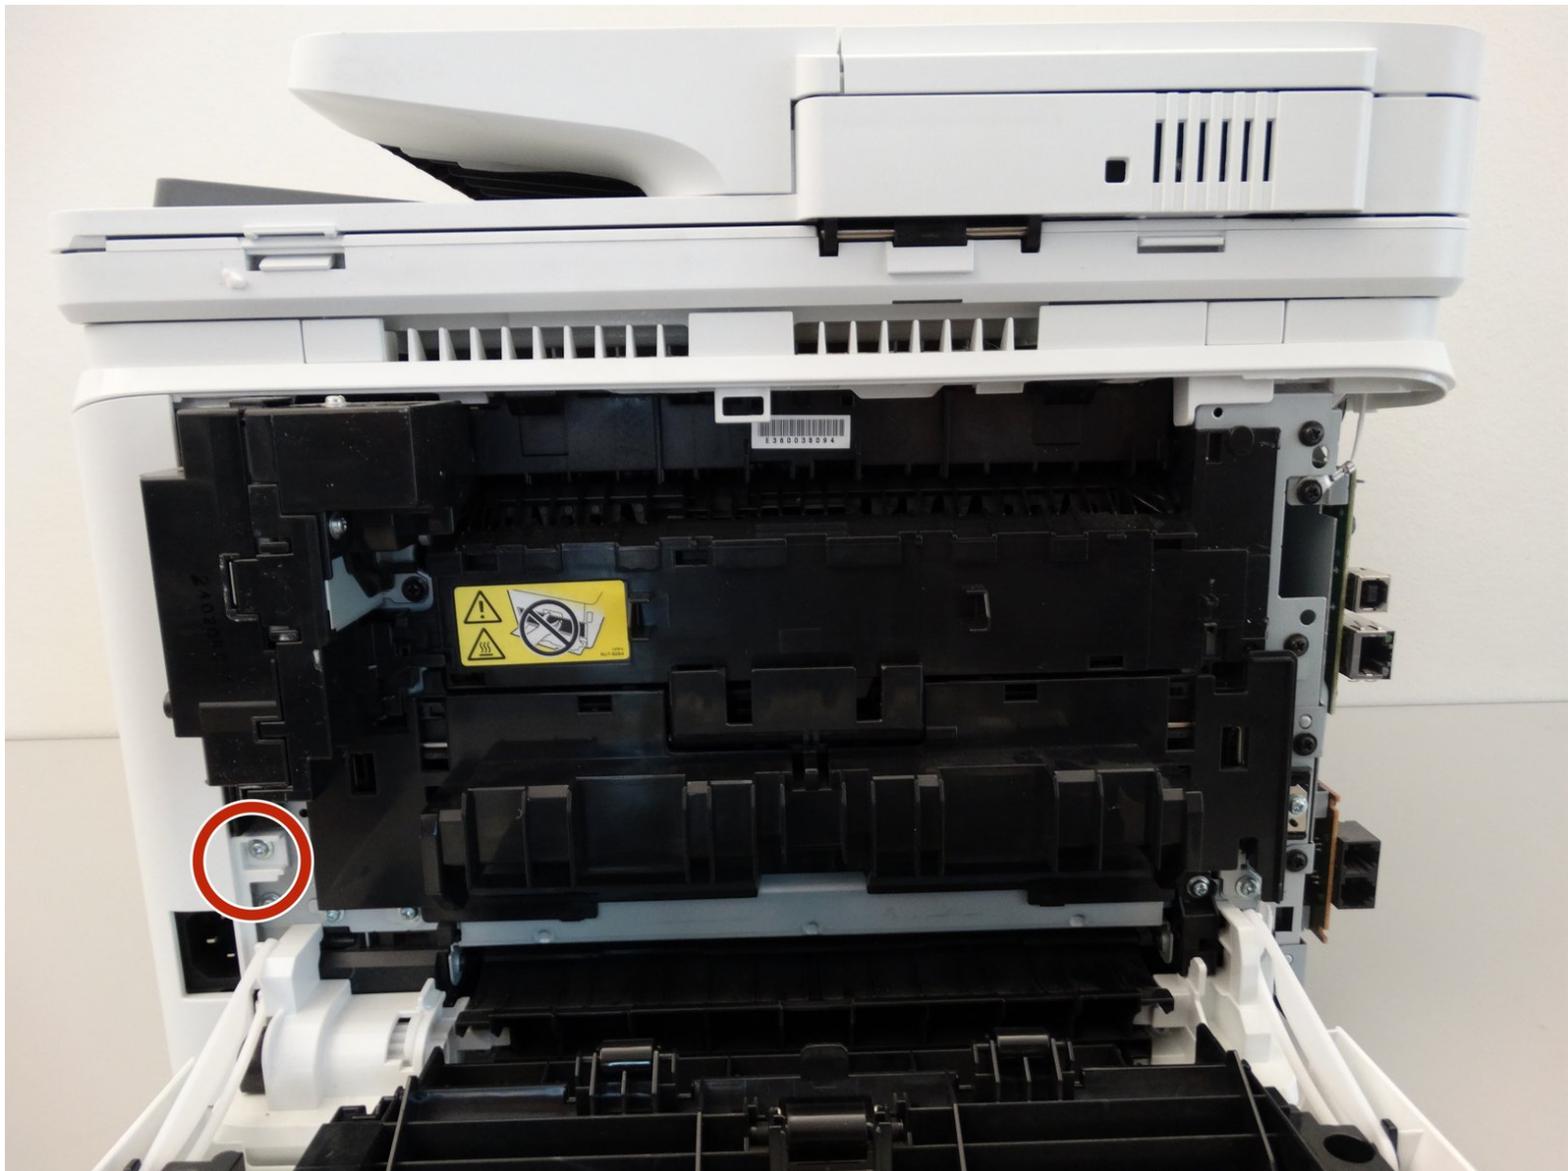

---

## INTRODUCTION


This is a replacement guide for the power button on the HP Color LaserJet Pro MFP M277dw. You will need plastic opening tools as well as a Phillips #2 screwdriver.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Power Button

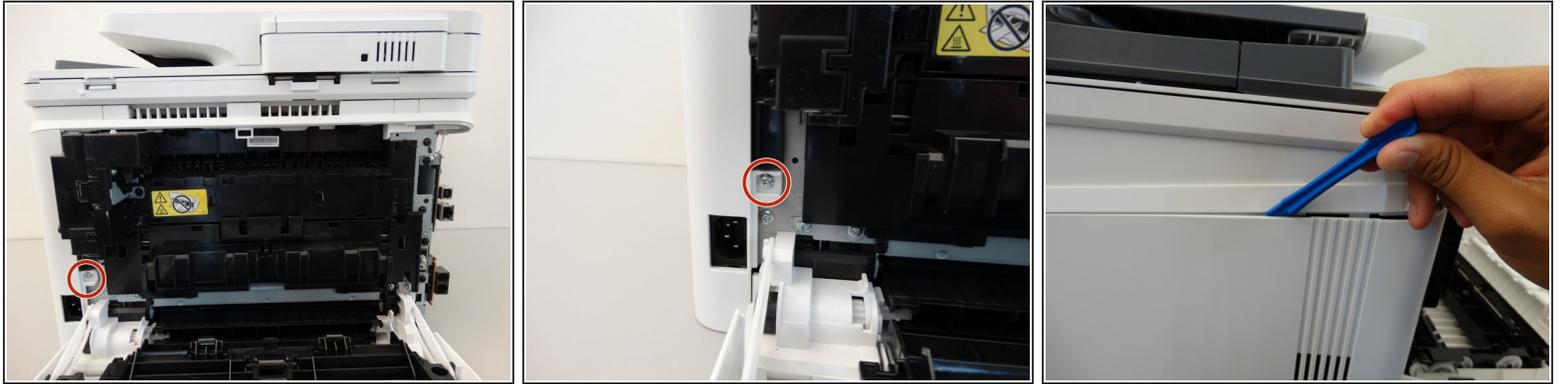

- Lower the back panel by pulling it down.
  - Remove one Phillips #2 10mm screw.
  - Use the plastic opening tool to remove right side panel by prying it off.
- i** Flipping the printer onto its side makes it easier to remove the side panel.

## Step 2



- Lower the front panel by pulling it down from the upright position.
- i** The button cover should come off with the panel, if it does not be sure to remove it.

### Step 3



- Remove two Phillips #2 8mm screws.
- Unplug the wire connecting the power button to the circuit board by gently pulling them apart.

To reassemble your device, follow these instructions in reverse order.