




# Dell Inspiron 17 5765 Battery Replacement

Written By: darrius

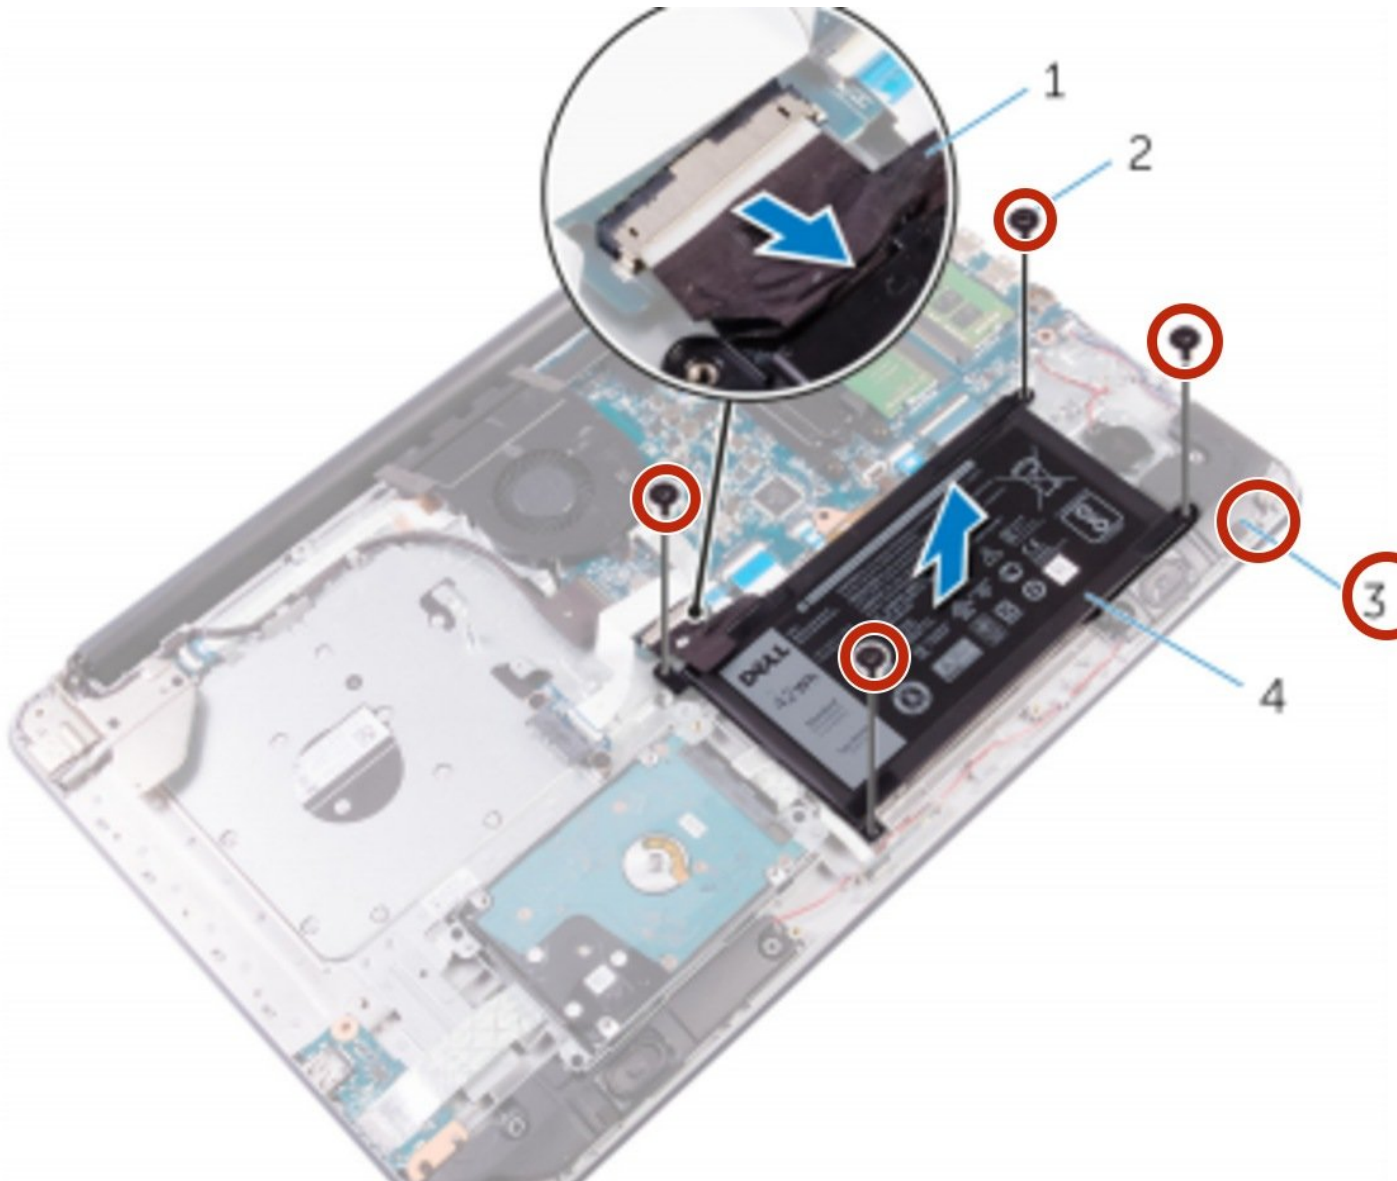

---

# INTRODUCTION


How to remove and replace the battery.



## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Removing screws

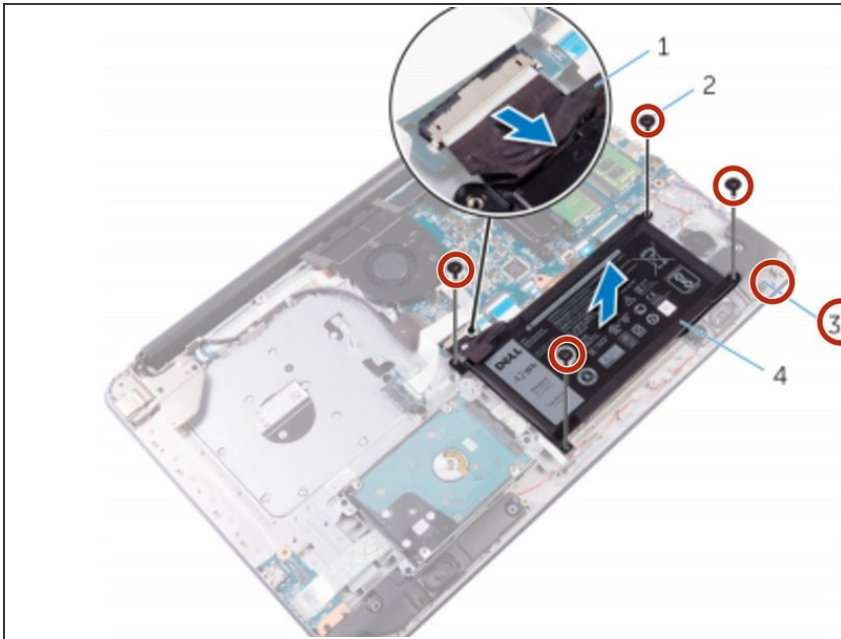


- Remove the screws that secure the battery to the palm rest and keyboard assembly.

## Step 2 — Removing the cable




- Disconnect the battery cable from the system board.

### Step 3 — Lifting the battery

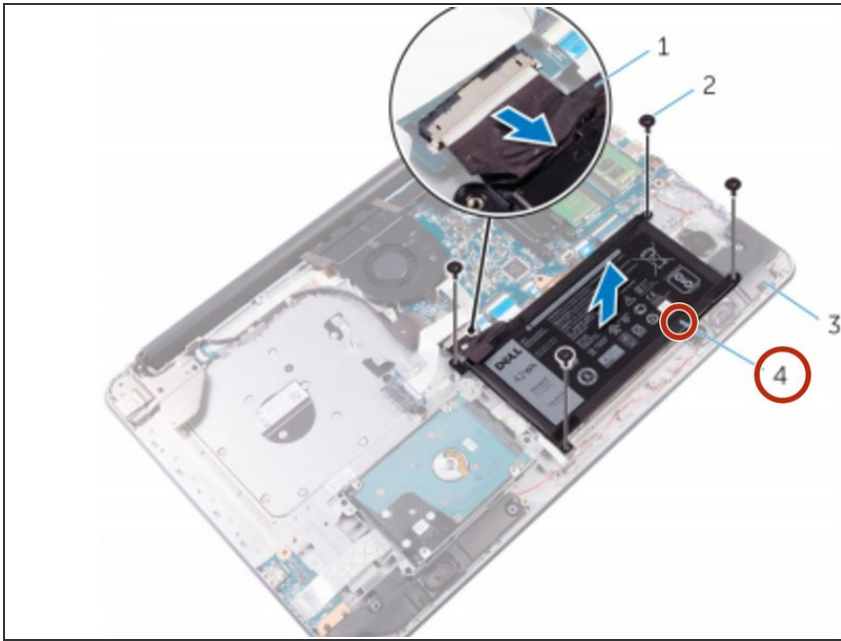


- Lift the battery off the palm rest and keyboard assembly.

### Step 4 — Replacing the battery

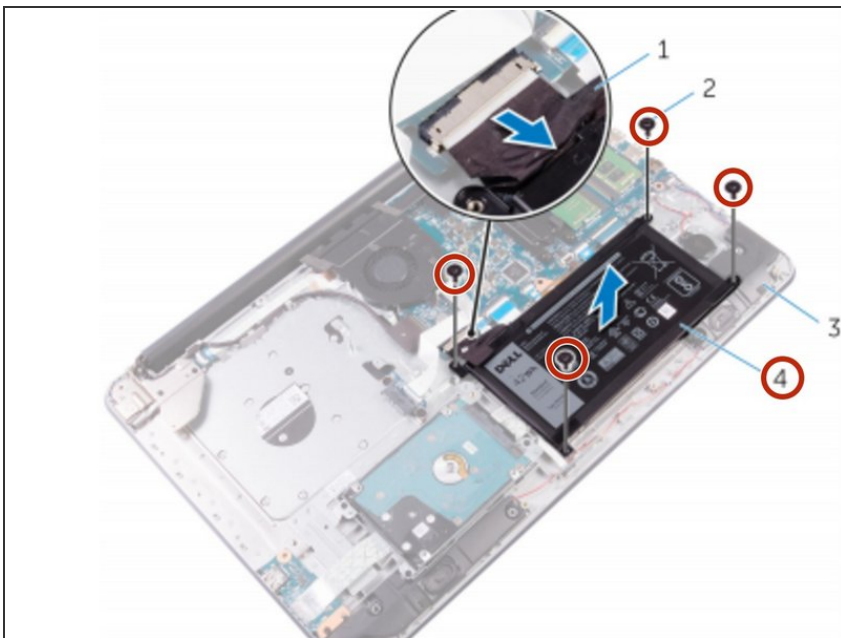


- Align the screw holes on the battery with the screw holes on the palm rest and keyboard assembly

## Step 5 — Secure the screws

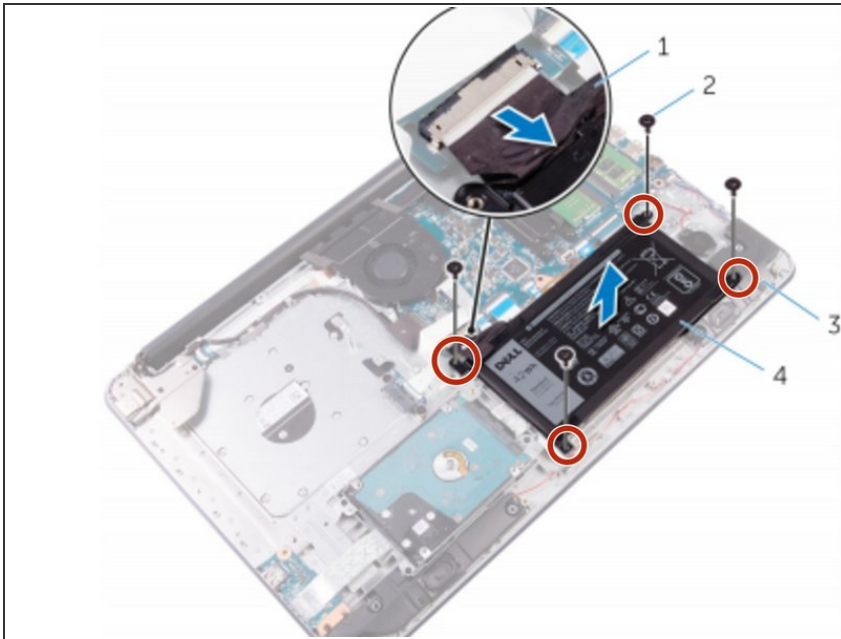

- Replace the screws that secure the battery to the palm rest and keyboard assembly.

## Step 6 — Connecting the cable

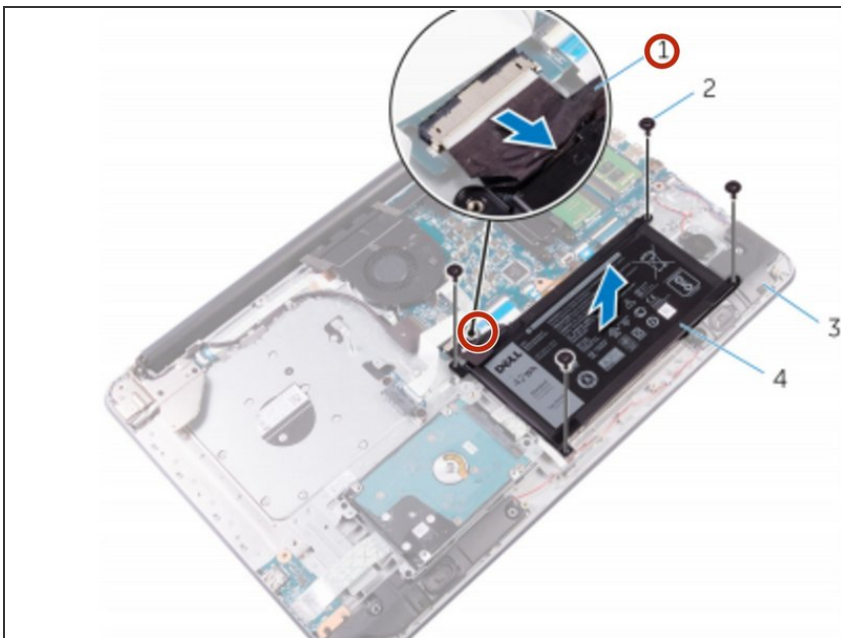

- Connect the battery cable to the system board.

To reassemble your device, follow these instructions in reverse order.