



Alienware M17-R1 Battery Replacement

How to replace a Alienware M17-R1 battery.

Written By: William Davis



INTRODUCTION

The battery is essential for your laptop to function properly. It is the gateway to powering the device on and off. Make sure any replacement battery you have matches the original and your laptop.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Push the slider until the battery is released from its socket.

Step 2



- Lift the battery using your fingers.
- ① It may be necessary to use a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.