


Lenovo Yoga 710-14IKB Headphone Jack Replacement

In this guide we will remove the headphone jack from a Lenovo Yoga 710-14KB.

Written By: Evan Cruzen

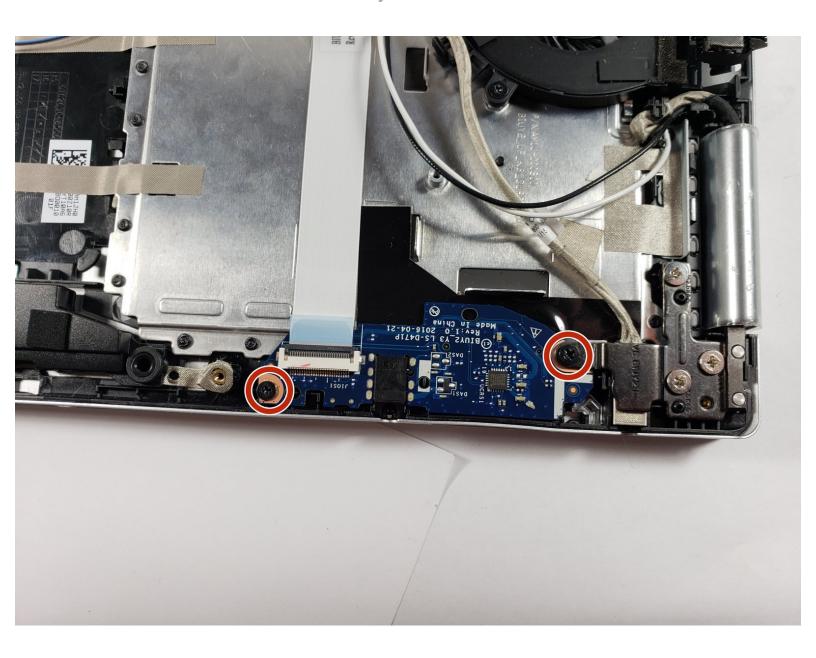

INTRODUCTION

This simple guide will show you how to remove the headphone jack circuitboard (which also has the SD card attached) from the Lenovo Yoga 710-14KB.



TOOLS:

- T4 Torx Screwdriver (1)
- iFixit Opening Tool (1)
- Phillips #00 Screwdriver (1)



PARTS:

Lenovo IdeaPad Yoga 710-14 I/O Board
(1)

Step 1 — Back Cover



- ♠ Ensure your device is completely OFF before starting this guide.
 - Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.
- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.
- When, reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2







- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.
- The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

Step 3 — Battery





- Use a Phillips #00 screwdriver to remove the four 3 mm screws holding the battery in place.
- (i) Be careful not to cross-thread the screws. Also, don't let the screws fall down into the laptop case.

Step 4






• Use your fingers or an opening tool to slide the battery connector out of its motherboard socket.

Step 5




Remove the battery.

Step 6 — Headphone Jack

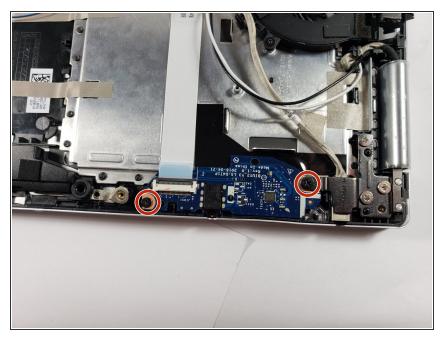


- Remove the two 3mm screws from the headphone jack using a PH00 screwdriver.
- Make sure not to strip the screws as they can sometimes be hard to remove.

Step 7

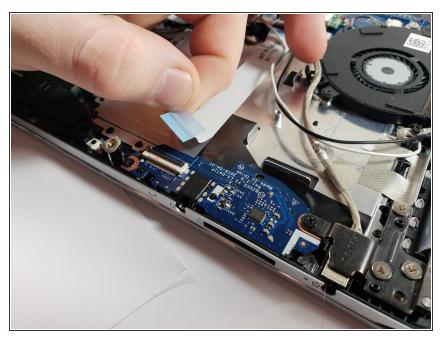

- Pop the black bar on the tip of the wire connected to the headphone jack circuitboard.
- Disconnect the wire.
- A Be careful not to pull or yank the cable.

Step 8

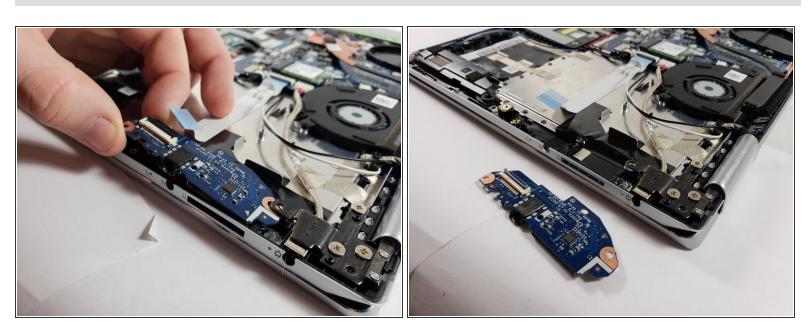

Remove the headphone jack circuitboard.

To reassemble your device, follow these instructions in reverse order.