




DJI Phantom 4 Advanced Remote Controller

Back Buttons Replacement

In this guide, it'll demonstrate how to dismantle and replace 2 back buttons.

Written By: Angel Cortez

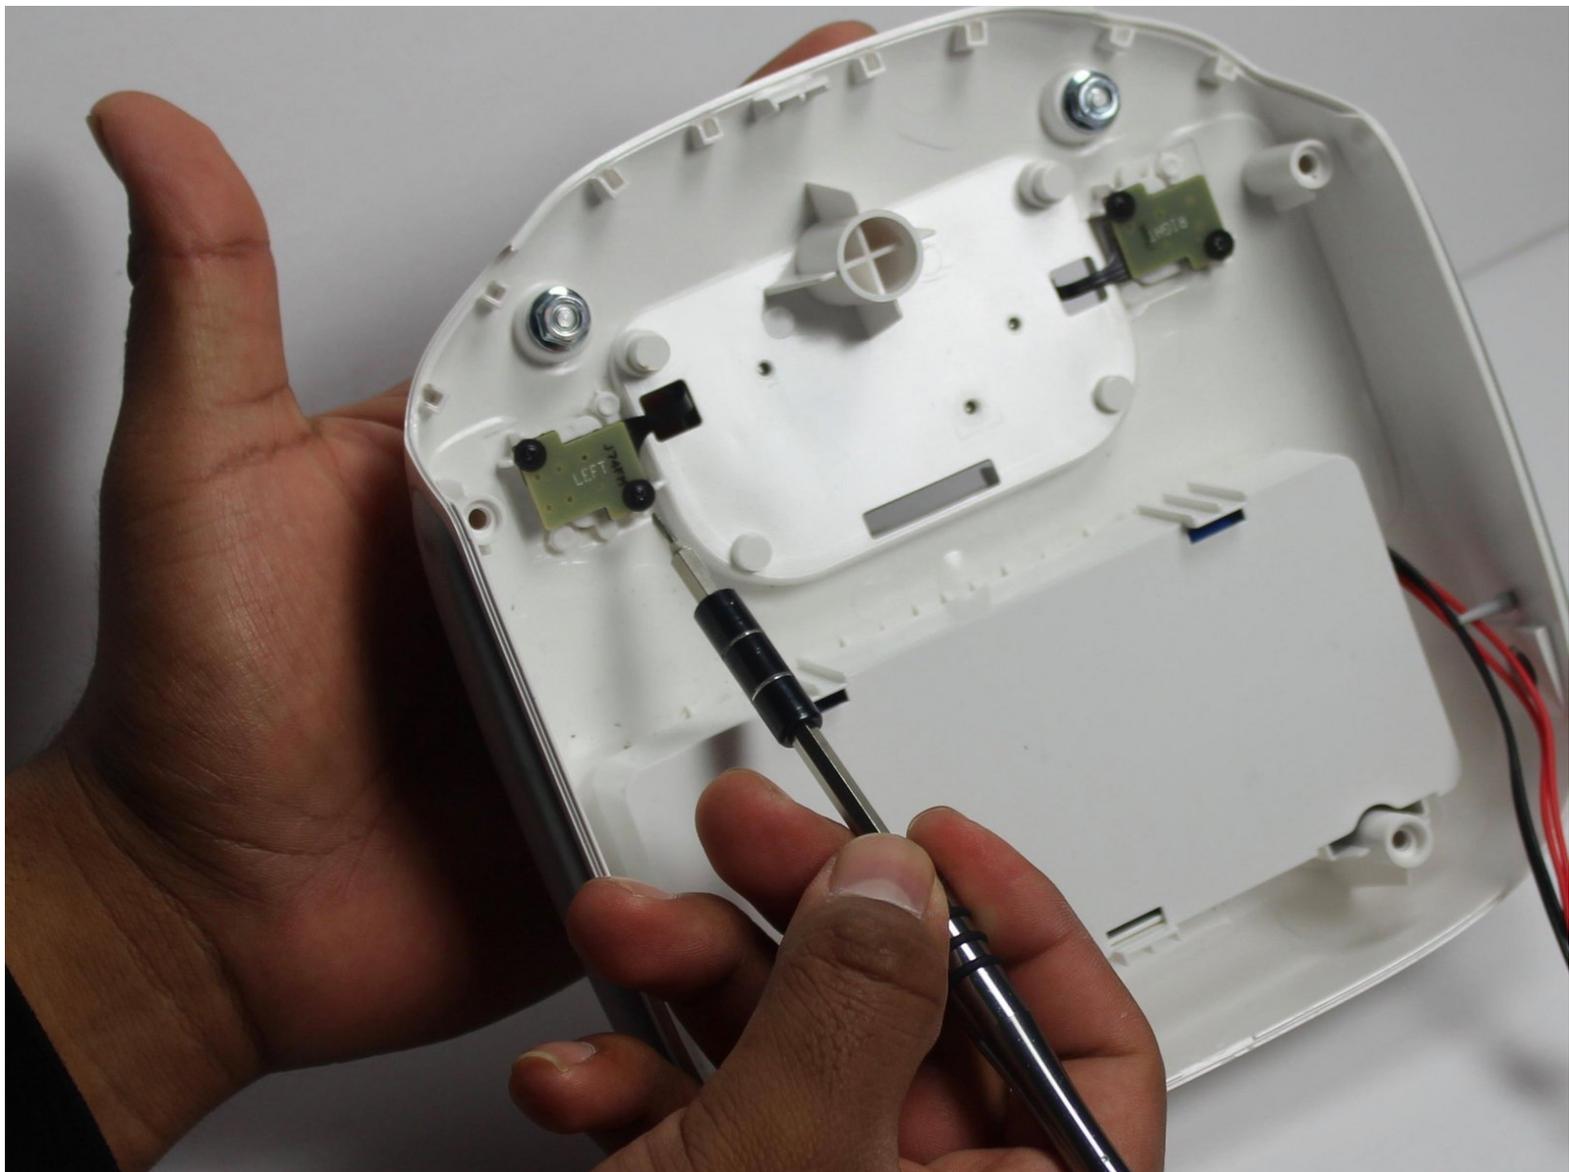

 **TOOLS:**


- [Spudger](#) (1)
 - [T8 Torx Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel



- Remove the four screws with a Torx T8 screwdriver to access the back con board.

Step 2

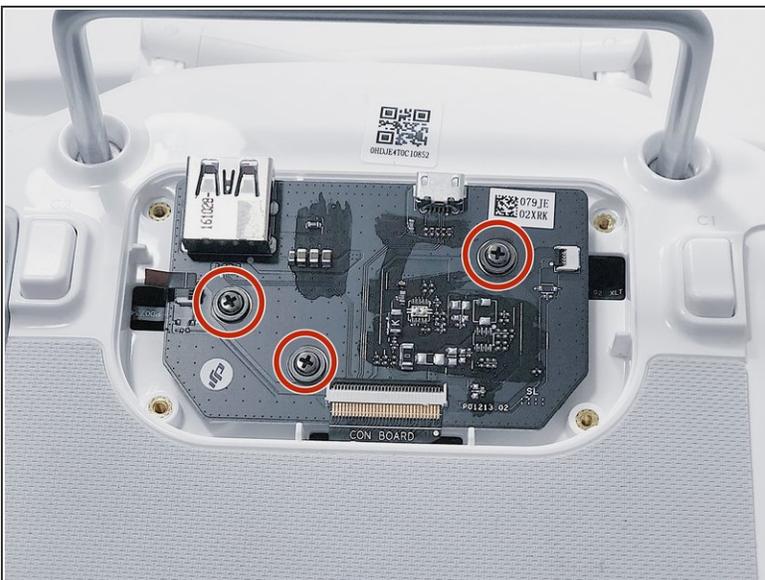


Phillips #00 screwdriver.



- Remove three screws using a Phillips #00 screwdriver.

Step 3

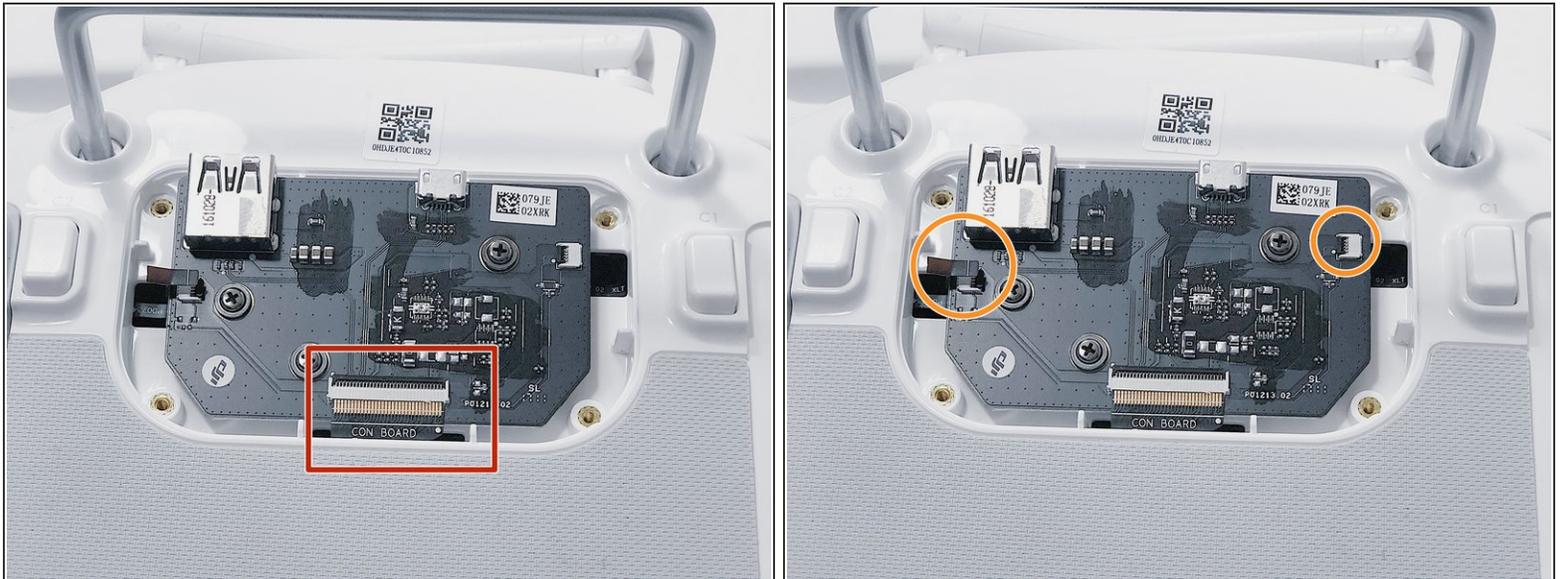

- With tweezers, gently remove the large con board tab.
- Use your hands to remove the two small clips. Pull out from the socket, in a horizontal direction.

Step 4




- Peel off the rubber grips to access the screw holes.

⚠ Make sure to save your grips and do not to get them stuck to anything, you are going to want to save the adhesive.



- Remove the back board and set it aside.

Step 5

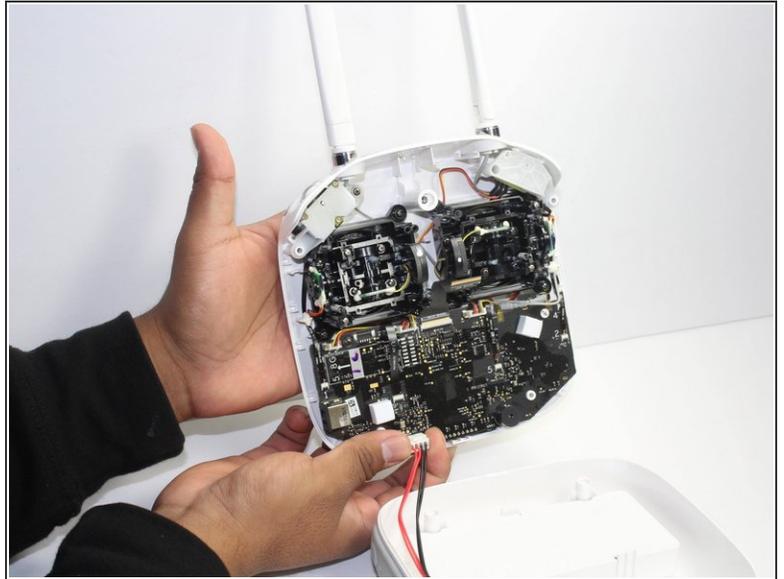

- Pull apart the back plastic panel.
- ⓘ Recommended tool for this would be the metal spudger, but not required.
- Once the back panel is off, you will have access to the motherboard.

Step 6 — Back Buttons

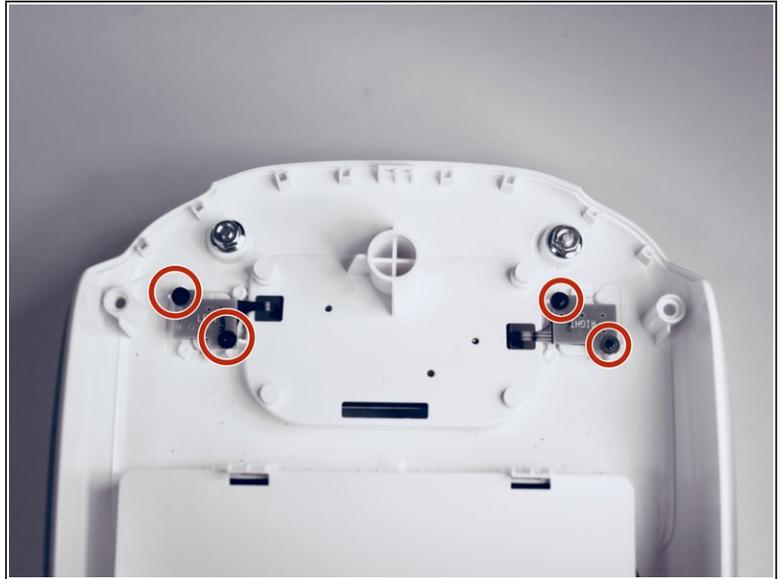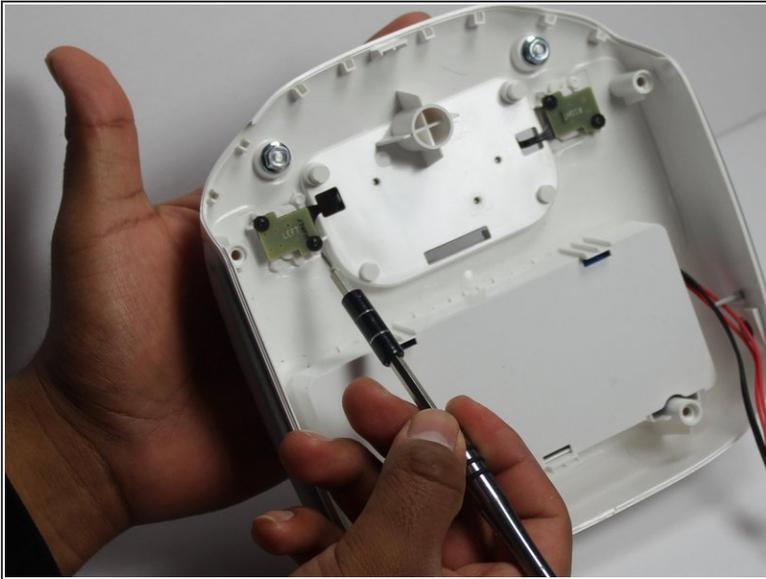

- Using a Phillips #00 screwdriver, remove the four screws on the inside of the panel. That will allow you to remove the buttons by gently lifting them with your hands.

Step 7



- Remove back buttons and replace with new ones.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-07-30 09:07:17 PM (MST).

