



# Dell Latitude E6520 CD/DVD Drive Replacement

This guide walks through the steps required to replace the CD/DVD drive in the Dell Latitude E6520.


Written By: Alec Weiss



## INTRODUCTION

The CD-ROM (compact disk-read only memory) is used to retrieve from and store data to portable disks.

## Step 1 — CD/DVD Drive

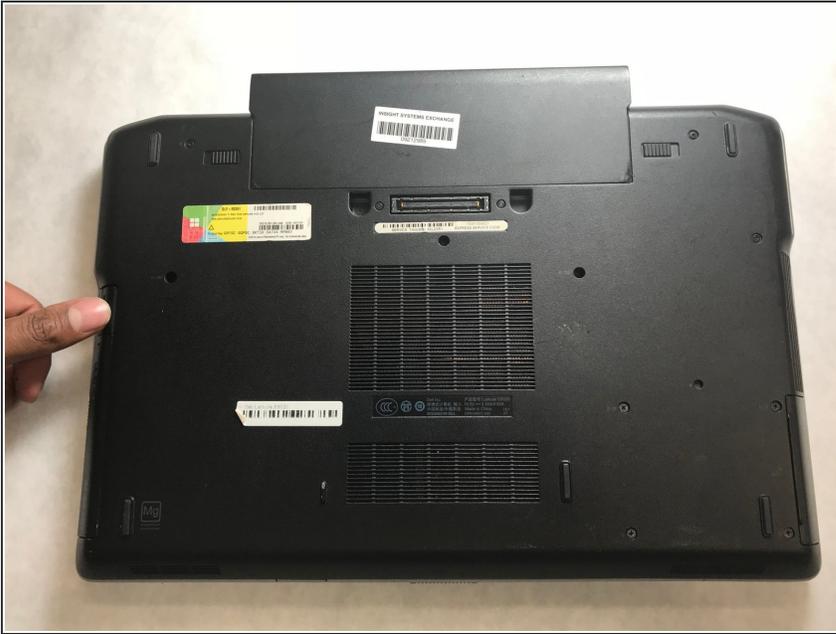

- Press open the spring-loaded release tab on the disk drive.

## Step 2



- Grab the spring-loaded tab and pull the drive out from the device.

To reassemble your device, follow these instructions in reverse order.