



# Asus K55N-DS81 RAM Replacement

This guide demonstrates how to remove and replace the RAM of the Asus K55N-DS81.

Written By: Elliott Beckner



---

## INTRODUCTION

If you wish to replace or upgrade the RAM inside your ASUS K55N, this is the guide for you.

---

### TOOLS:

- [JIS #00 Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the laptop over, such that the bottom of the laptop is facing upwards.
- ⚠ Ensure that the laptop is powered off prior to following this guide.

## Step 2




- Pull the latch to the right of the battery to the right.

### Step 3



- Pull the latch to the left of the battery to the left. Hold the latch open with a finger to prevent it from closing.

### Step 4

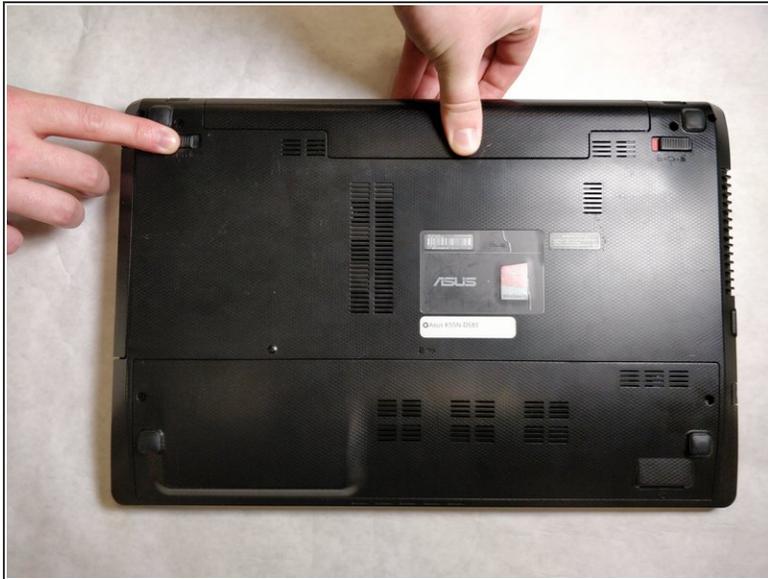

- While holding the second latch from the previous step, use another hand to reach underneath the battery.
- Pull the battery upwards and away from the laptop to remove it.

This document was generated on 2020-11-28 07:12:19 AM (MST).

## Step 5 — Rear Panel




- Using a JIS #00 screwdriver, unscrew the two 5 mm screws on either side of the laptop panel.

## Step 6





- Remove the panel by pushing away from the laptop until the panel is free of the laptop.
- Lift to remove the panel.

## Step 7 — RAM

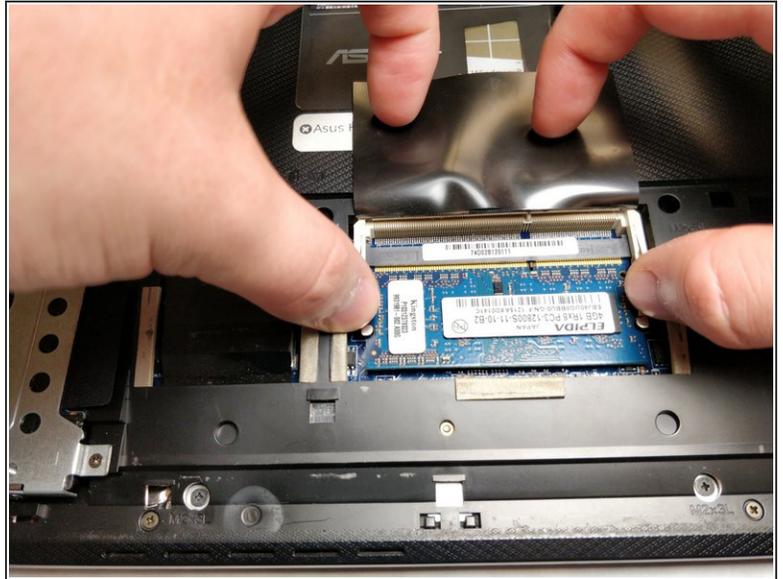



- Lift up the plastic static shield atop the RAM slots.

## Step 8

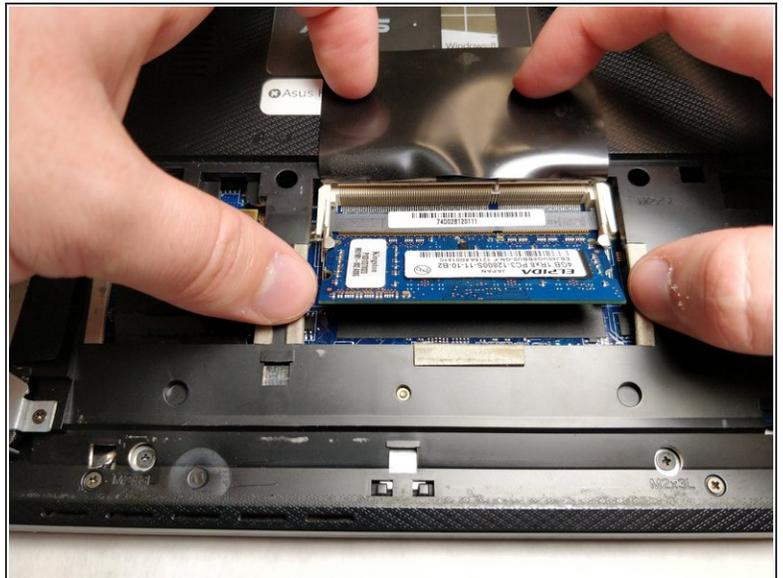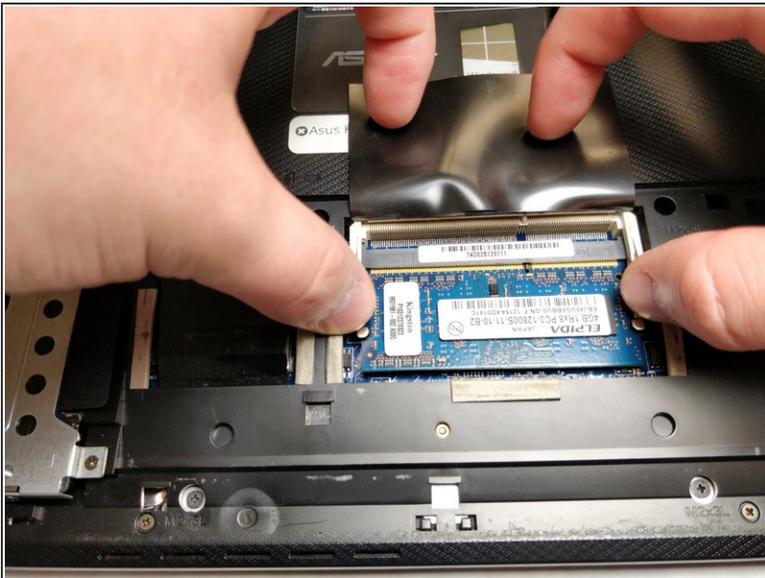

- Depress the tongs on either side of the RAM stick to loosen the RAM from the slot.

## Step 9

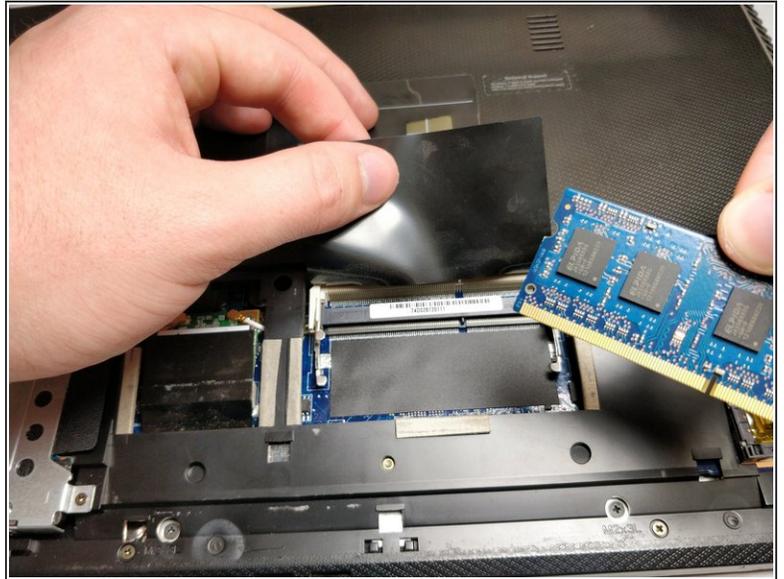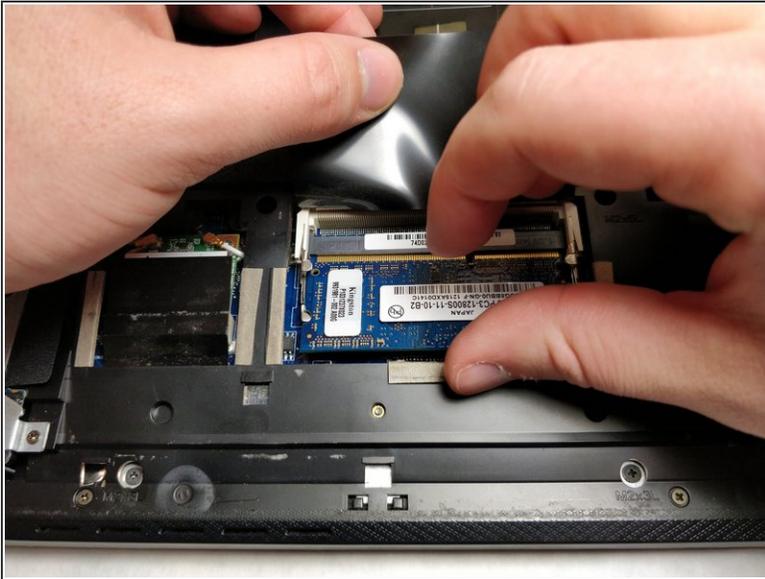

- Grab the RAM and pull away from the slot to release it.

To reassemble your device, follow these instructions in reverse order.