



How to Fix a Loose Oven Handle

How to check the screws of the oven to keep your oven handle tight.

Written By: Viktoria



INTRODUCTION

Before you begin:

For this fix, you would need to find a specialized screwdriver that would fit into you oven door handle screws. Have a damp cloth at hand if the screws are needed to be cleaned. If during your observation you notice that the screws are damaged you may need to buy new ones.



TOOLS:

- [Long Neck Phillips Size 0 Screwdriver](#) (1)
-

Step 1 — How to Fix a Loose Oven Handle





- Open the oven and unlock hinges that are located at the bottom of each side of the oven.

Step 2



- Lift the door up and detach from the oven.
- Place the door on the floor or any other flat surface.

Step 3

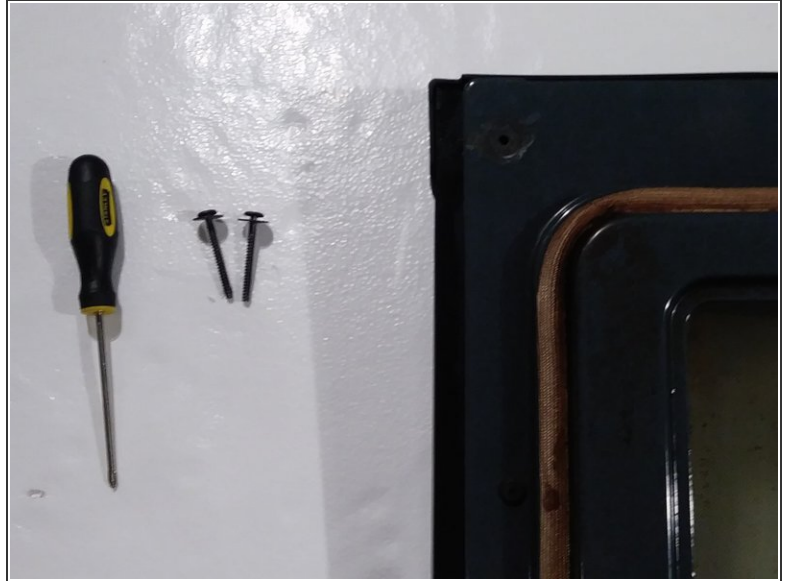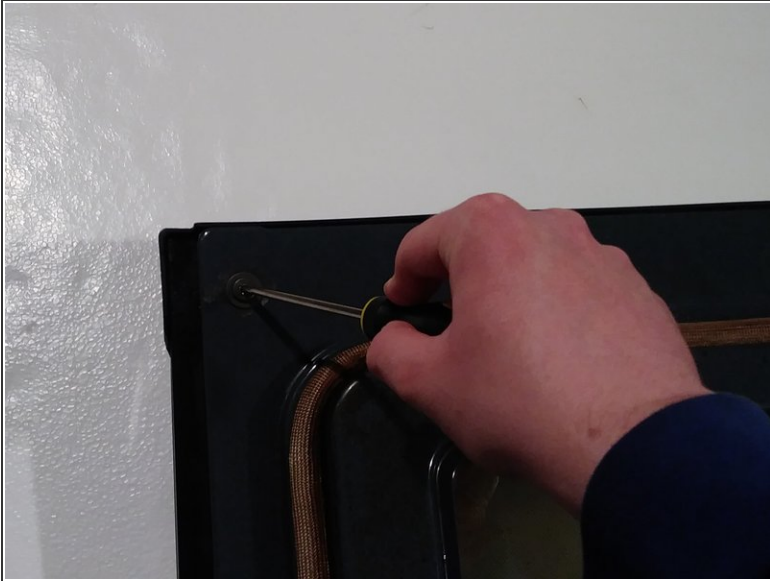

- Unfasten the top 2 screws of the inside of the door (the ones holding the handle).
- ⓘ For this specific oven, a Phillips #0 screwdriver was used. Make sure to check which screw driver fits your oven screws.

Step 4




- Observe the screws.
- If rusty, cleanse them. If damaged, replace with new ones.

Step 5



- Reset and fasten the screws back in tightly.

Step 6

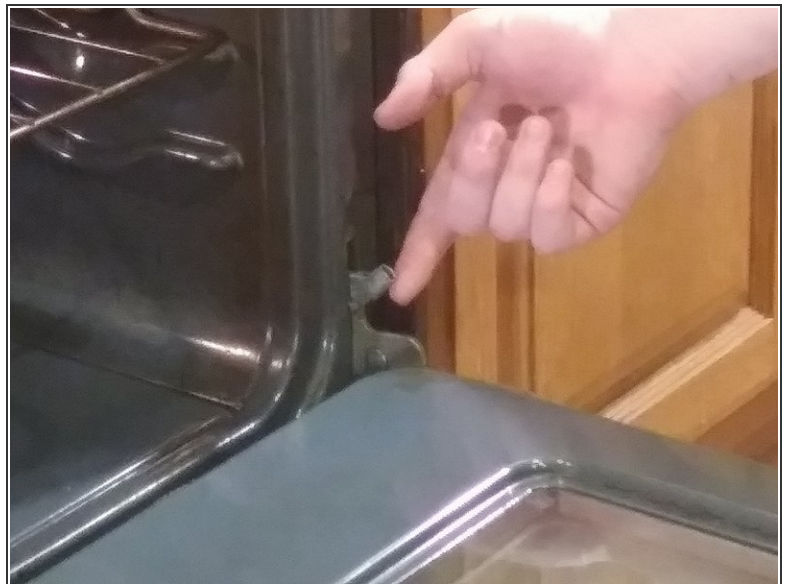

- Place the door back to the oven.
- Refasten the hinges.

Step 7



- Test the handle

To reassemble your device, follow these instructions in reverse order.