



Samsung ATIV Book 9 NP900X3K-S01US

Bottom Case Replacement

Replacing bottom case of your Samsung ATIV Book 9 NP900X3K-S01US by using a #00 Phillips screwdriver

Written By: Daniella Aloni



This document was generated on 2020-11-28 07:18:20 AM (MST).

INTRODUCTION

Is the bottom case of your Samsung ATIV Book 9 NP900X3K-S01US damaged? This guide is here to help you remove and replace it.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-


Step 1 — Bottom Case



 Make sure that the Samsung ATIV Book 9 is powered off and not connected to any power outlets.

- Close the device and rest it on a flat surface.
- Flip the device over to access the ten 4.3 mm screws located on the bottom case.
- Remove all ten screws using the Phillips #00 screwdriver.

Step 2

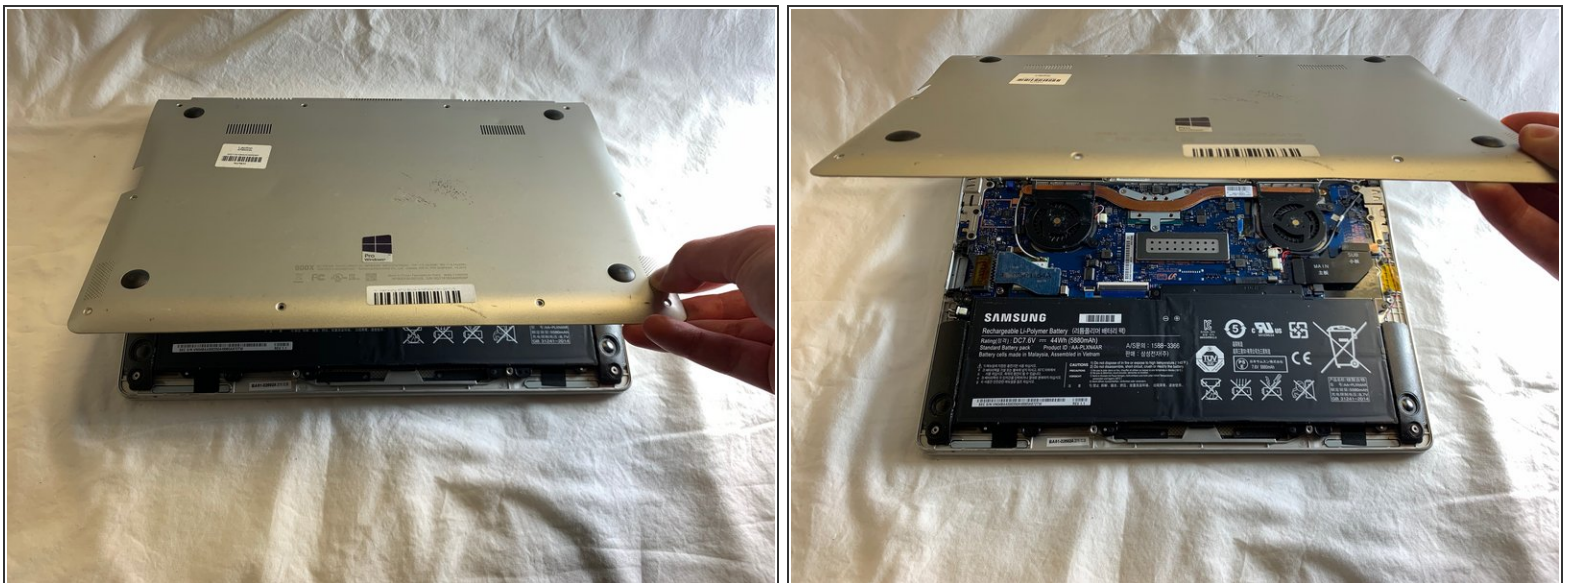

- Gently lift and remove the bottom case.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 07:18:20 AM (MST).

