



Acer Chromebook C720 Solid State Drive (SSD) Replacement

Replace the Solid State Drive (SSD) in an Acer C720 Chromebook.

Written By: Benjamin Rahman



INTRODUCTION

This guide is to assist in the removal and replacement of the Solid State Drive (SSD) of the Acer C720 Chromebook. Before beginning, be sure the device is completely drained, as it is dangerous to work on the device internals while the device is running. Also, remember to handle the device internals with care, as they are fragile and can be broken.



TOOLS:

 
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Acer Chromebook C740/C720/C720P SSD Drive](#) (1)

Step 1 — Solid State Drive (SSD)

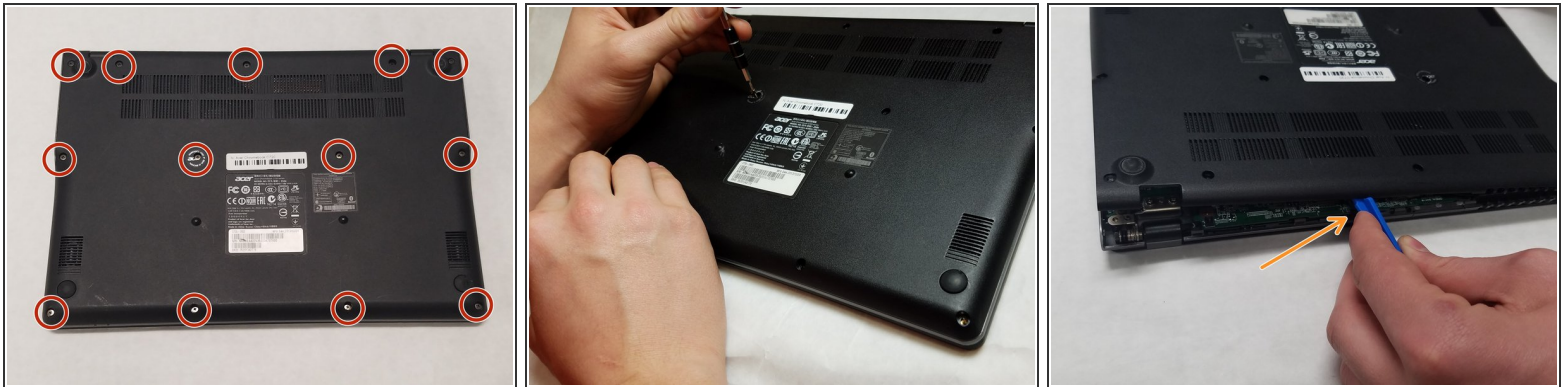

⚠ WARNING: Make sure your device is turned off before proceeding. If you proceed with the device on, the device may be damaged

 
- Remove the thirteen 6mm screws using the Phillips #0 screwdriver.
- Using the blue plastic case opener, unlatch the back of the case to expose the motherboard and other components.

Step 2



- Remove the single 3mm screw holding the SSD with the Phillips #0 screwdriver.

Step 3

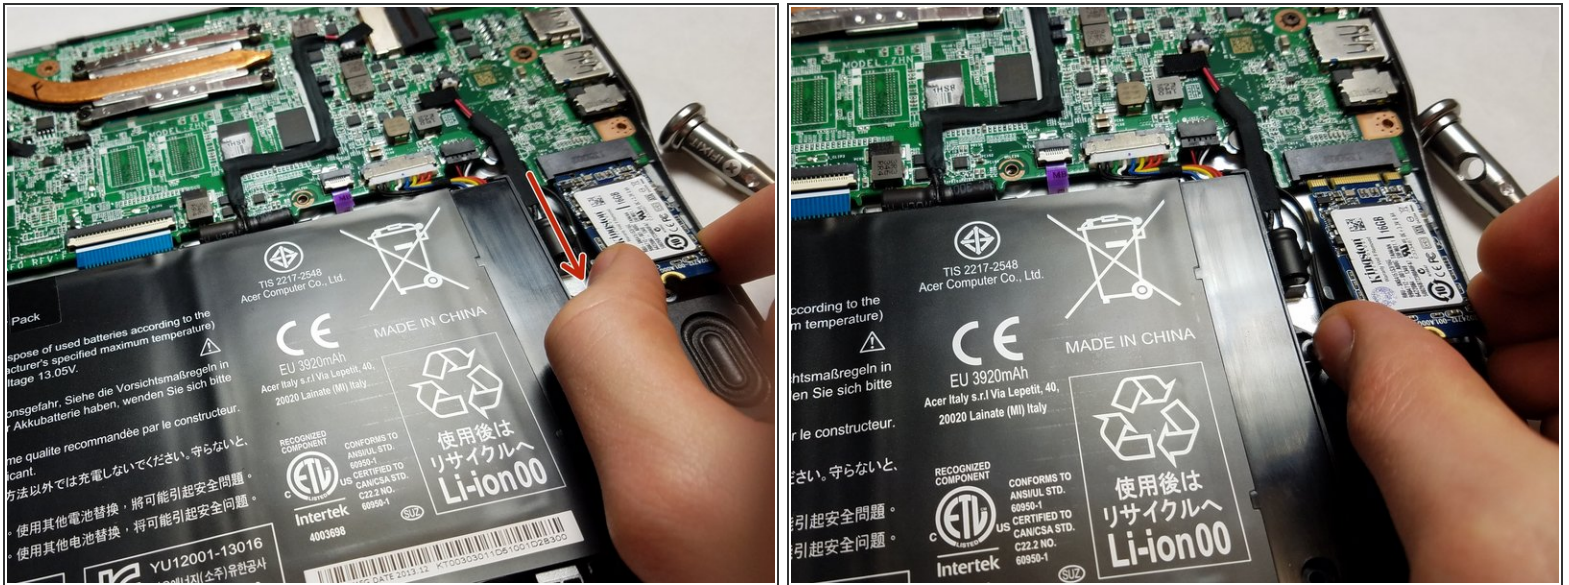

- Gently remove the SSD from the motherboard.

To reassemble your device, follow these instructions in reverse order.