



Ryobi P501G Blade Replacement

This guide goes over how to replace the RYOBI P501G power saw's blade.

Written By: Eeshan Mishra



INTRODUCTION

If your Ryobi P501G starts failing when using your saw, you may want to think about replacing the component. The failure may be a result of heavy use or a crack. The replacement of the blade is not complex. You will need the indicated screwdrivers and a spudger to complete this task. There are no warnings or potential hazards when replacing this part.



TOOLS:

- [5 mm Hex Key](#) (1)



PARTS:

- [Ryobi SAW BLADE 680783004](#) (1)

Step 1 — Blade



- Locate the area where the blade is connected to the motor, where the circular covering is on the Ryobi P501G.

Step 2



- Unscrew clockwise and remove the bearing in the middle, connecting the blade to the motor. This will also allow removal of the blade guard.

Step 3



- Remove the four black screws holding the black bearing and remove the bearing itself.

Step 4



- Once the black bearing is off, remove the transparent cover of the blade.
- Once the cover is off, remove the blade.
- Place the new blade with the flat notches lined up with the flat notches on the motor axle.

To reassemble your device, follow these instructions in reverse order.