



# HTC Desire 826 Battery Replacement

If you need to install a new battery in your...

Written By: Jordan Warnix



# INTRODUCTION

If you need to install a new battery in your HTC Desire 826, access it with this guide.

## TOOLS:

[T5 Torx Screwdriver](#) (1)  
[Tweezers](#) (1)  
[Magnetic Project Mat](#) (1)  
[Spudger](#) (1)

## PARTS:



[35H00232-00M](#) (1)

## Step 1 — Battery




- Find a seam in the back of the device.
  - Insert the plastic spudger into the seam and pry off the back panel.
- ⓘ There will be glue, so keep prying until it comes off or you may need to heat up the edges of the device to loosen the adhesive with the [iOpener](#).

## Step 2

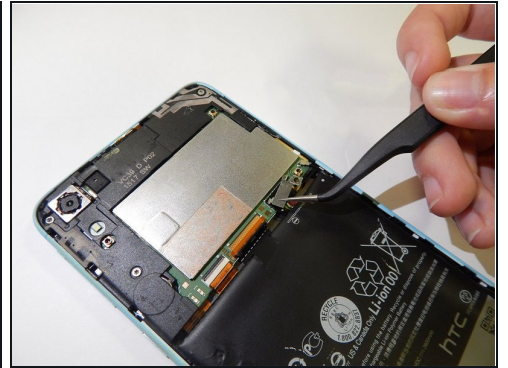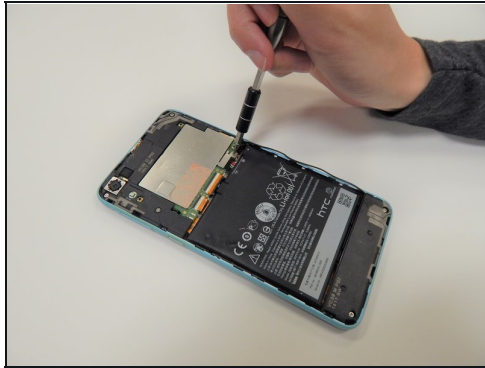



- Remove the 4.0 mm screw above the battery with a T5 Torx screwdriver.
- Remove the metal bracket with the tweezers.

## Step 3

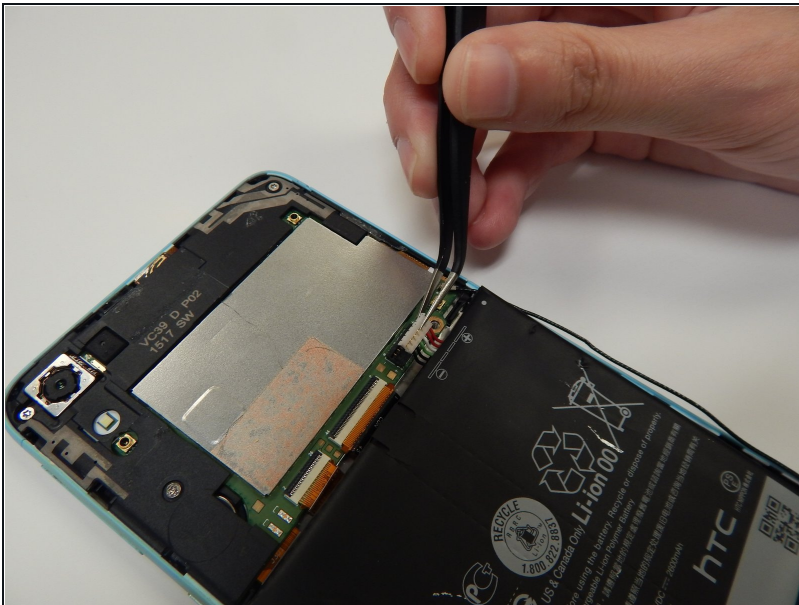

- Disconnect the battery cable from the motherboard with the tweezers.

## Step 4

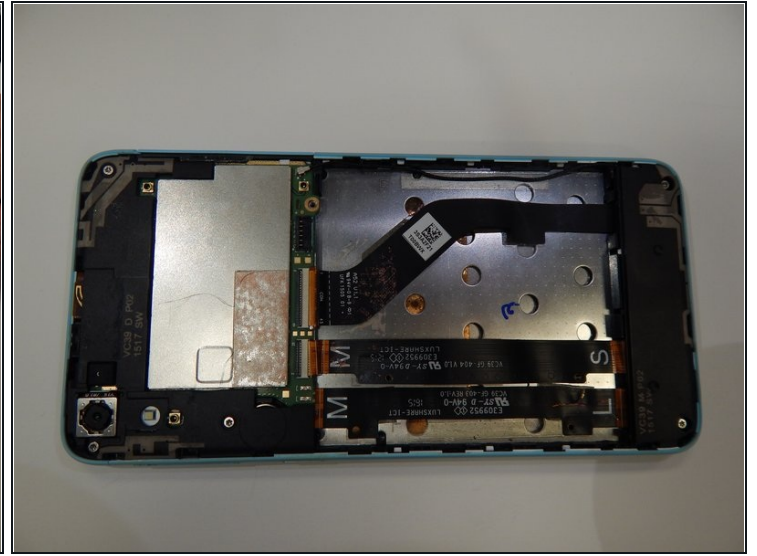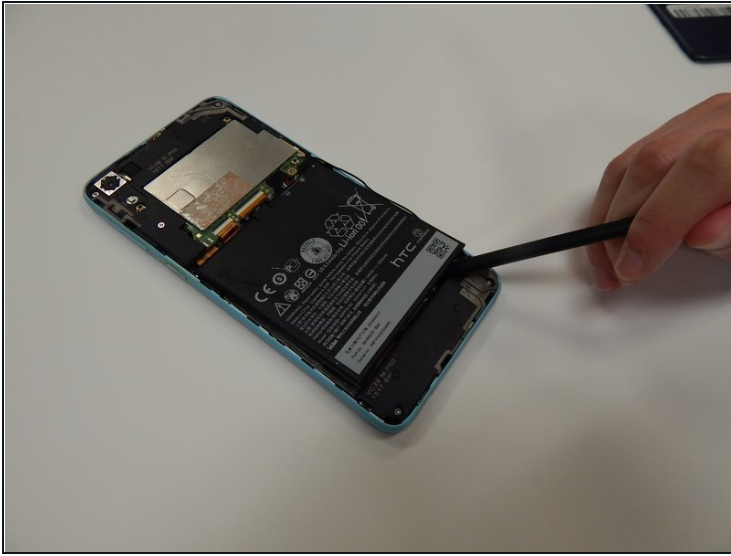

- Lift the battery with a plastic spudger and remove it from the device.

---

To reassemble your device, follow these instructions in reverse order.