




Lenovo Ideapad 120s-14IAP USB Daughterboard Replacement

How to replace a Lenovo Ideapad 120s-14IAP daughterboard.

Written By: Robert Harper

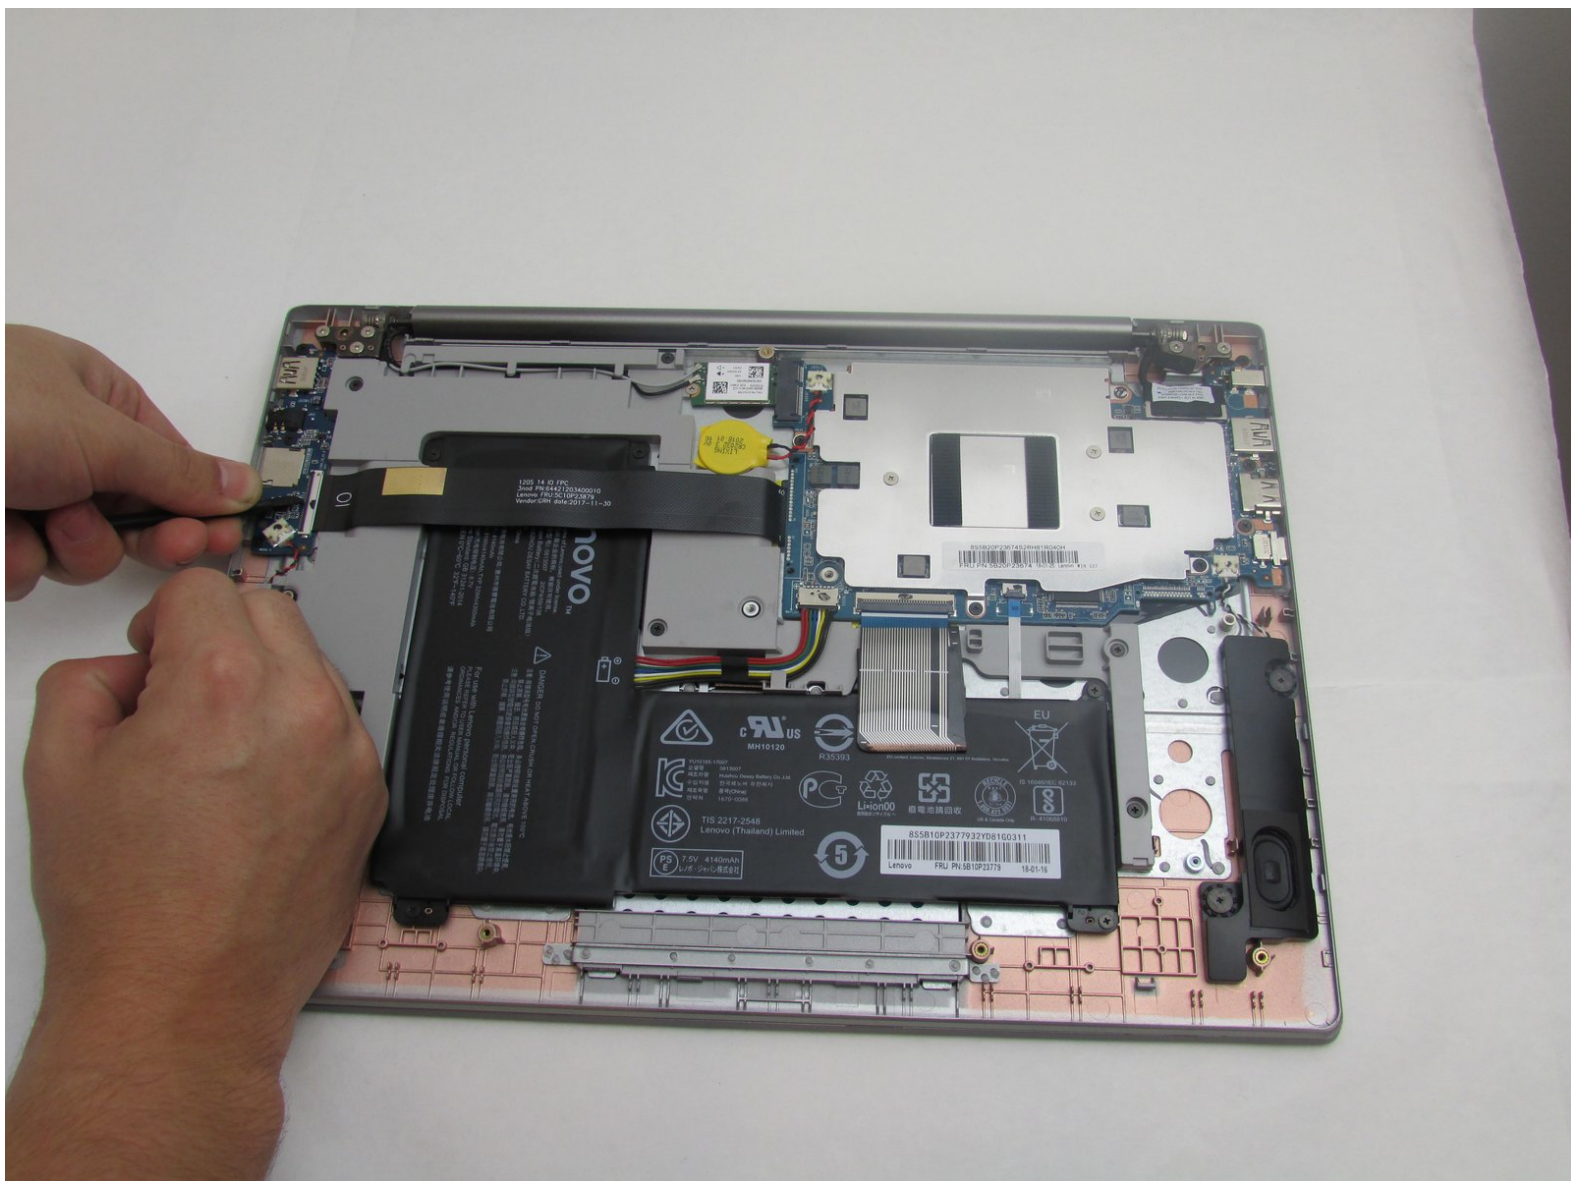

INTRODUCTION

This guide will give you a step by step process on how to replace a daughterboard for a Lenovo IdeaPad 120s-14IAP, including the USB headphone jack, micro SD card reader and NOVO button.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Jimmy](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Cover





- ❗ Be sure to power off and unplug your device before you begin your repair.
- Orient the laptop so the top is laying flat on your work surface.
- Remove ten 1.5mm Torx T5 screws from the back of the laptop.

Step 2




- Insert the plastic opening tool or a Jimmy along the edge of the back cover and gently pry.
- Run the tool all the way around the edge of the back cover and remove the back cover once it is no longer secure.
- Remove the back cover.

Step 3 — USB Daughterboard

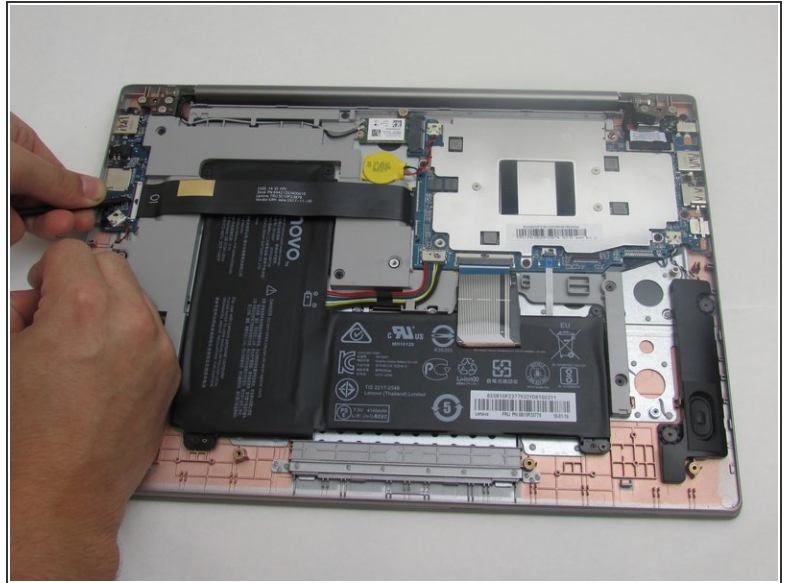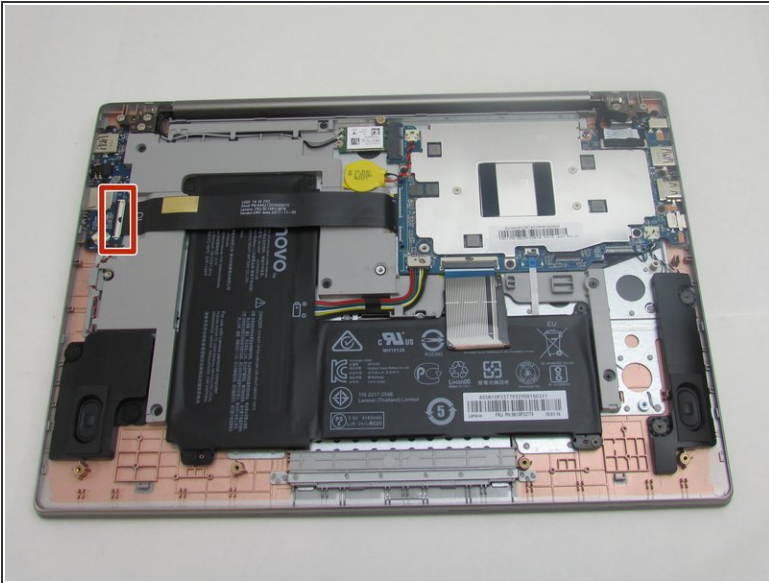

- Use a spudger to lift the black fastener and disconnect the ribbon cable from the USB daughterboard.

Step 4

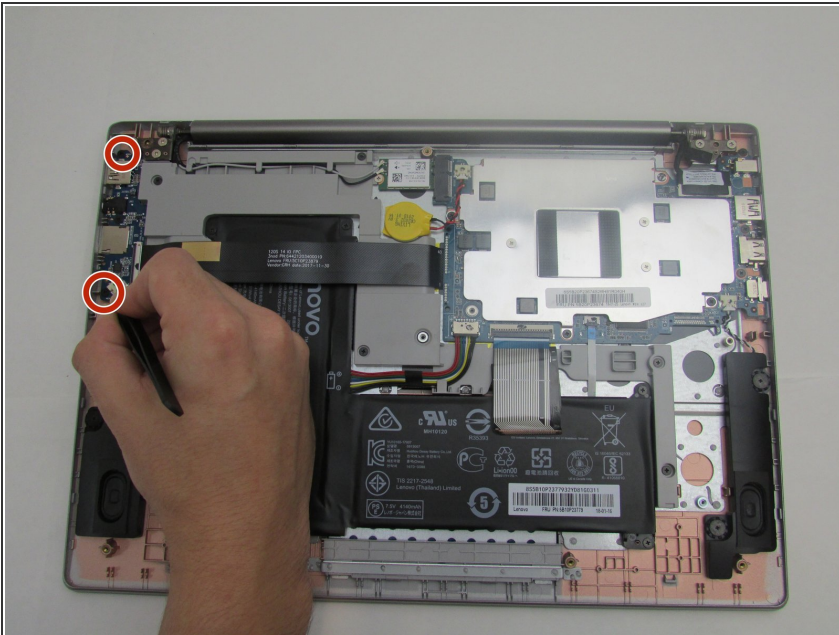

- Using tweezers, disconnect the speaker on the left from the USB daughterboard.
- Remove two 2.5 mm Phillips #0 screws from the daughterboard.
- Remove the daughterboard from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-06-20 02:26:23 AM (MST).

