



# ASUS K553MA-DB01TQ Battery Replacement

How to remove and replace the battery on the ASUS K553MA-DB01TQ laptop.

Written By: John Wengierski



---

## INTRODUCTION


This guide will walk you through how to remove/replace the battery from an ASUS K553MA-DB01TQ laptop. In order to access the battery, please refer to the keyboard removal guide. As with any electronic device, the device must be turned off and the battery must be taken out before more technical repairs are attempted.



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Keyboard

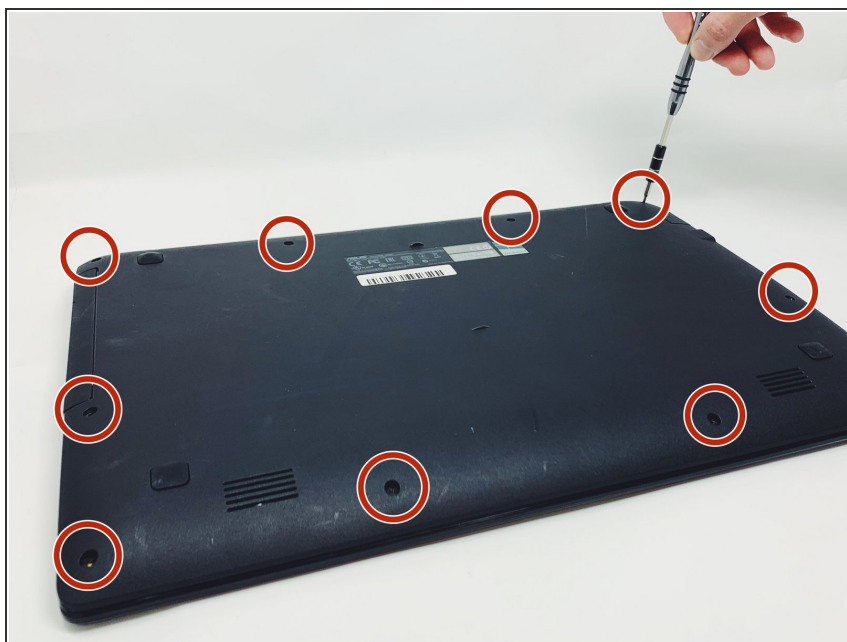

- Turn the laptop over. Using the Phillips Head 000 bit, remove the four 4.8mm screws from the bottom edge. Use the same bit to then remove the remaining six 9.5mm screws.

## Step 2



- Using the iFixit Opening Tool, pry the keyboard off.




## Step 3 — Battery




- Remove the keyboard from the laptop.
- ⚠ Be careful of any ribbon cables attached to the keyboard so you don't rip those out.

## Step 4

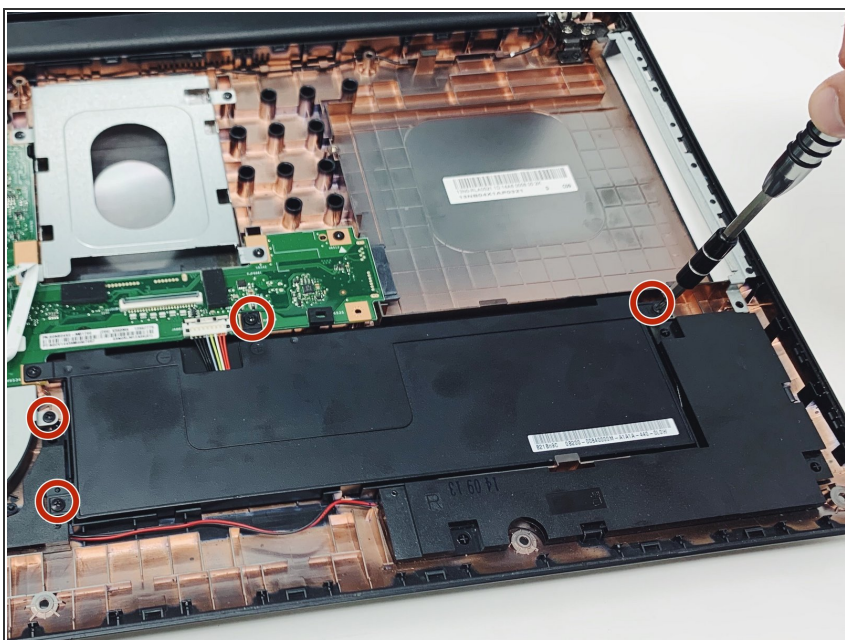


- Using the Phillips #000, remove the four 9.5mm screws around the battery.

## Step 5

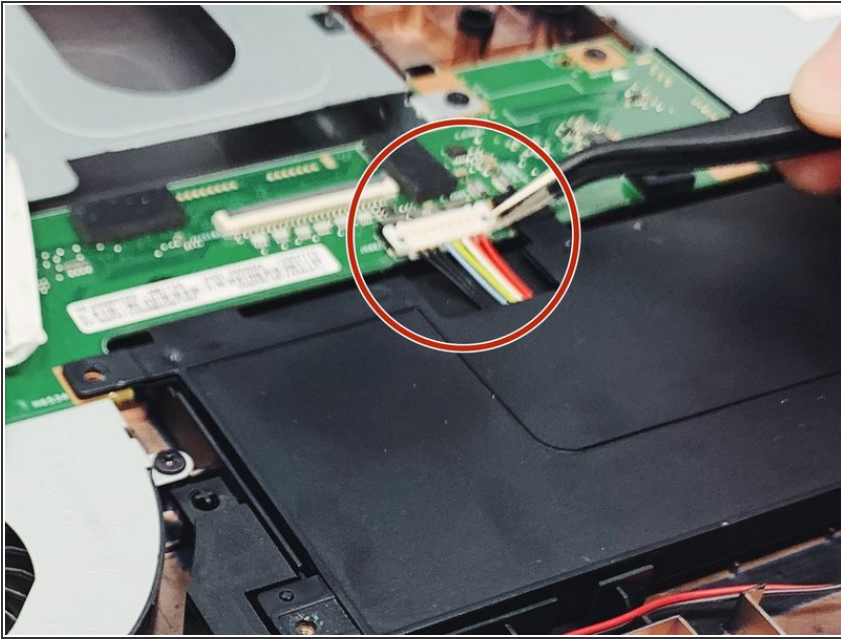

- Carefully disconnect the battery's 8-pin connection to the motherboard.

## Step 6

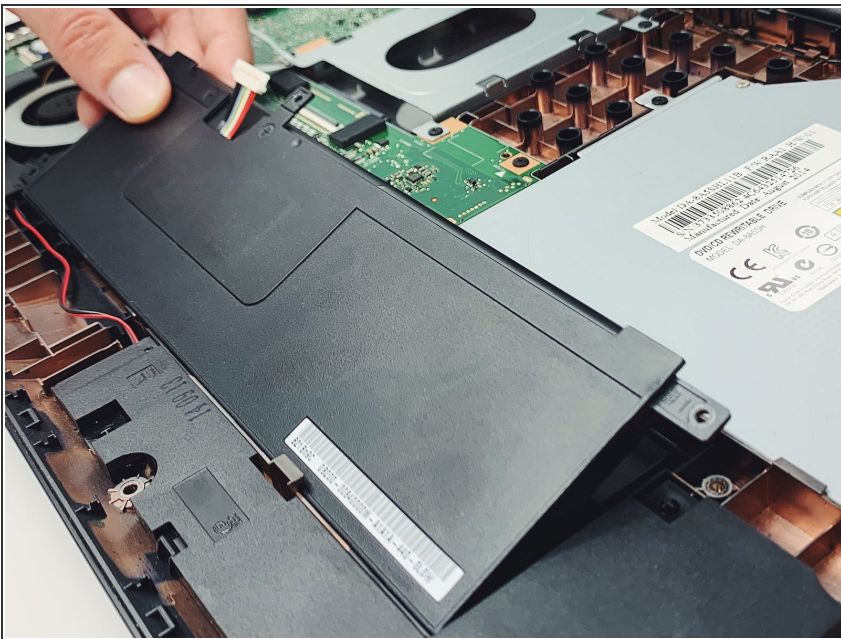

- Remove the battery from the laptop.

To reassemble your device, follow these instructions in reverse order.