




Acer Chromebook Spin 15 CP315-1H-P1K8

Touchpad Replacement

How to replace the touchpad in Acer Chromebook Spin 15 CP315-1H-P1K8.

Written By: Evan Costa

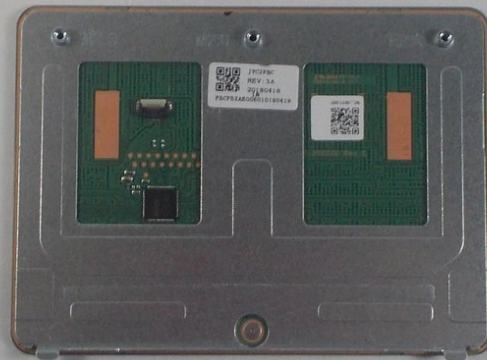

INTRODUCTION

This guide is useful for helping to troubleshoot or replace the Acer Chromebook Spin 15 CP315-1H-P1K8 touchpad. If the touchpad on your laptop is no longer responsive or no longer functioning, use this guide to remove and replace the touchpad.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (4)



PARTS:

- [Acer Chromebook Spin 15 Silver Touchpad Assembly](#) (1)

Step 1 — Back Cover




 Make sure the device is fully powered off.

- Flip the computer over so that the back is facing up.
- Remove the twelve 6mm Phillips #1 screws from the bottom of the laptop.


Step 2



- Use the iFixit opening tools as wedges to pry the back of the laptop off.


 Go slow, making sure not to snap the plastic. With enough of a gap made, you can use your hand to finish taking off the back.

Step 3 — Battery

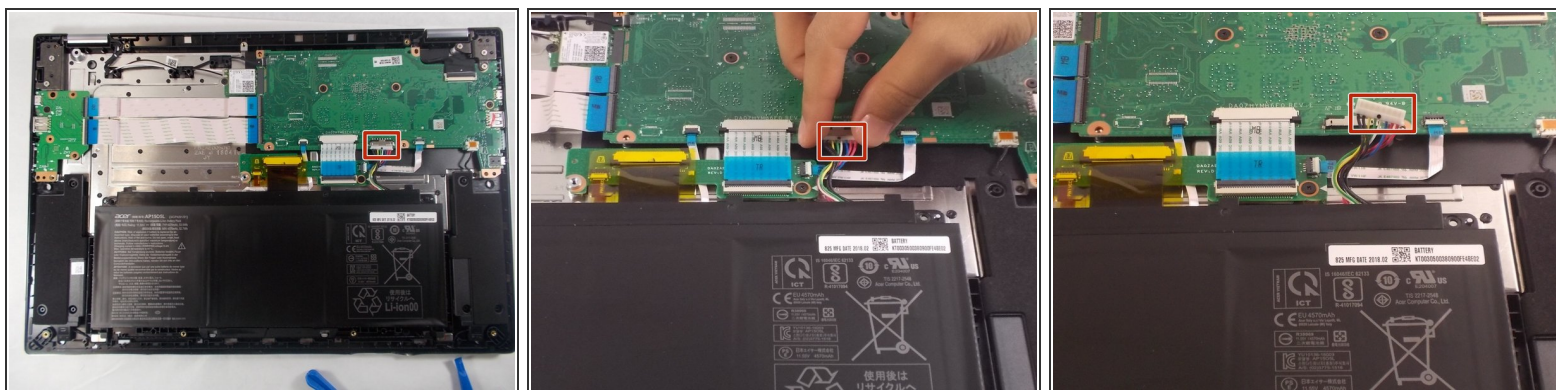


- Remove the ribbon cable by pulling the plastic connector that is connected to the motherboard out.

Step 4

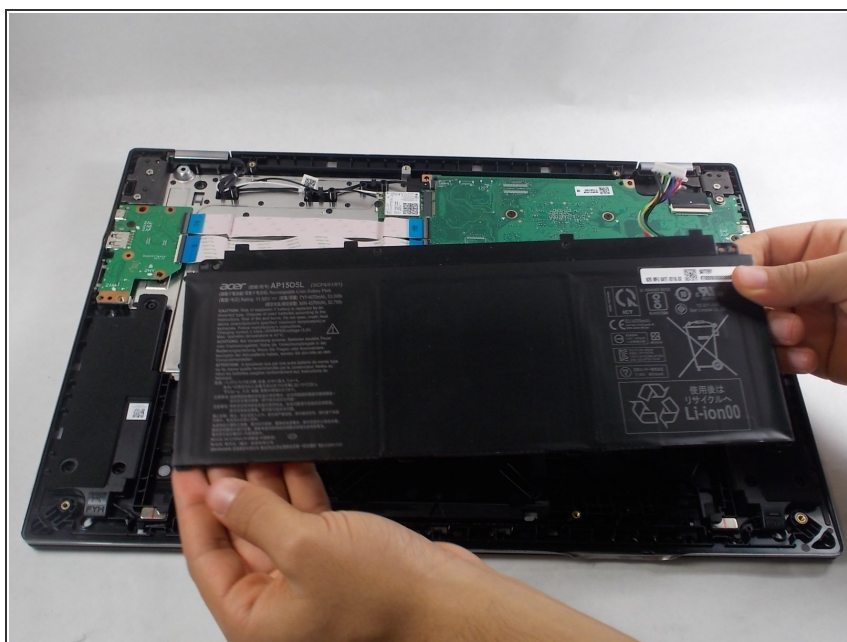



- Remove the battery from the laptop by hand.

Step 5 — Touchpad

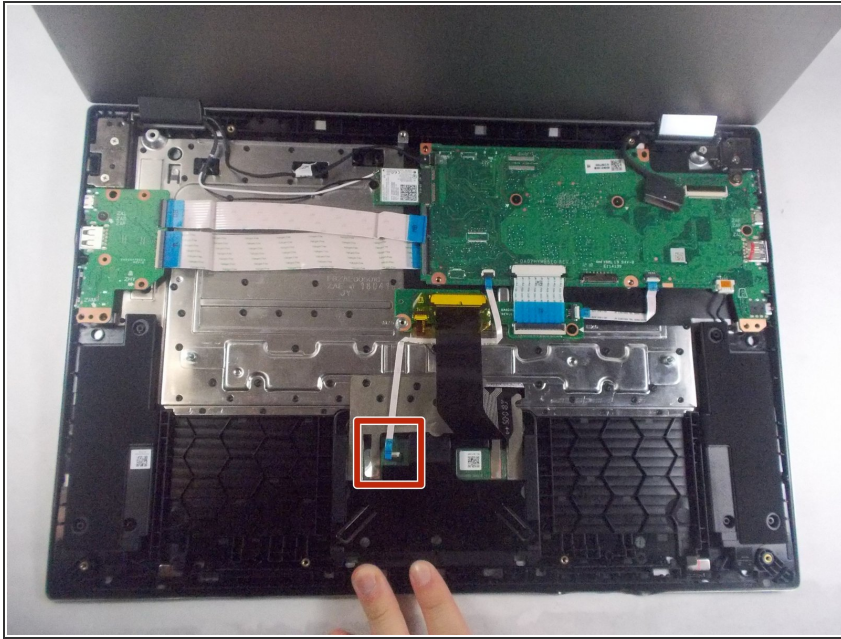


- Detach the ribbon cable from the touchpad.

Step 6

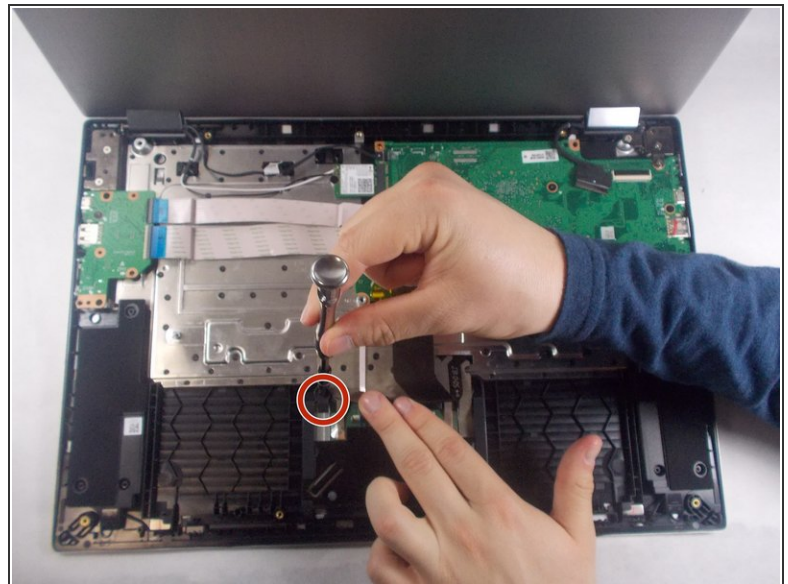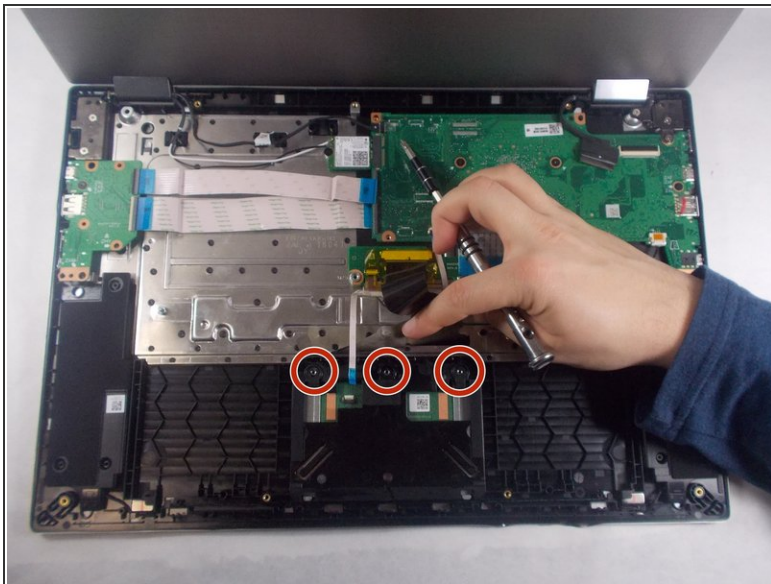

- Remove the tan adhesive tape that is covering the touchpad to expose the screws holding it in.
- Remove the three, 3mm long screws that are holding the touchpad in place.

Step 7

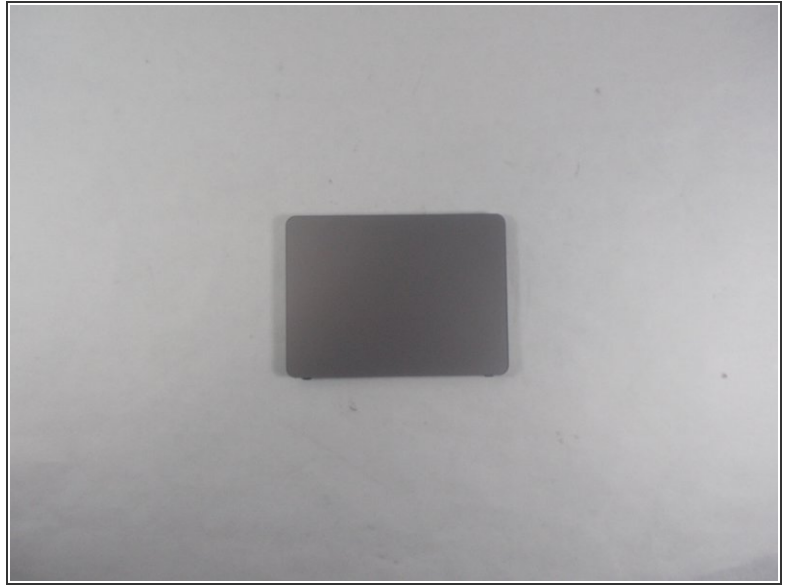

- Gently push the touchpad out with your hand.

To reassemble your device, follow these instructions in reverse order.