



Acer Chromebook Spin 15 CP315-1H-P1K8

Display Screen Replacement

How to replace the display screen on the Acer Chromebook Spin 15 CP315-1H-P1K8.

Written By: Evan Costa



INTRODUCTION

This guide will go through how to replace the touch screen display of the Acer Chromebook Spin 15 CP315-1H-P1K8. Make sure to be careful when replacing the screen, the glass could shatter under pressure.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover



⚠ Make sure the device is fully powered off.

- Flip the computer over so that the back is facing up.
- Remove the twelve 6mm Phillips #1 screws from the bottom of the laptop.


Step 2



- Use the iFixit opening tools as wedges to pry the back of the laptop off.


⚠ Go slow, making sure not to snap the plastic. With enough of a gap made, you can use your hand to finish taking off the back.

Step 3 — Display Screen

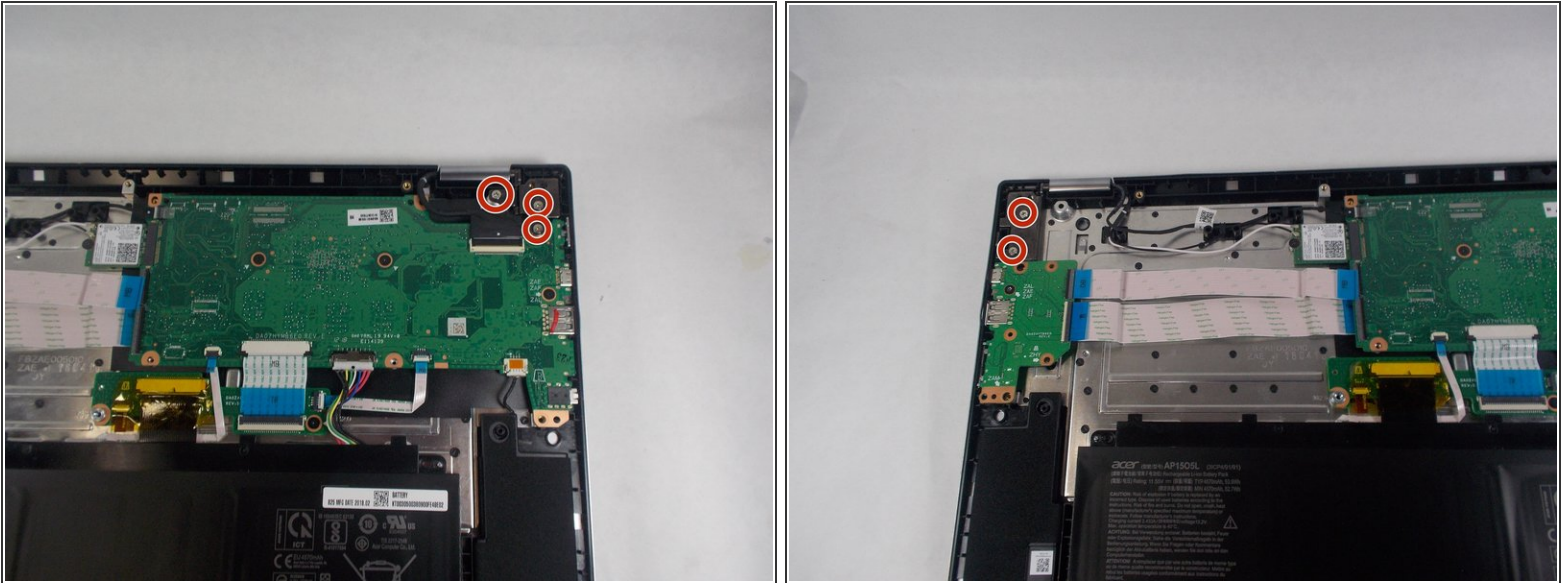

- Remove the five 6mm Phillips #1 screws from the hinges on either side of the laptop.

Step 4

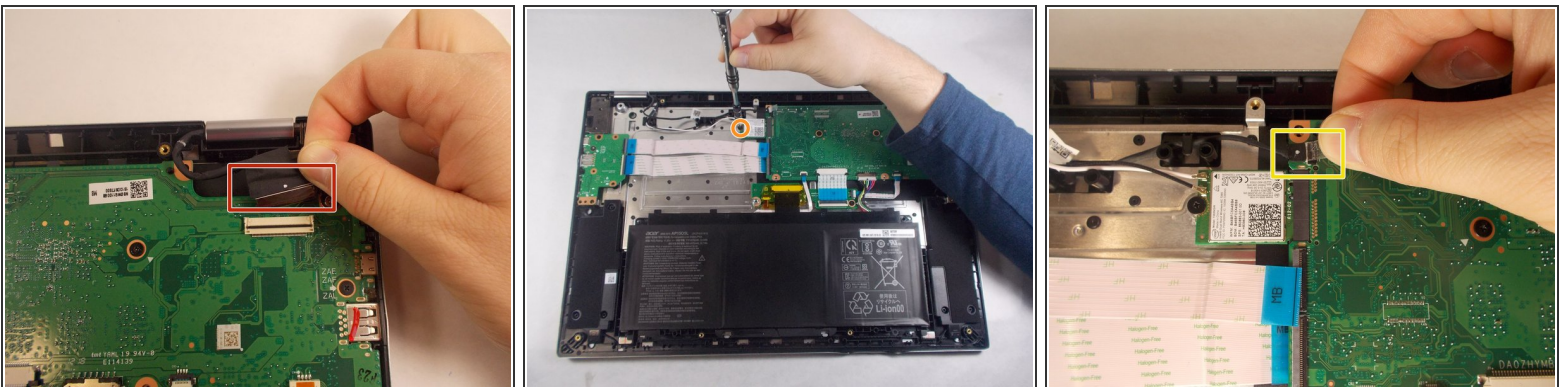

- Unplug the camera/microphone ribbon cable from the circuit board.
- Remove the single 3mm Phillips #1 screw from the Intel core.
- Unplug the cable from the circuit board.

Step 5



- Use the plastic opening tool, create a gap between the back and front of the display.
- Lift the front out with your hands.

To reassemble your device, follow these instructions in reverse order.