




Toshiba CB35-3350 Chromebook 2 Fan Replacement

This guide will help you replace the fan for the Toshiba CB35-3350 Chromebook 2.

Written By: Kojo Appiagyei

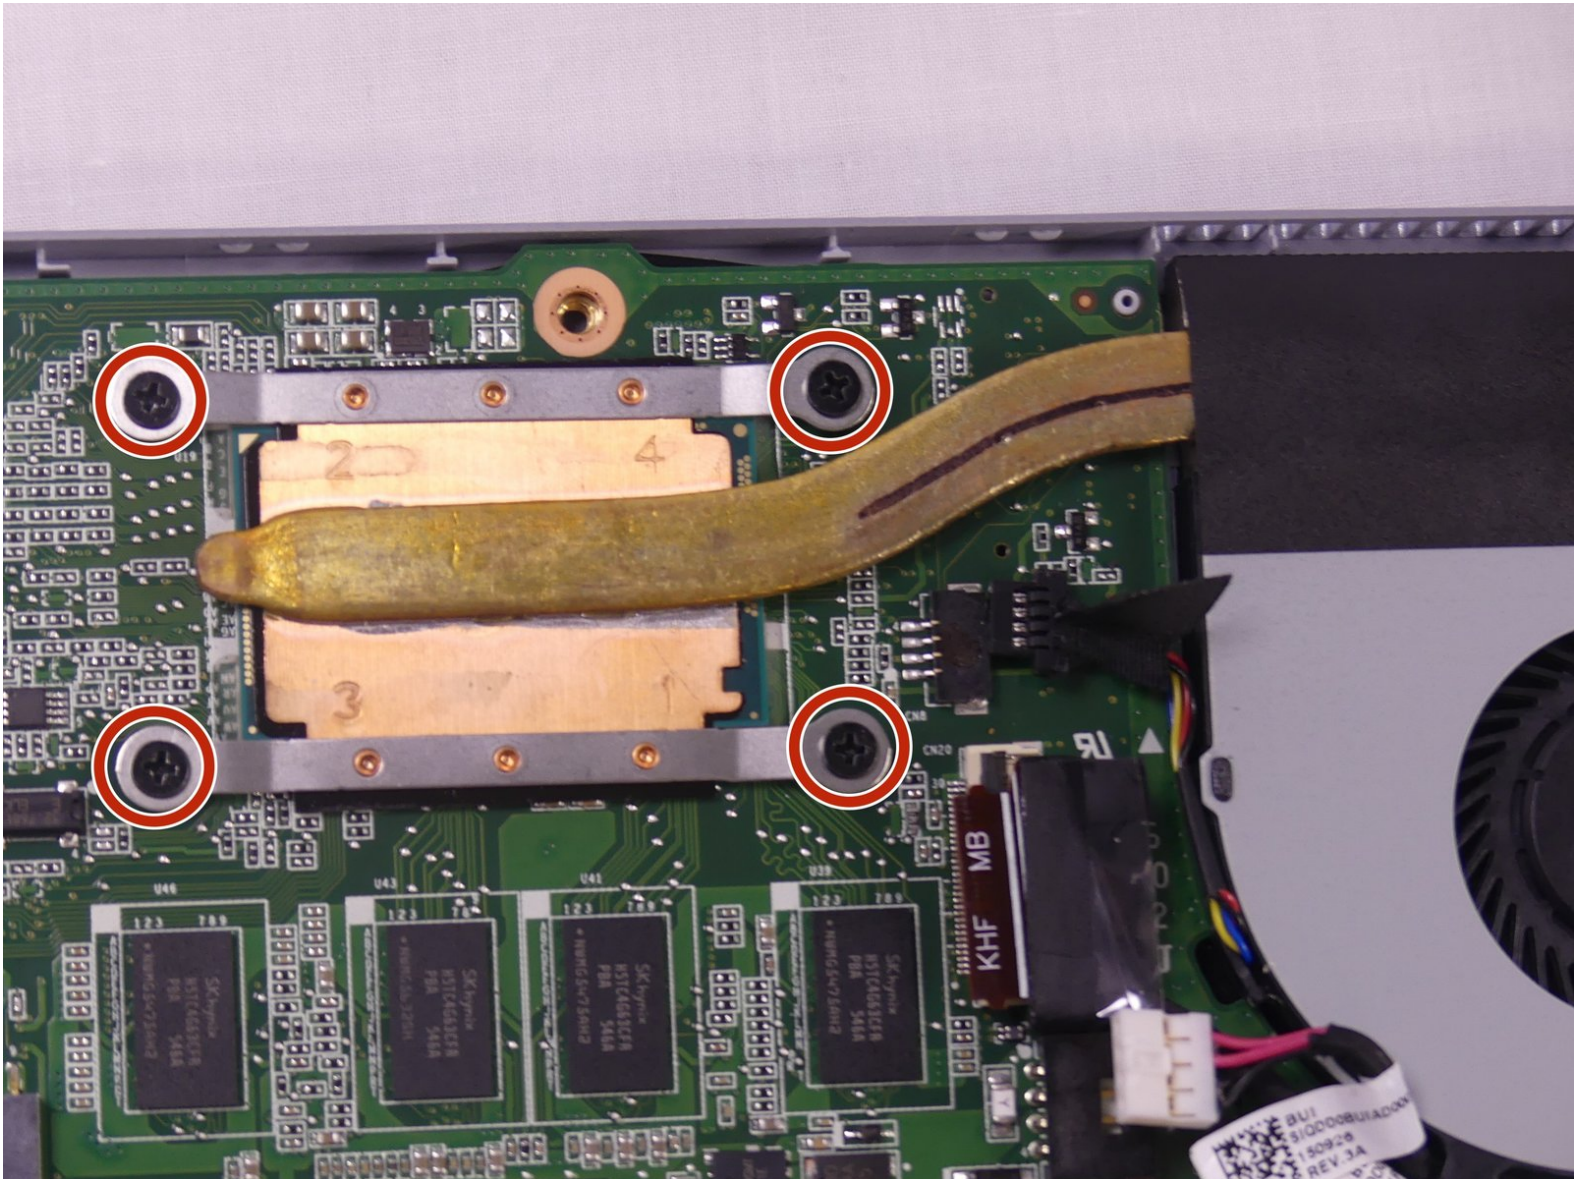

INTRODUCTION

To complete this guide you will need to work with a steady, gentle hand. Just so you do not mess it up.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery




- Remove the Phillips #0 screws from the back of the laptop.
- Use your hands and an iFixit opening tool to remove the back of the laptop.

Step 2




- Remove the four Phillips #0 screws from the speakers.
- Move the speakers out of the way.

Step 3

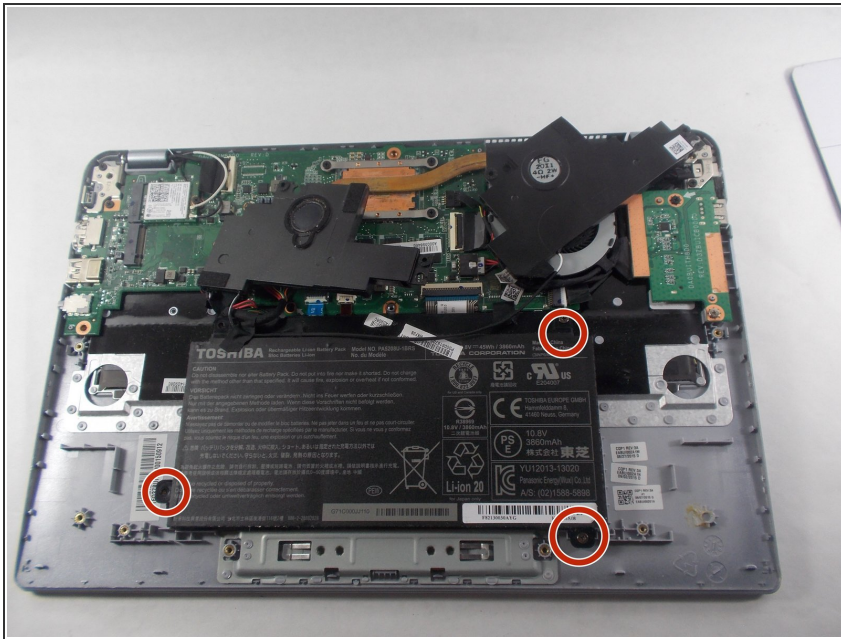


- Remove the three Phillips #0 screws from the battery.

Step 4

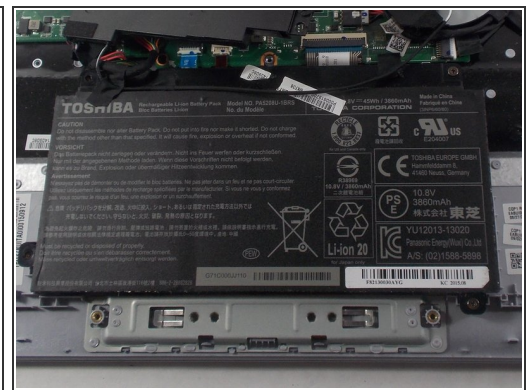


- Unplug the wires connecting the battery to the motherboard.
- Remove the battery from the laptop.

Step 5 — Fan

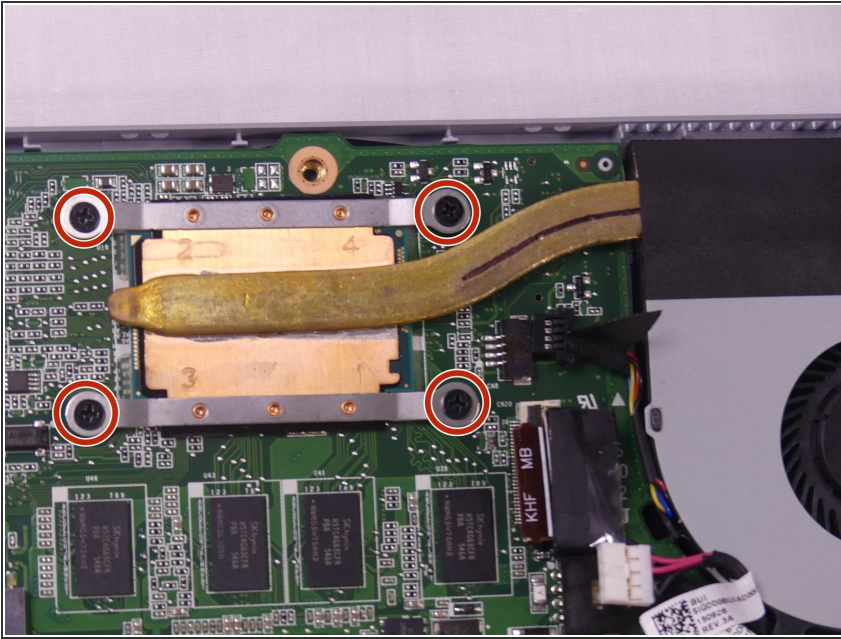



- Unscrew the four captive Phillips #0 screws from the heat sink.

Step 6

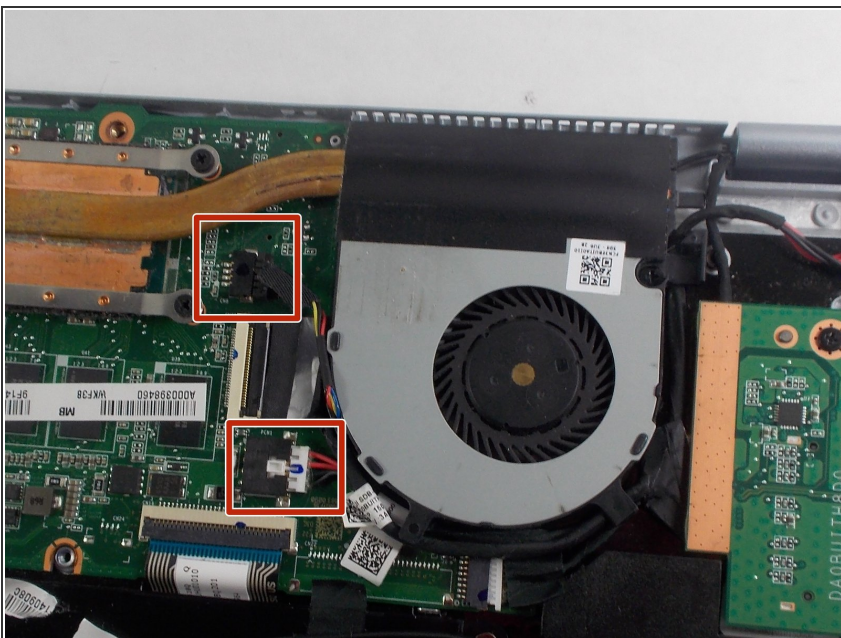

- Detach the wires connecting the fan to the motherboard.

Step 7

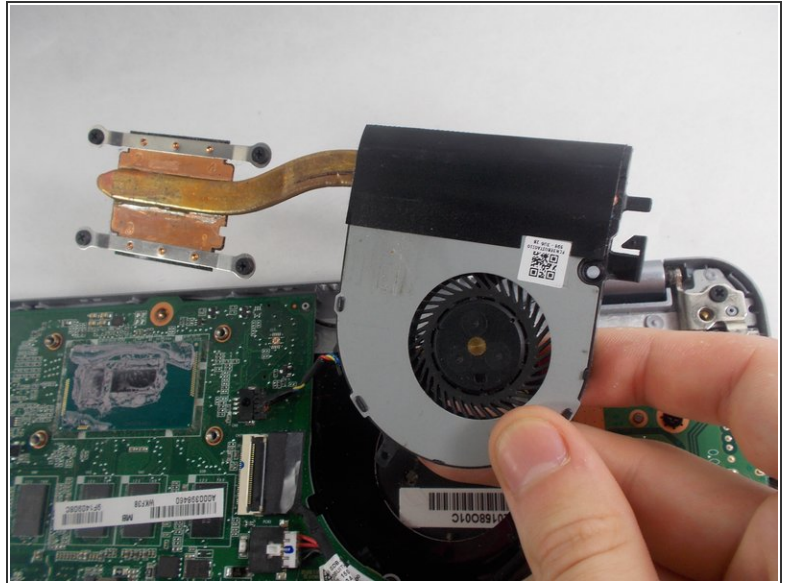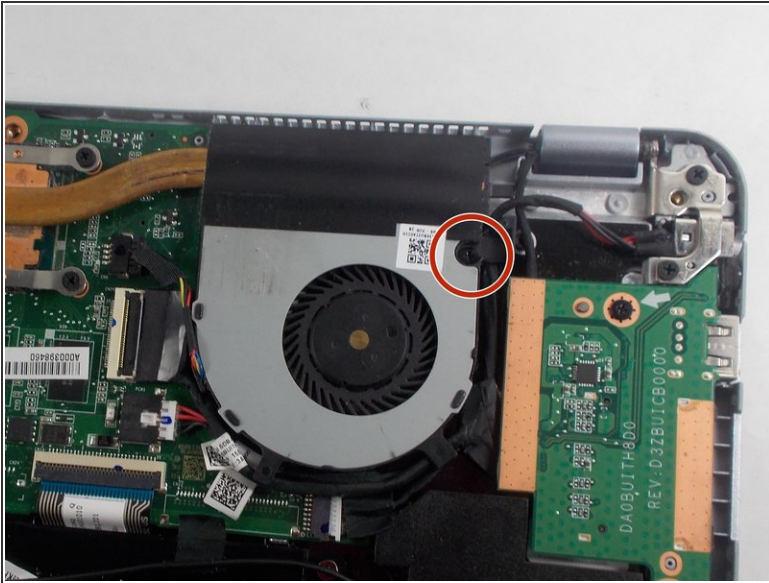

- Detach the wire from the fan.
- Remove the fan from the laptop.

To reassemble your device, follow these instructions in reverse order.