




Sony Bloggie 3D Player Main Button's Circuit Board Replacement

How to remove and install a new main button circuit board for the Sony Bloggie 3D Camera.

Written By: Robert Tam

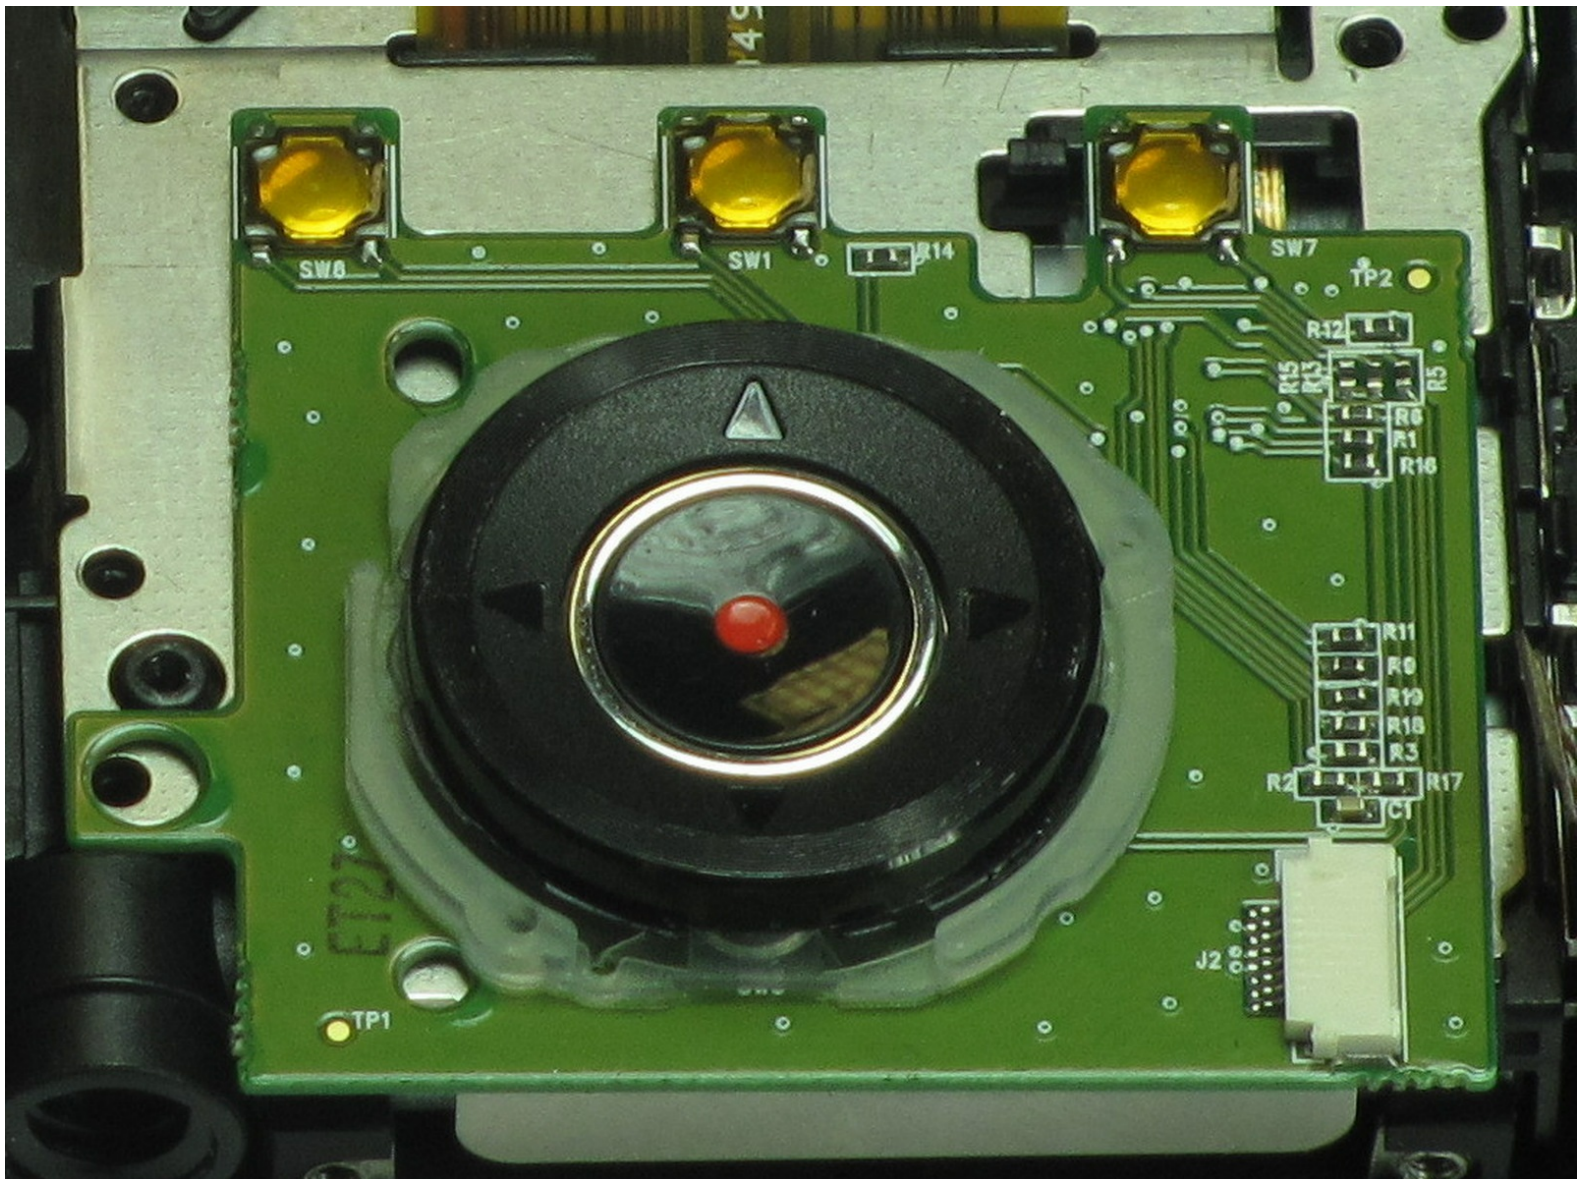

INTRODUCTION

Whether it's due to dust, wear, or physical damage, the main button circuit board may need to be replaced at some point. This guide focuses on how to install a new main button circuit board to get your Sony Bloggie 3D Player running like new.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Front Cover





- Remove the two 2.5mm Phillips #00 screws using the Philips #00 screwdriver.

Step 2

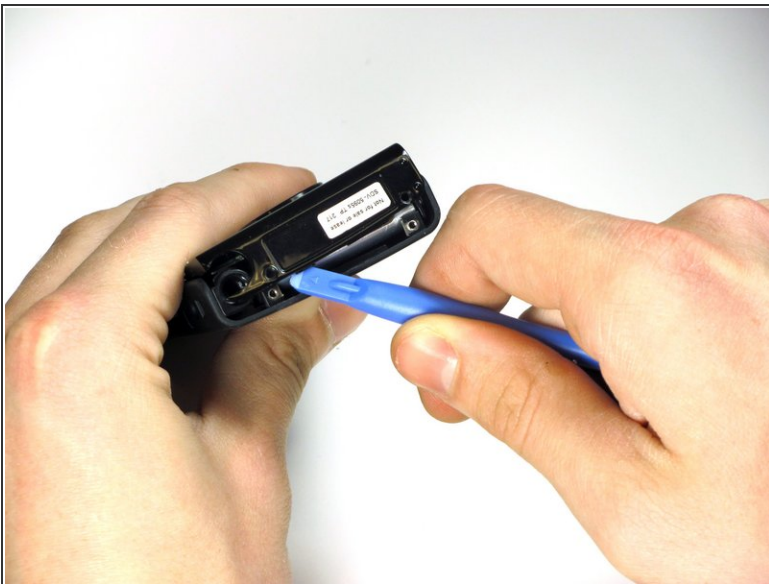

- Use a plastic opening tool to pry the cover open.
- After the the cover is partly open as shown, remove the cover with your hands.

Step 3 — Main Button's Circuit Board

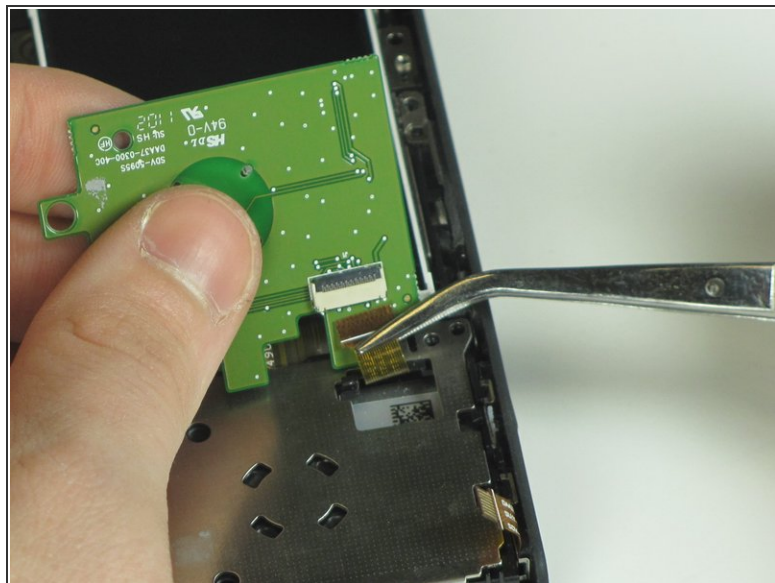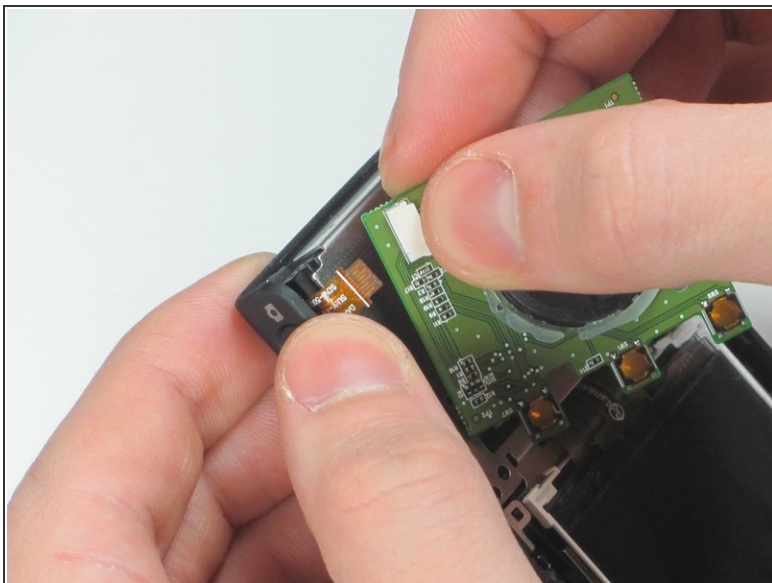

- Detach the board from the ZIF connector using a pair of tweezers or by hand.
- Flip the circuit board over and remove the connector on the backside. Now you can safely remove the circuit board.

To reassemble your device, follow these instructions in reverse order.