



# Samsung Galaxy Tab 4 8.0 Verizon Speaker Replacement

How to replace the speaker in the Samsung Galaxy Tab 4 8.0 Verizon.

Written By: Chandler Davis Beale



# INTRODUCTION

This guide will show you the steps you need to perform to replace the speaker in your device.



## TOOLS:


- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [JIS #000 Screwdriver](#) (1)



## PARTS:


- [Galaxy Tab 4 8.0 Speaker](#) (1)

## Step 1 — Motherboard

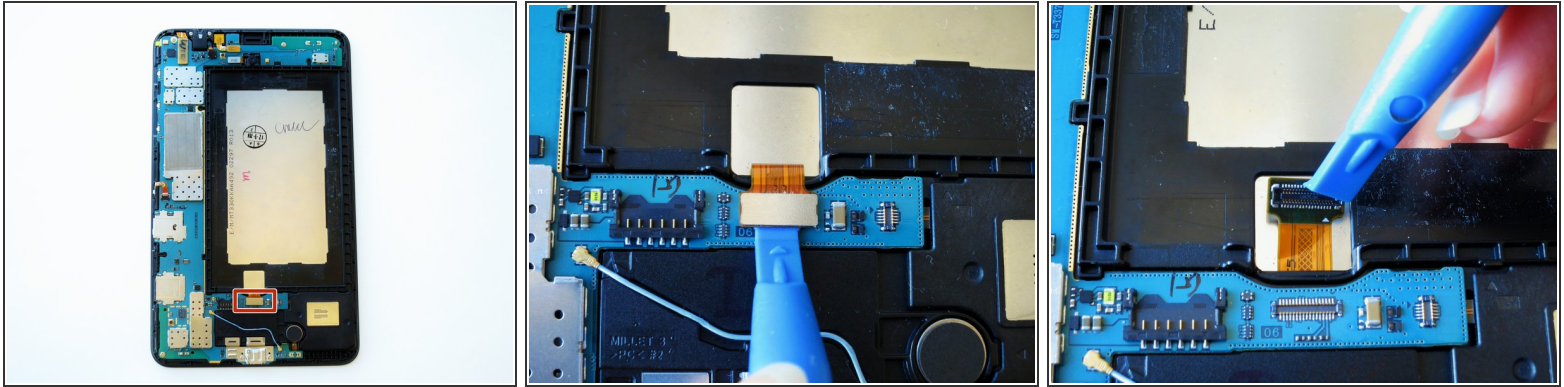


- Slightly apply pressure and move the blue plastic opening tool downwards to pop the metallic rectangular connector from its socket on the mother board.

## Step 2

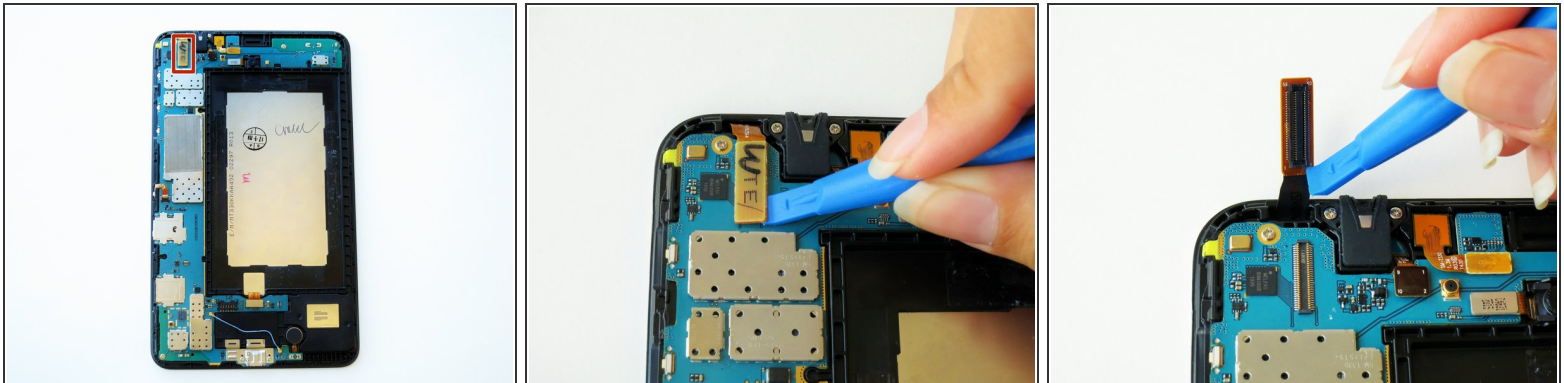


- Slightly apply pressure and move the blue plastic opening tool downwards to pop the gold rectangular connector from its socket on the mother board.

## Step 3

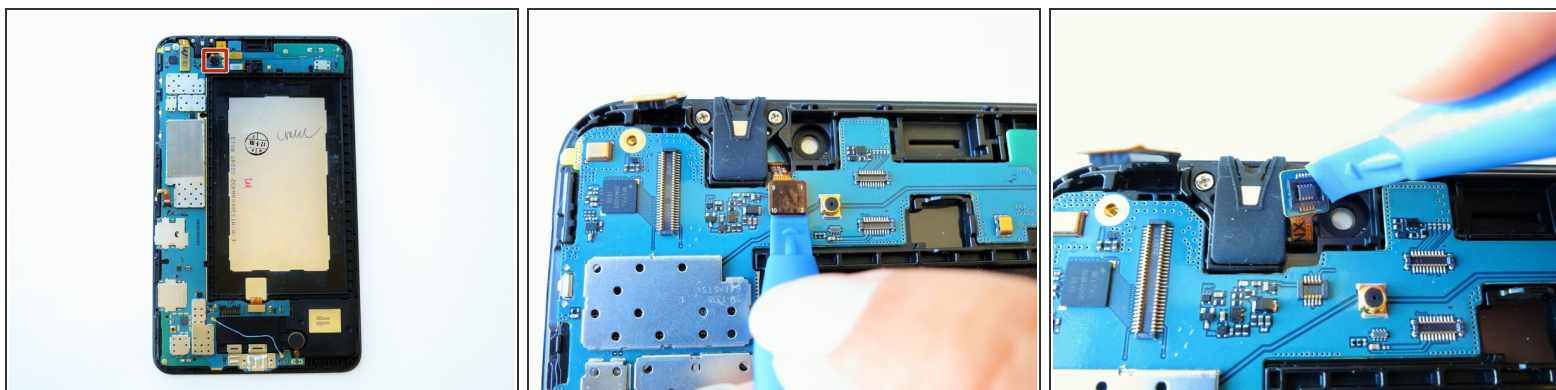

- Slightly apply pressure and move the blue plastic opening tool downwards to pop the gold square connector from its socket on the motherboard.


## Step 4

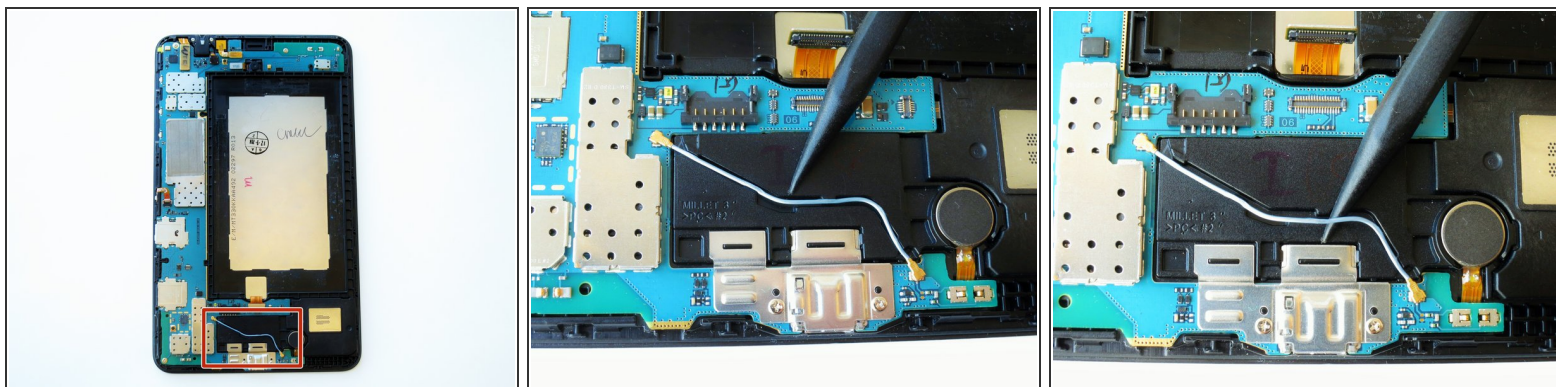

- Using the spudger gently wedge the blue wire out of its compartment.






## Step 5

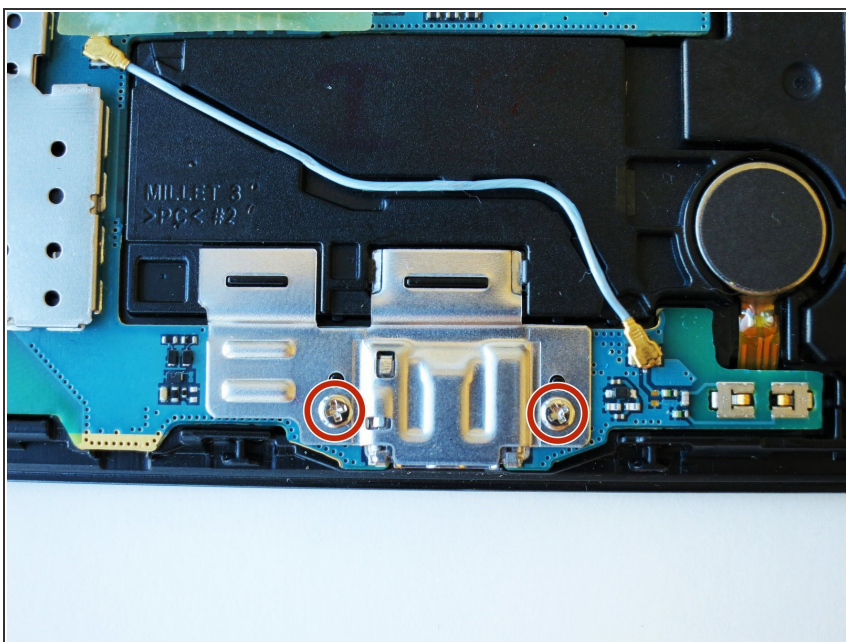


- Remove two 2 mm #000 Phillips screws securing the metallic charger port cover to both the logic board and the front panel.

## Step 6

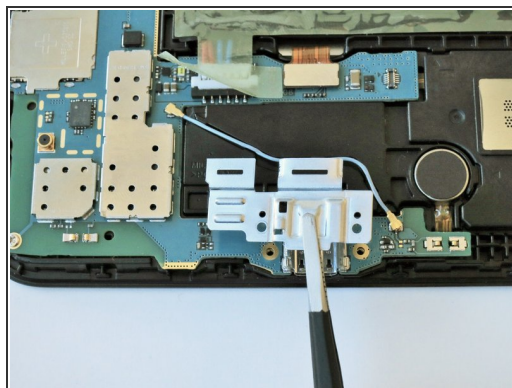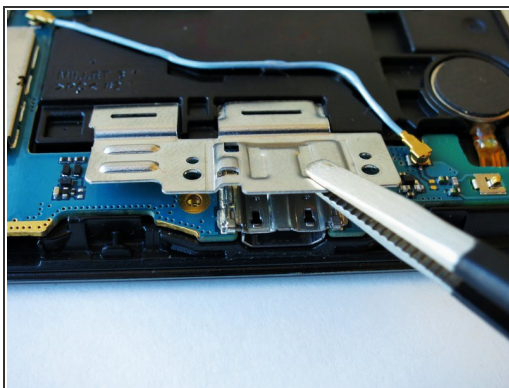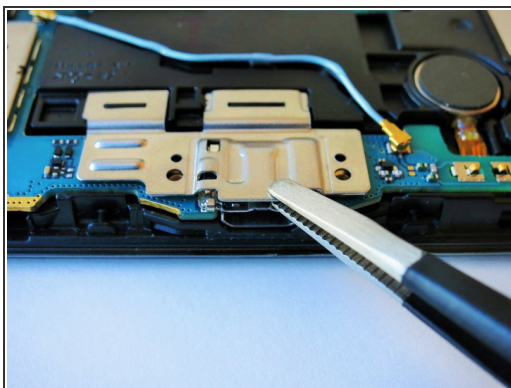


- Squeeze the metal charger port cover piece with the tweezers to gently lift it from its place.

## Step 7

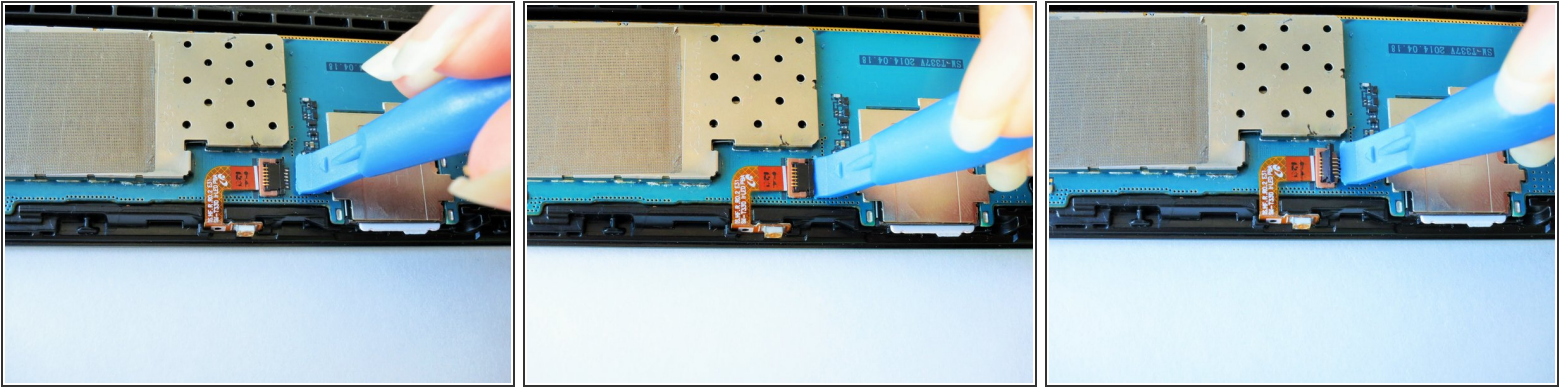

- Carefully insert the flat end of the blue plastic opening tool under the black plastic fastener and lift.
- ⓘ Rotate your tablet counter clockwise to facilitate the process.

## Step 8

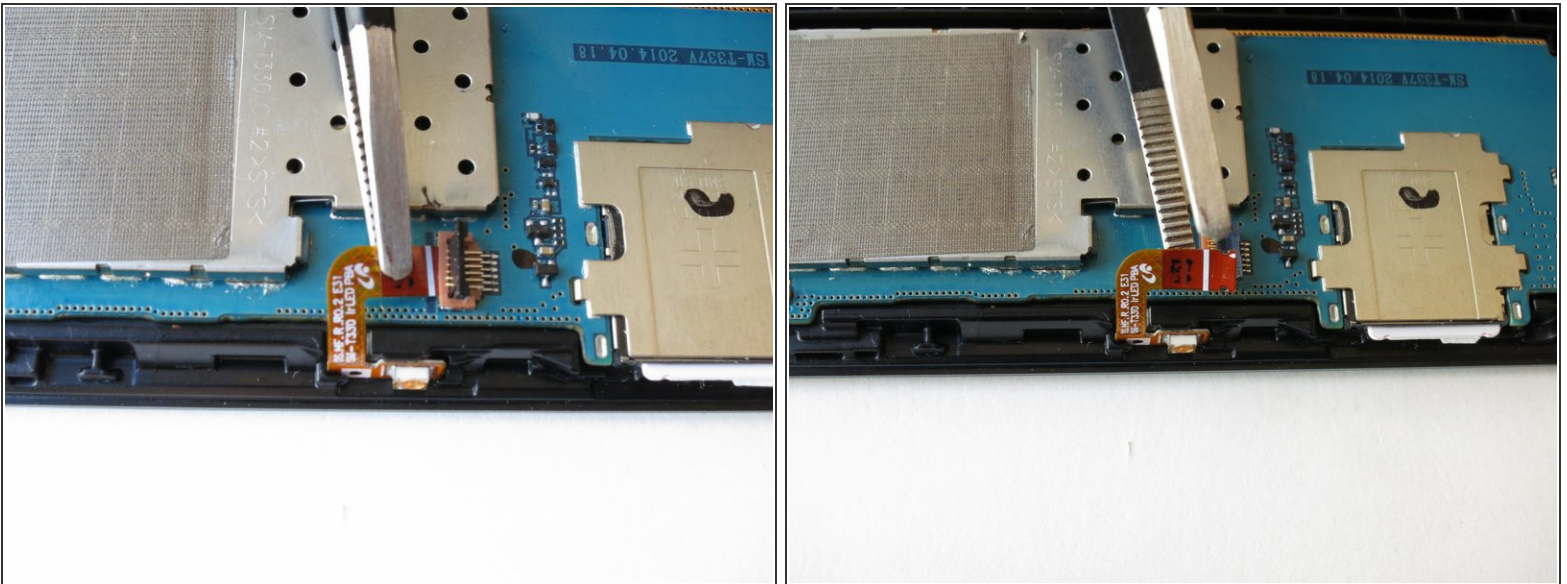

- Squeeze the golden cable with the tweezers and gently pull the cable to the left to free the end of the golden cable.
- ⓘ The golden cable is delicate so use gentle force.





## Step 9



- Remove three 2 mm #000 Phillips screws securing the mother board to the front panel.

## Step 10

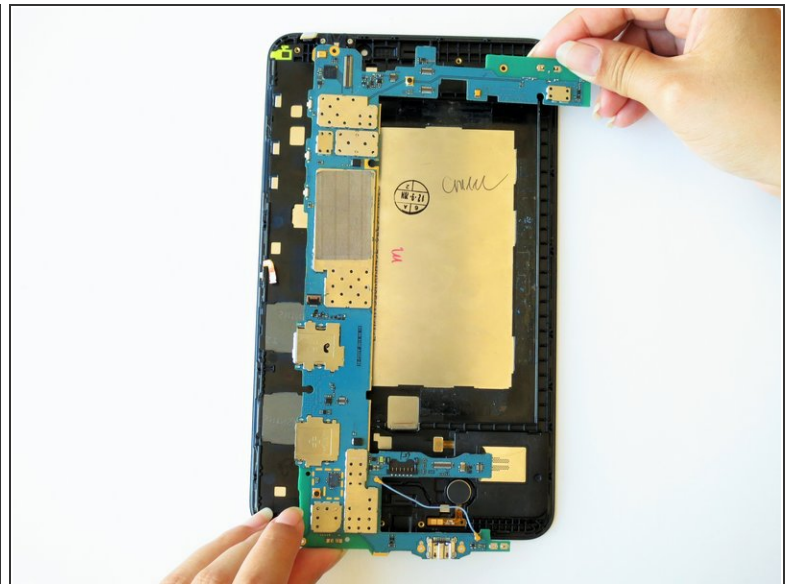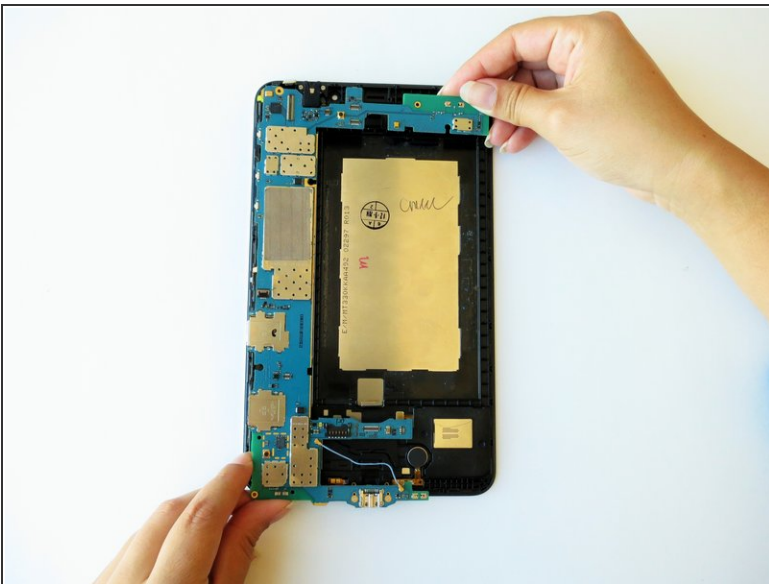

- Using your hands, hold the opposite ends of the mother board corners, and lift.

## Step 11 — Speaker



- Insert the opening tool tip into the crack between the speaker and device.

## Step 12



- Gently pry up on the speaker to disconnect the speaker from the device.

To reassemble your device, follow these instructions in reverse order.