



# Toshiba Satellite L655D-S5095 Chat Camera and Microphone Daughter Board Replacement

Replace the camera and microphone on your Toshiba laptop.

Written By: Robby



---

## INTRODUCTION

This guide will instruct you how to replace your Toshiba Satellite camera.

This will fix:


- A broken video chat camera
- A broken microphone



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Chat Camera and Microphone Daughter Board

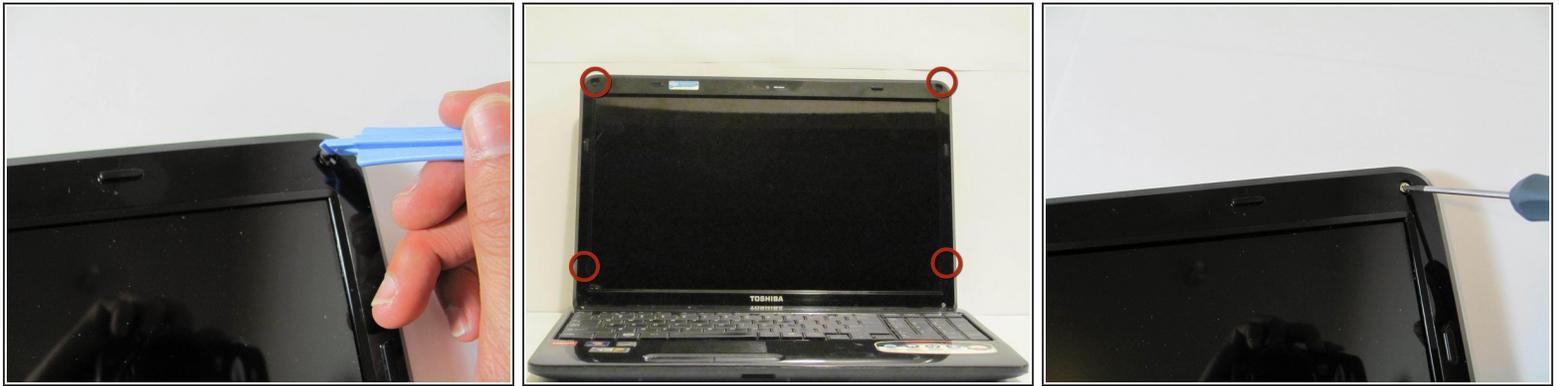

- Using a plastic opening tool, remove the four plastic stickers located on the four corners of the LCD screen assembly. These plastic stickers are covering screws.
- Use a Phillips #1 screwdriver to remove the now uncovered 5.75mm screws and place them to the side.



## Step 2

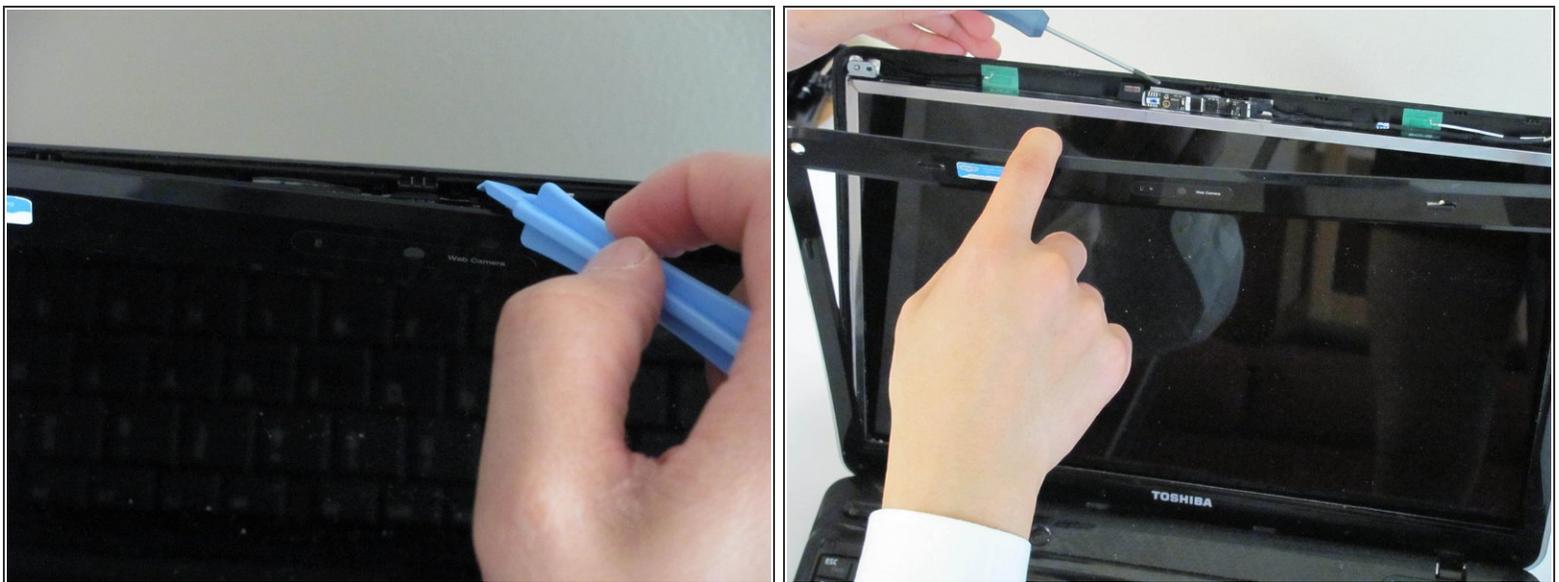

- With a plastic soft pry tool, open up the laptop display assembly by methodically prying from left to right. Be careful to not damage any internal circuitry.



**⚠ Do not** attempt to pry apart the bottom, the LCD assembly never gets fully disassembled in this tutorial.

### Step 3

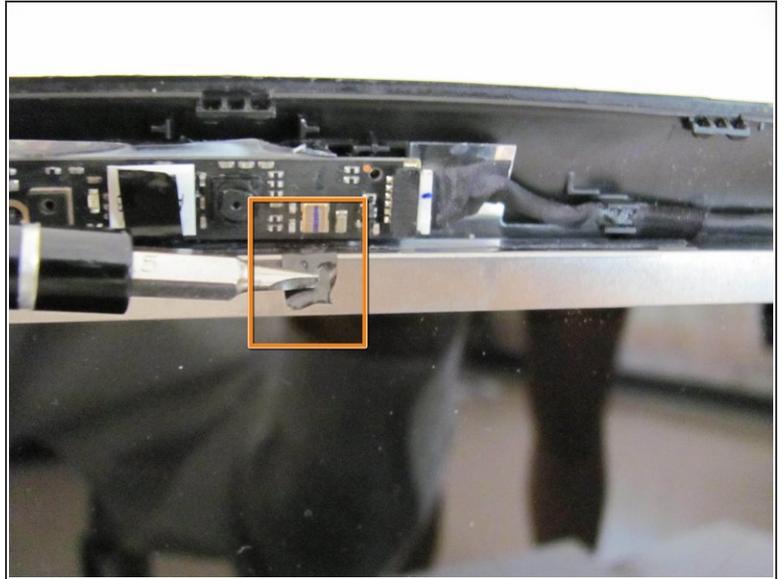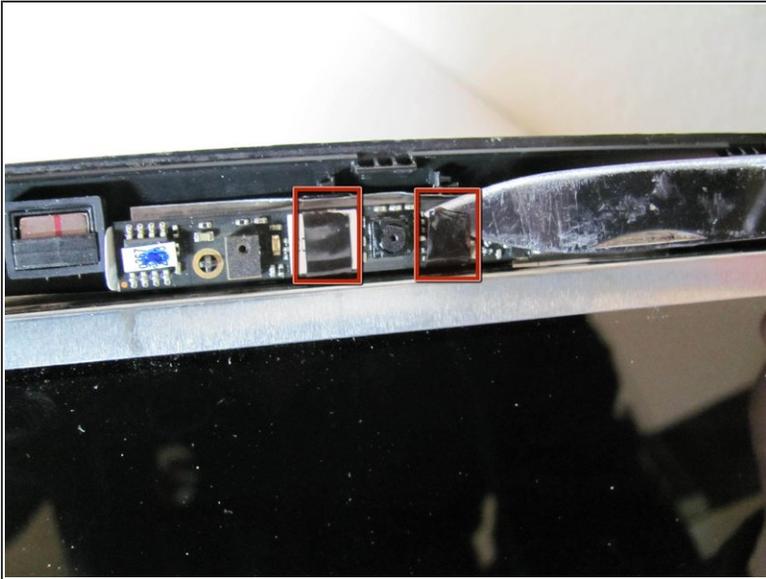

- Remove the 2 pieces of black tape using a sharp tool to free the camera board, note that the camera board is still connected to a cable.

### Step 4

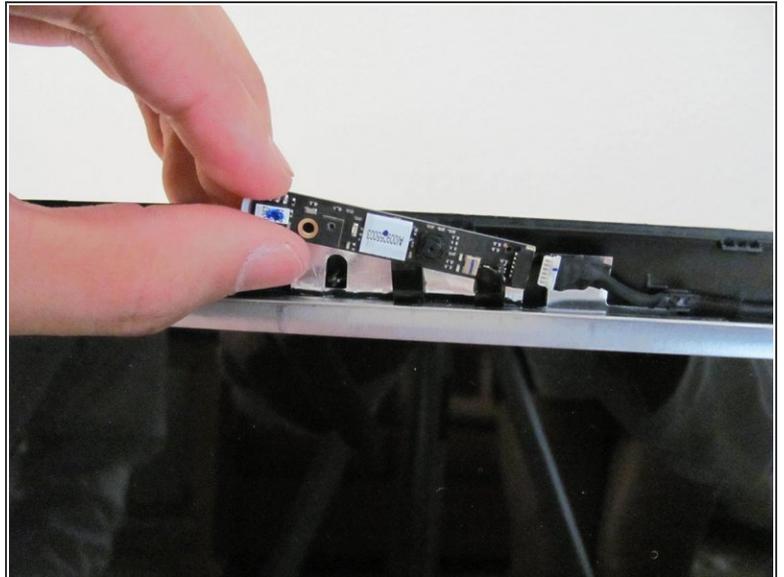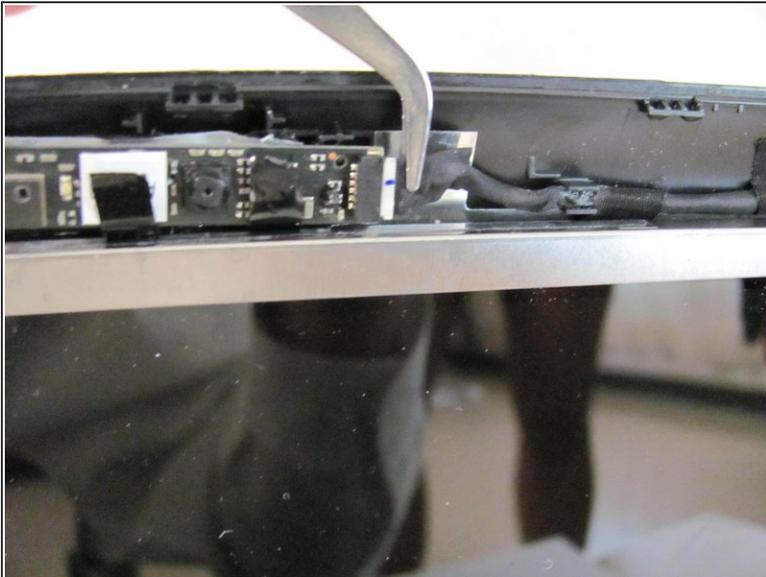

- Carefully disconnect the camera board from the laptop. We used tweezers.

To reassemble your device, follow these instructions in reverse order.