



JBL L26 Speaker Replacement

Use this guide to replace the speaker for your JBL L26 speaker system. Model number L26.

Written By: Nathnael Dubale



INTRODUCTION


This guide will show you the step by step process of replacing a speaker for a JBL L26 speaker system. The process won't be too difficult, but be careful when removing parts such as the terminal connector because they are fragile. There are similar JBL speakers like the model L40 which follow the same steps.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)
 - [Groove Joint Pliers](#) (1)
-

Step 1 — Speaker

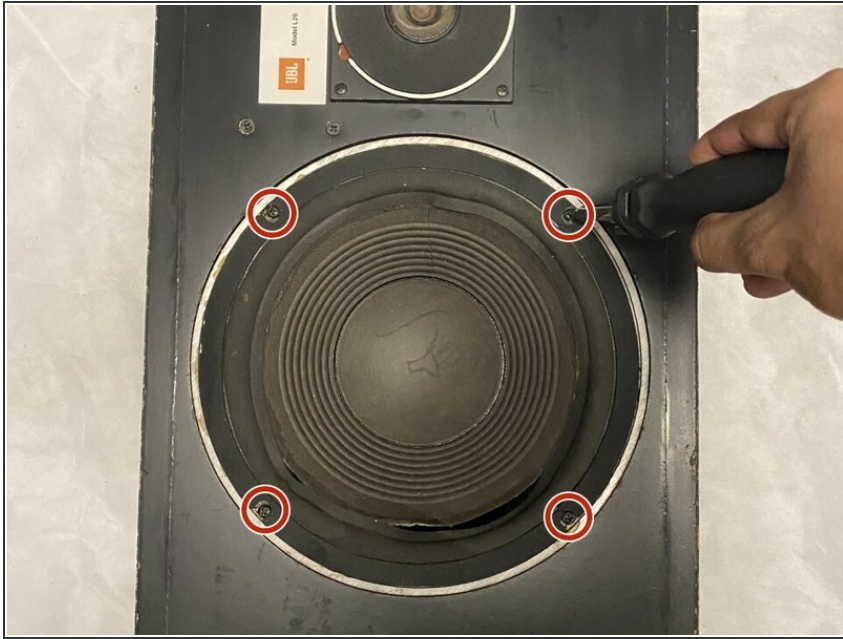


- Remove the four 6.4 mm Phillips #2 screws from the front of the speaker.

Step 2

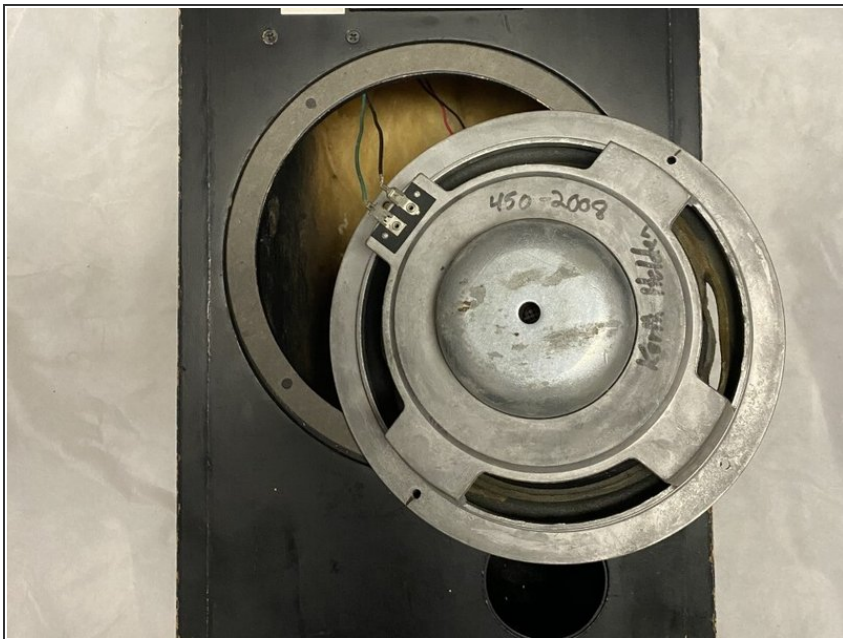


- Pull the speaker out of the frame and lay it onto the side.

Step 3

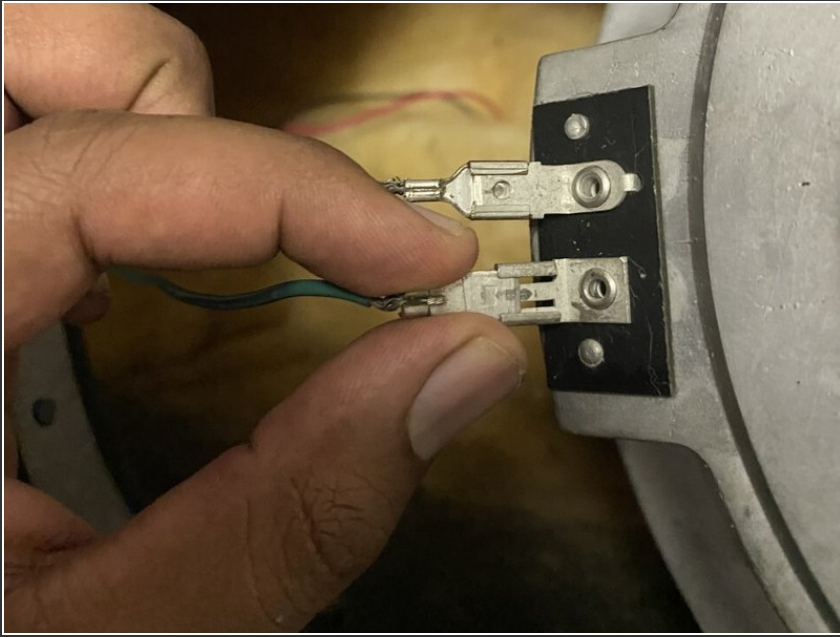


- Unlatch the green wire by pulling on the terminal connector and not the wire.

Step 4

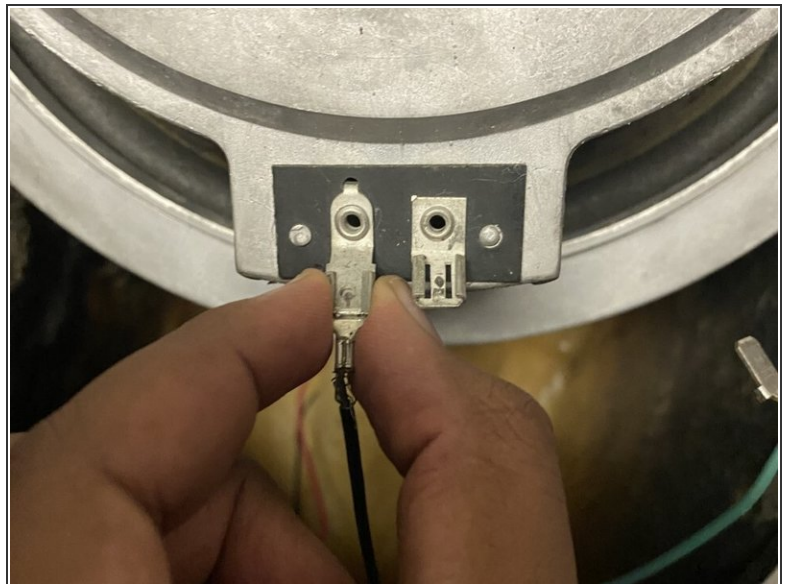



- Use a small prying tool to pry the terminal connector off of the tap.
- After you unlatched both edges, pull the black wire out.

Step 5

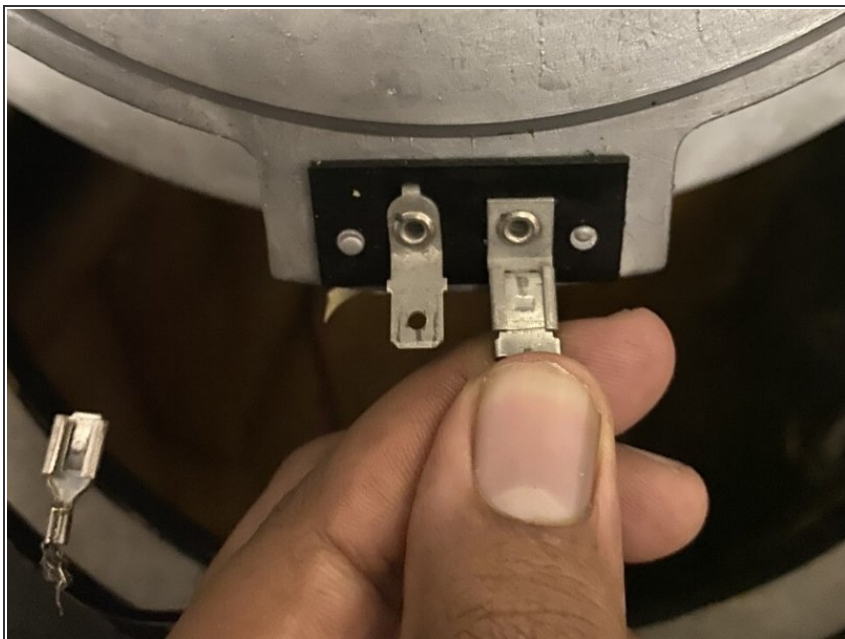


- Get your replacement speaker and connect the green wire by pushing the terminal connector onto the tap.


Step 6

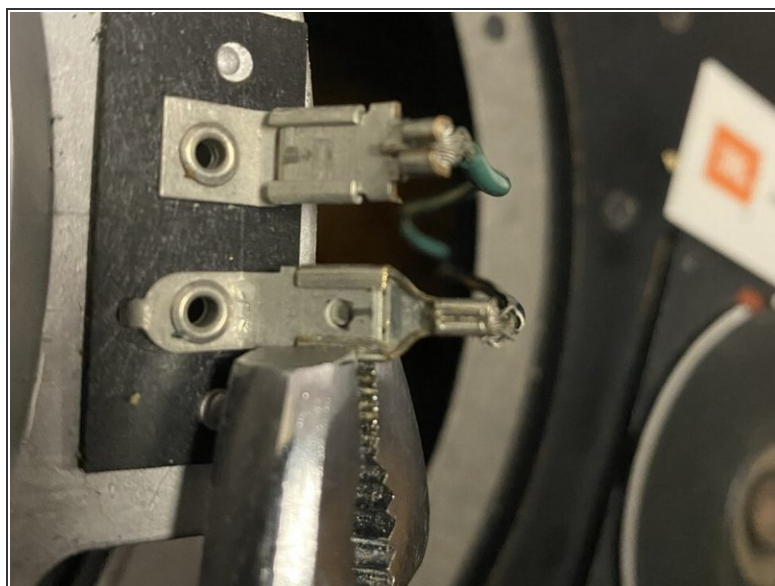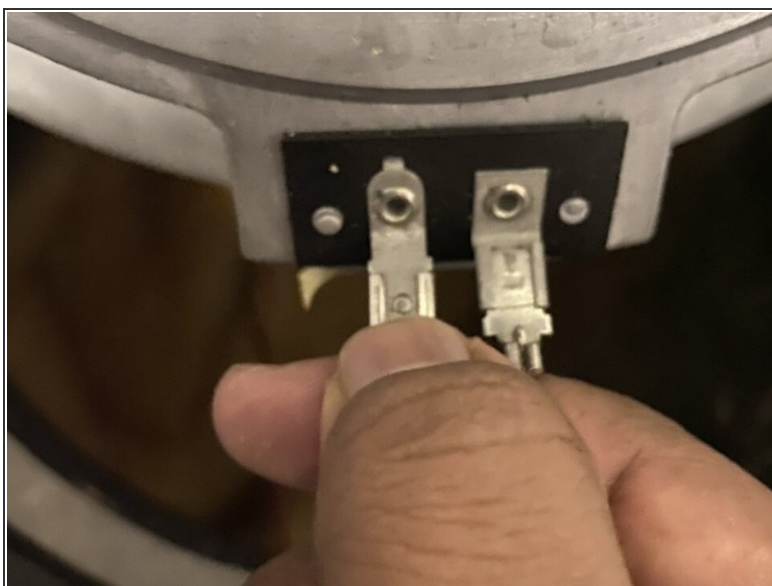

- Connect the black wire by attaching the terminal connector onto the tap.
- Use a clamping tool to clip the edges toward the tap.

 Be careful not to clamp too hard so you don't damage the tap.

Step 7

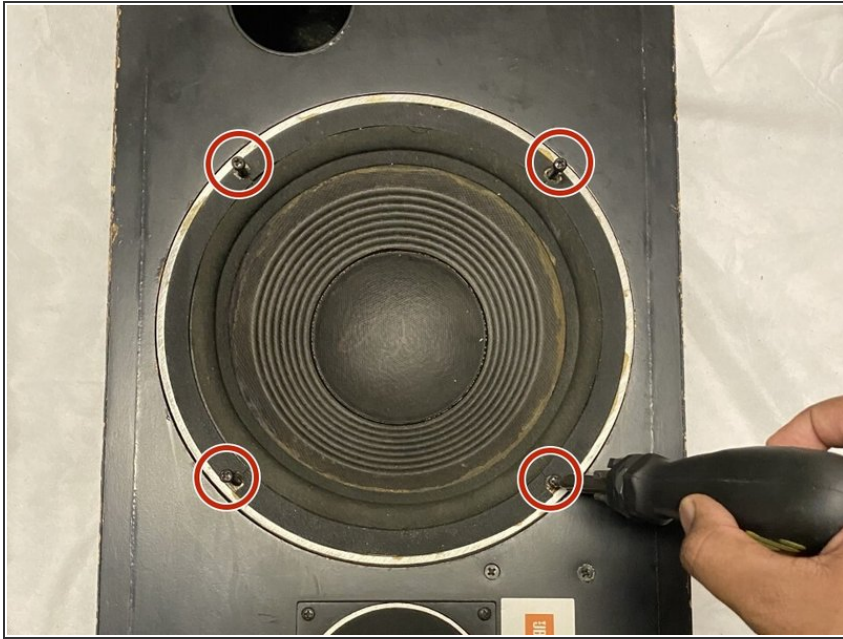

- Place the new speaker onto the frame and screw the four 6.4 mm Phillips #2 screws back in.

To reassemble your device, follow these instructions in reverse order.