



Eleaf iJust 3 Disassembly

Teardown of electronic cigarette named Eleaf iJust 3

Written By: Szymon Milewski



INTRODUCTION

iJust 3 is third edition in the series of iJust's. It's well known among users all around the world. During using it you can encounter most common problem - putrescent fire button.

TOOLS:


- [Vise](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-

Step 1 — Eleaf iJust 3 Teardown



- Specification of iJust 3:
 - Resistance range: 0.1 Ohm - 3.0 Ohm
 - Battery voltage: 3.7V
 - Max power: 80W

Step 2

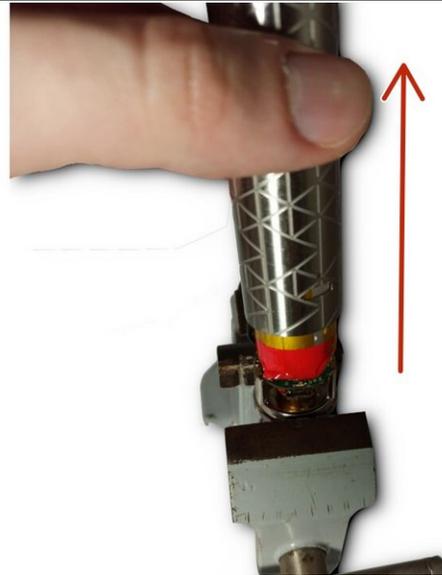

- Insert stick into vice (attach it to the top part) and slowly pull up by "tube part"

 Be carefull! If you will pull it too fast and too strong, you can break away battery

Step 3



- Unscrew two screws on the sides of board.

Step 4



- Thats all, thanks for your attention