



MiTM Air Compressors AM1PH6508HD 2012

Belt Guard Bracket Replacement

This is a prerequisite-only guide. Use this guide to remove or replace the belt guard bracket on a Mi-T-M Air Compressor AM1-PH65-08HD 2012.

Written By: Kyle Smith



INTRODUCTION

Use this guide to remove or replace the belt guard bracket on a Mi-T-M Air Compressor AM1-PH65-08HD 2012.

This is a prerequisite-only guide. This guide is part of another procedure and is not meant to be used alone.



TOOLS:


- [7/16" Wrench](#) (1)
 - [7/16" Socket Wrench](#) (1)
 - [1/2" Socket Wrench](#) (1)
-

Step 1 — Remove the belt guard bracket bolts



- Use a 7/16 inch socket to remove the nuts and accompanying bolts securing the belt guard bracket to the rear belt guard.
- ⓘ You may need to hold the bolts in place with a 7/16 inch wrench during removal.
- ⓘ Don't misplace the washers that are removed during this step.
- ☑ During reassembly, you may need to slightly loosen the two head bolts securing the belt guard bracket in order to properly align the bracket with the mounting holes in the rear belt guard.

Step 2

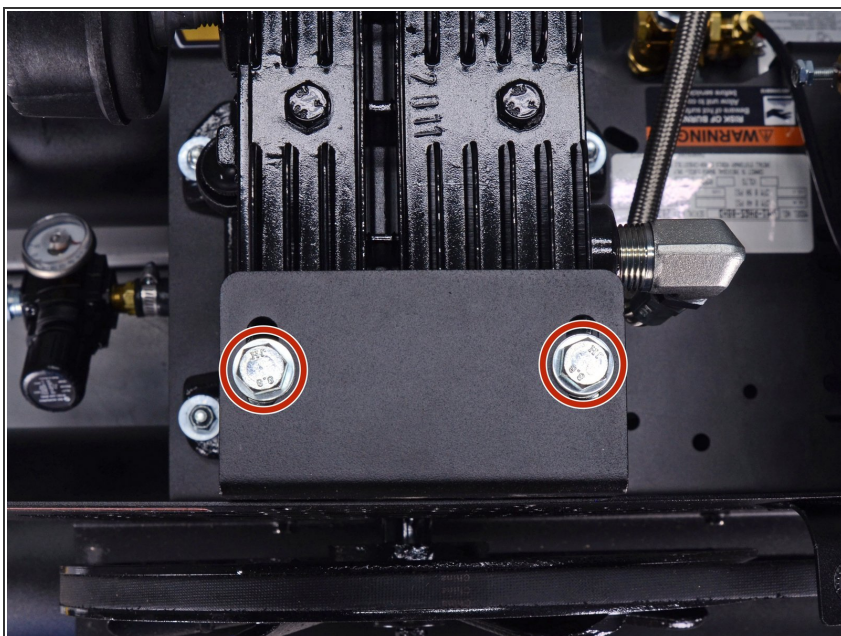


- Use a 1/2 inch socket to remove the two bolts securing the belt guard bracket to the cylinder head.
- ⓘ Don't lose the loosened spacers underneath the belt guard bracket.
- ⓘ Don't misplace the washers that are removed during this step.

Step 3 — Remove the belt guard bracket



- Lift the belt guard bracket straight up to remove it.

Step 4 — Remove the spacers

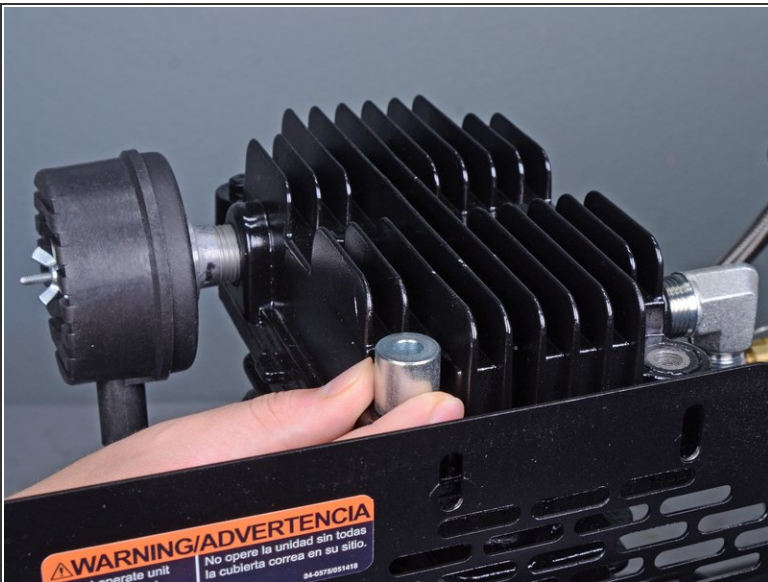

- Remove the four spacers from the top of the cylinder head.

To reassemble your device, follow these instructions in reverse order.