



Dell Latitude E4300 Coin-cell battery Replacement

This is a guide on how to replace the Coin-cell battery for the DELL Latitude E4300.

Written By: Hezekiah Brown


Step 1 — Remove the battery, LED dashboard cover, and keyboard.



⚠ Shut down your computer. Disconnect all power sources before opening the computer cover or panels.

- Remove the battery, LED dashboard cover, and keyboard.

Step 2 — Disconnect battery cable from system board; Lift battery out of compartment.

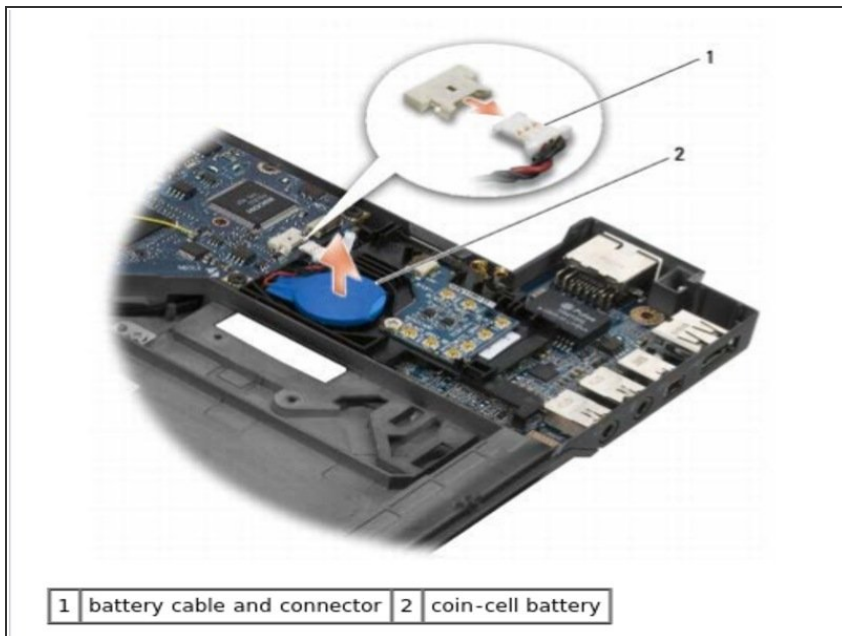

- Disconnect the battery cable from the system board.
- Lift the battery out of the battery compartment.

Step 3 — Reconnect battery cable to system board; Reseat battery in compartment.

- Reconnect the battery cable to the system board.
- Reseat the battery in the battery compartment.

Step 4 — Replace the keyboard, LED dashboard cover, and battery.

- Replace the keyboard, LED dashboard cover, and battery.