



# Noisy Percussion Massager Repair

To fix the noisy handheld muscle massager, all...

Written By: jtalbin



# INTRODUCTION

To fix the noisy handheld muscle massager, all you need to do is tighten the loose screw that drives the massage head. This can be done using standard screwdrivers and thread lock



## TOOLS:

Phillips #1 Screwdriver (1)

---

### Step 1 — Tools - #1 & #2 Phillips + thread locker



- Thread lock can be found at any hardware store.

## Step 2 — Remove the rear cover



- Twist counter-clockwise very snug. It only moves about 1/4 of an inch - the second picture shows the slide lock slots.



## Step 3 — Remove Two Screws from Housing



- There were actually two rubber plugs covering the screws that I had to work out... Not hard.





## Step 4 — Open It Up

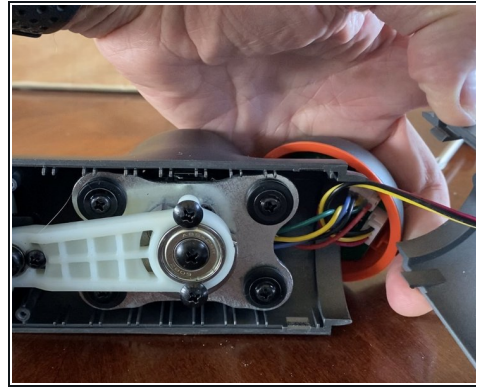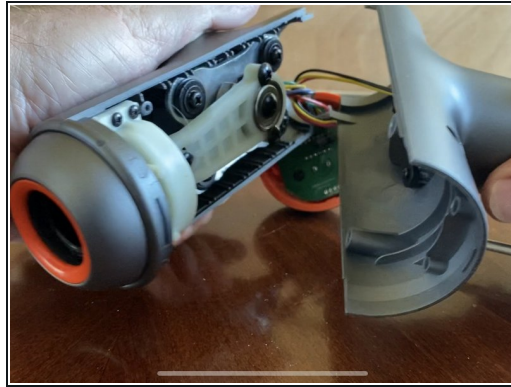


- Case opens pretty easy but you can see there are two tabs toward the back of the case ... if it sticks, a simple pinch might help you open it up.

## Step 5 — Remove screw - Apply Thread Lock - Re install

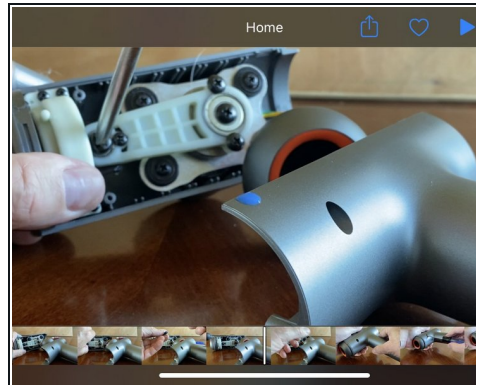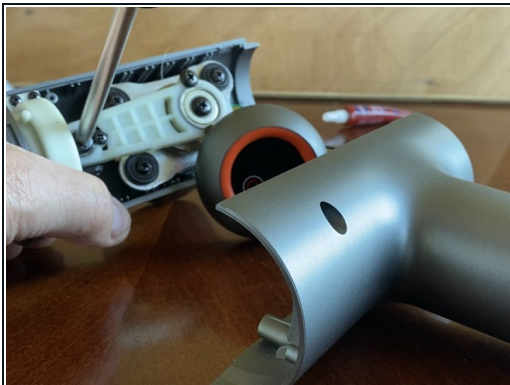

- Insert wisdom here.

## Step 6 — Re-assemble the case

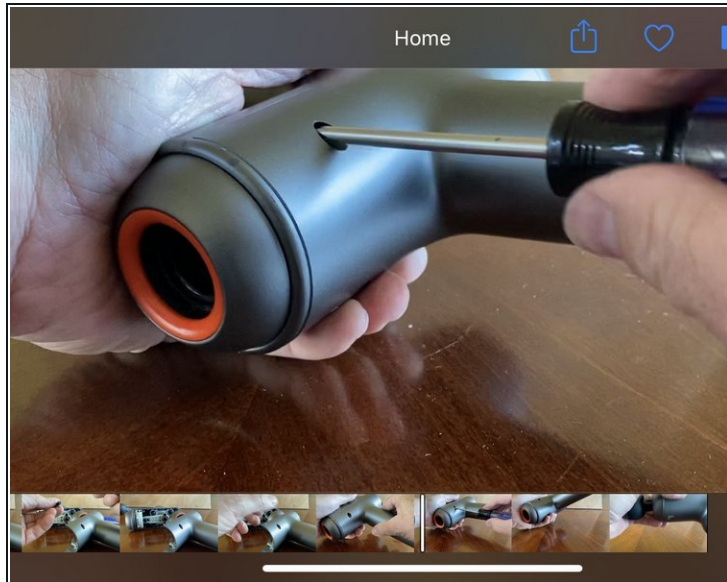

- Surprising how much noise a loose screw can cause.

To reassemble your device, follow these instructions in reverse order.