



Philips DC320 37 Speaker Replacement

Follow the procedure outlined in this guide to...

Written By: Graham Rolph



INTRODUCTION

Follow the procedure outlined in this guide to remove and install a speaker.

TOOLS:

Phillips #2 Screwdriver (1)

Spudger (1)

Phillips #00 Screwdriver (1)

Step 1 — Docking entertainment system



- Pry off the four white feet with the pointed end of the spudger

Step 2




- Gently unscrew the four 15.5 mm Phillips #2 screws that hold the bottom panel to the dock.

Step 3



- Use the flat end of the spudger to pry the lid off from the two connectors holding it to the body of the dock.
- ⚠ The connectors on the panel are fragile and may break.

Step 4

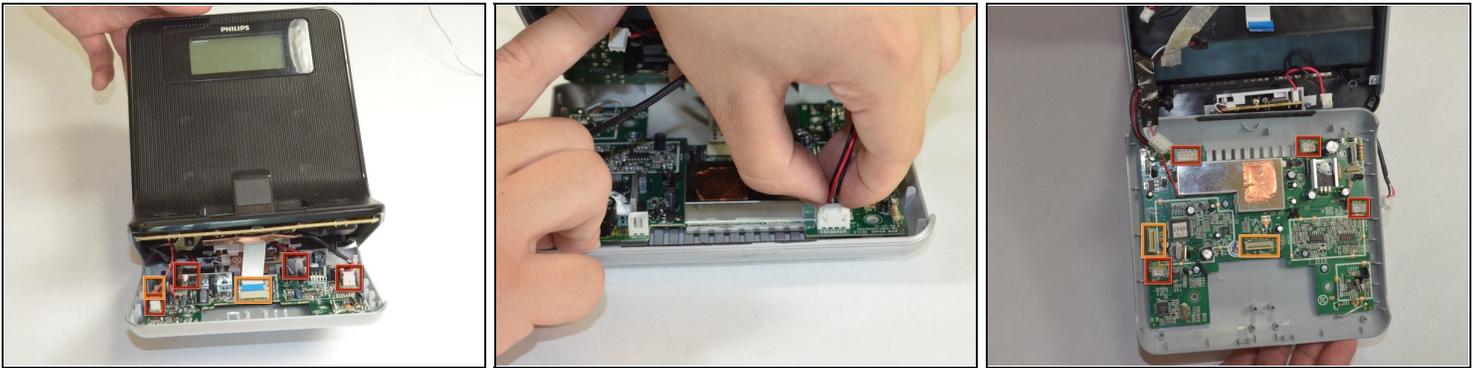


- Carefully pull up and out the four electrical connectors and two ribbon connectors that connect the bottom panel to the dock.
 - Electrical Connectors
 - Ribbon Connectors

⚠ The cables do not have a lot of slack in them. Be careful not to break the connectors.


⚠ One wire is soldered onto the bottom panel. Be careful not to break this bond.

Step 5 — Speaker

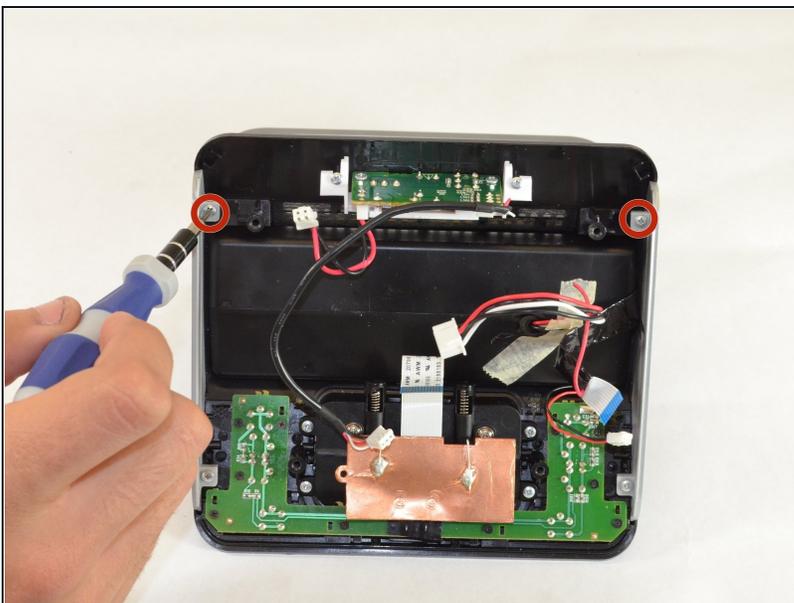


- Unscrew the two 6 mm Phillips #00 screws attaching the back panel to device.

Step 6

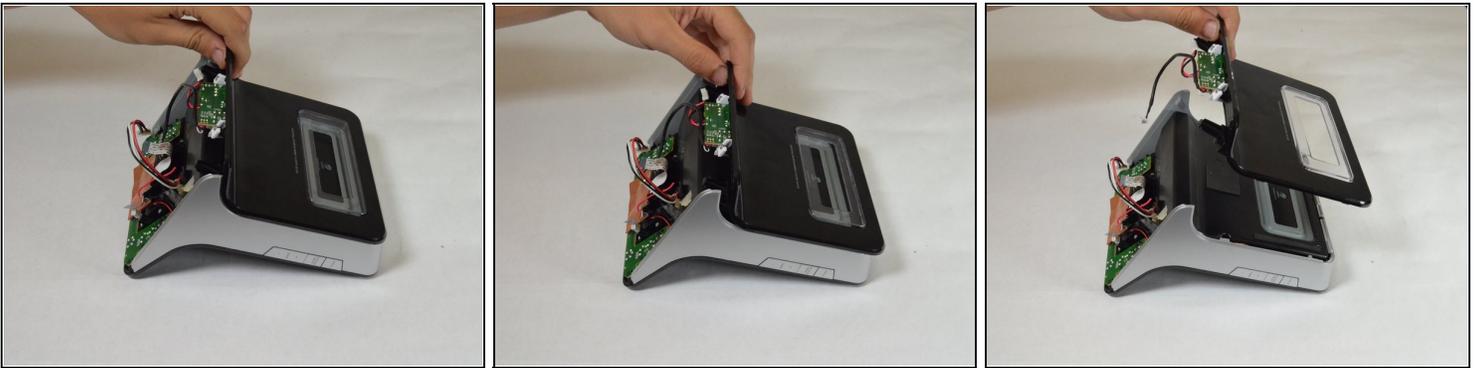


- Slide the back panel towards top of the device and lift away from the device to detach back panel.

Step 7

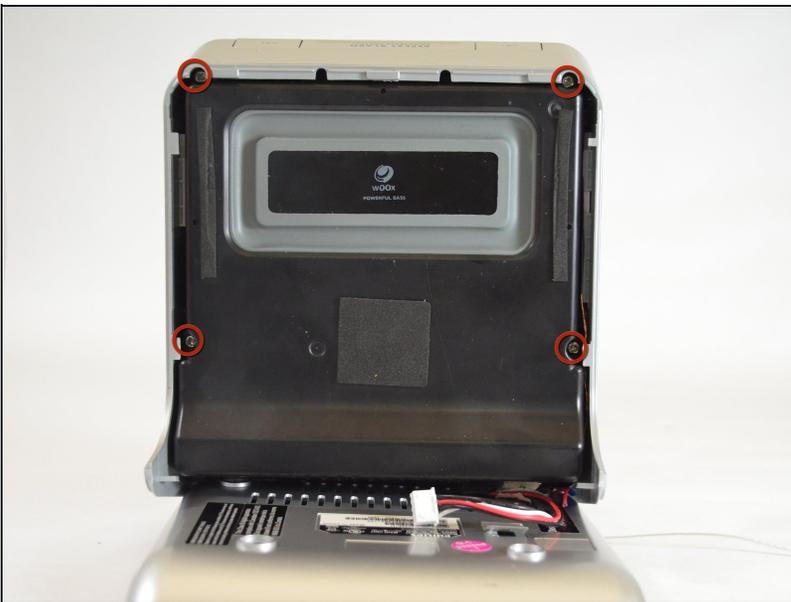

- Unscrew the four 16 mm Phillips #2 screws attaching the speaker unit to device.

Step 8

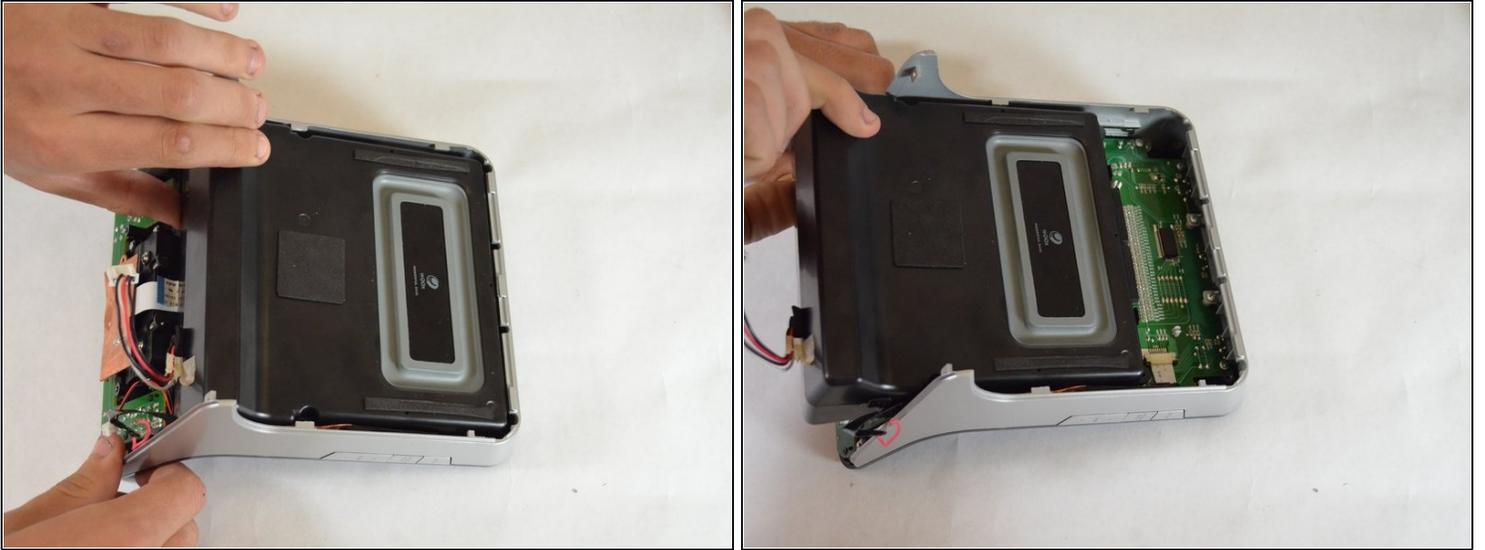

- Slide the speaker towards the bottom of the device to remove.

To reassemble your device, follow these instructions in reverse order.