



Disassembling Canon PowerShot S80 Outer Casing

This guide will allow you to remove the outer...

Written By: BrettH



INTRODUCTION

This guide will allow you to remove the outer casing of the Canon PowerShot S80. You may need to use this guide if it's necessary to access the internals of your camera.

TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Outer Casing




- Remove the knot on the wrist lanyard.
- Remove the battery and the memory card.

Step 2




- Begin removing the screws on the bottom of the outer casing.
- Next, remove the rest of the screws from the outer casing.

Step 3

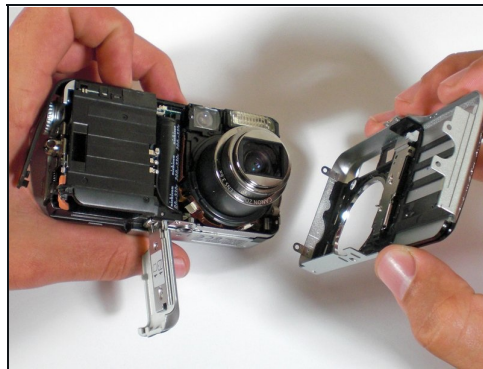

- Gently pull the front cover off of the camera.

Step 4

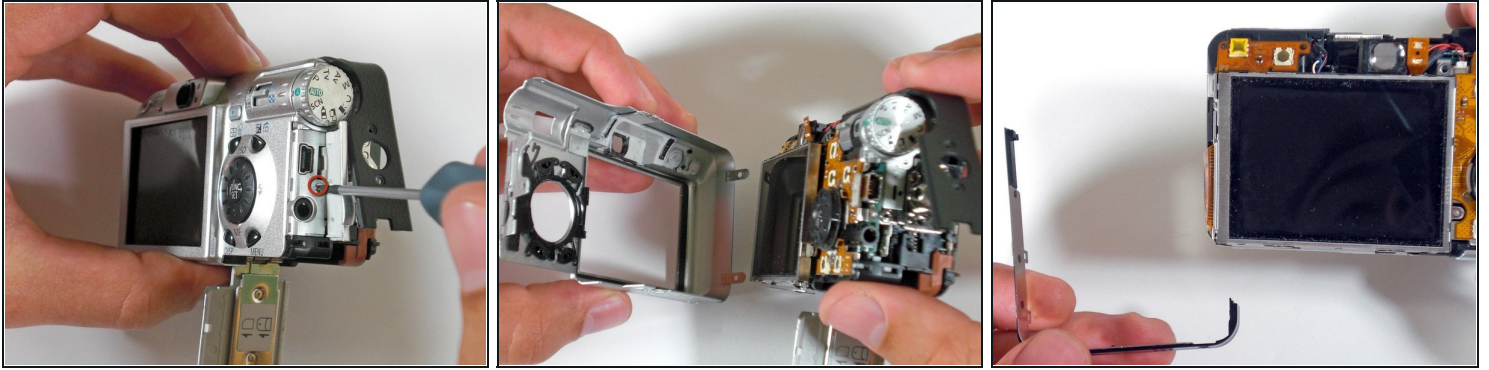

- Open the "A/V Out Digital" cover. Remove the screw inside.
 - Gently pull off the back casing.
 - Remove the black "L" shaped piece of metal.
-

To reassemble your device, follow these instructions in reverse order.