




Lenovo IdeaPad U530 Touch Hard Drive Replacement

This is a step-by-step guide on how to replace...

Written By: Jack Dunn

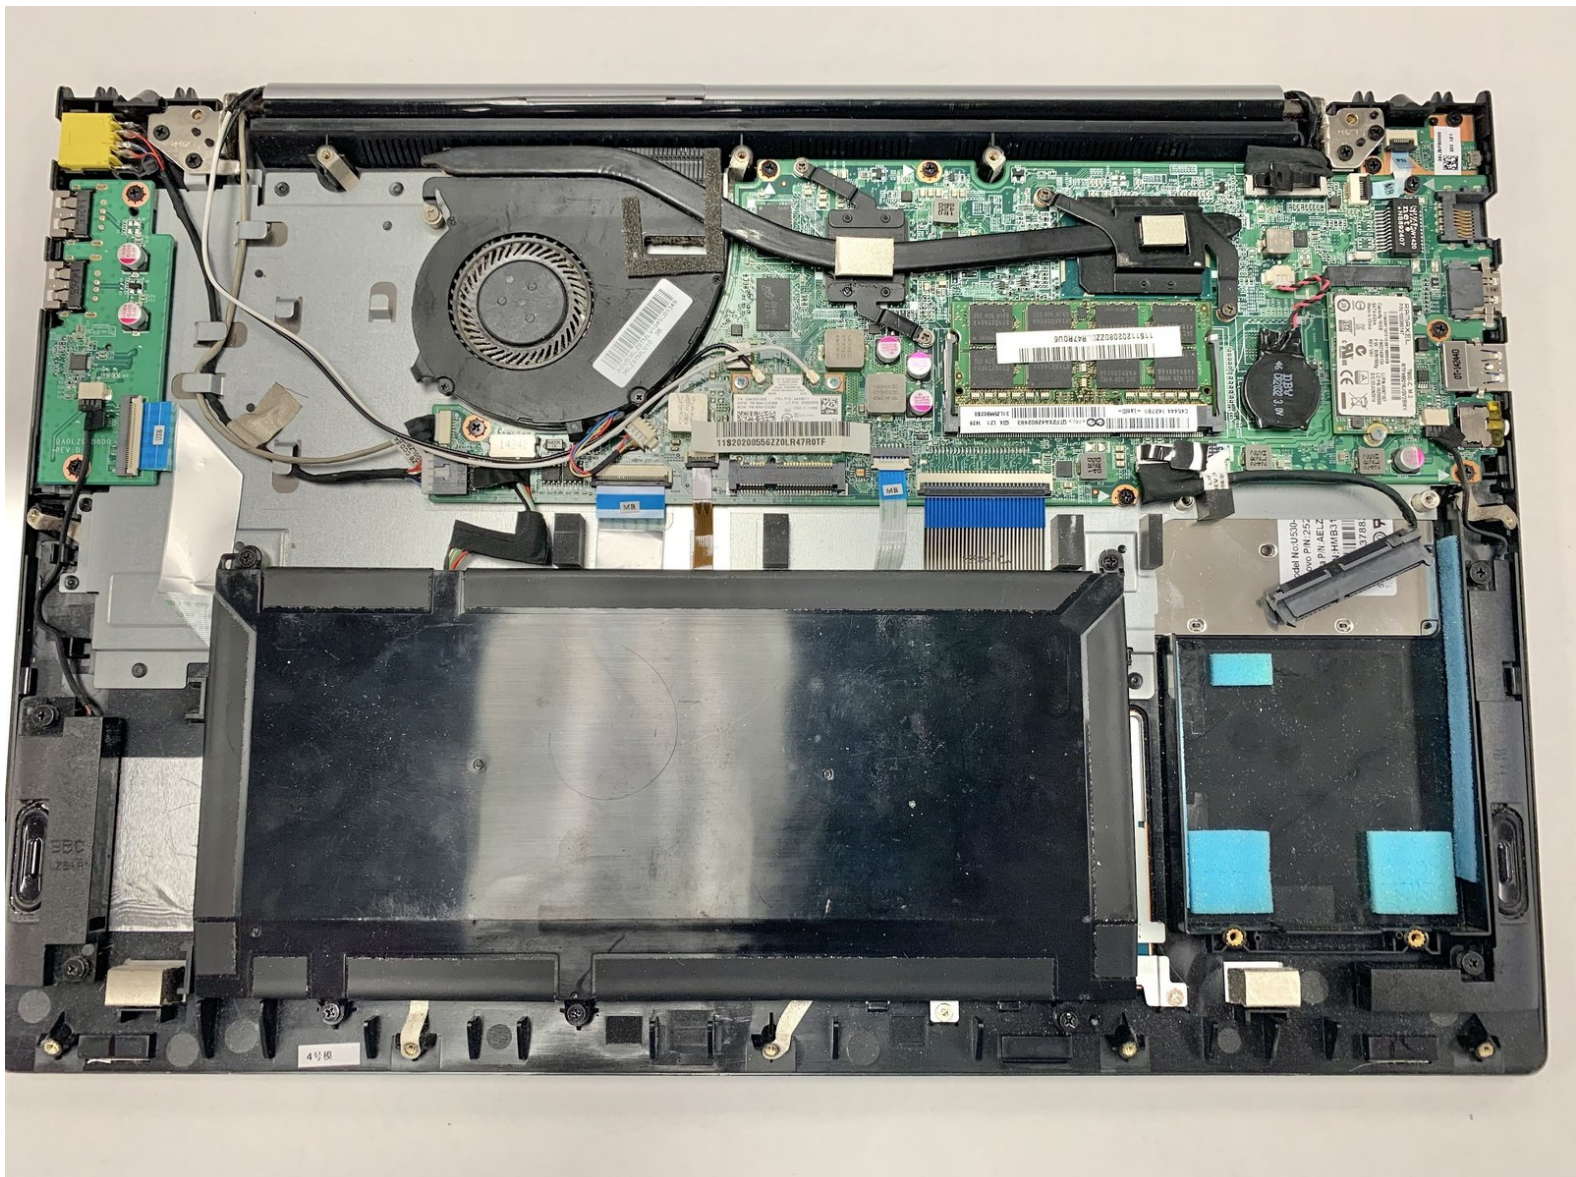

INTRODUCTION

This is a step-by-step guide on how to replace the hard drive inside Lenovo IdeaPad U530 Touch laptop.

Symptoms related to hard drive failure are as follows:

- blue screens,
- loud scratching or clicking noises,
- and a “file not found” error when opening a file.

Make sure to wear gloves when operating inside the device.



TOOLS:

- [JIS #1](#) (1)
- [iFixit Opening Tool](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:


- [1 TB SSD](#) (1)
- [250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [2 TB SSD](#) (1)

Step 1 — Battery




- Remove the back panel by removing all screws. Use a PH000 screwdriver head.
- Make sure to also remove the hinge screws.

Step 2

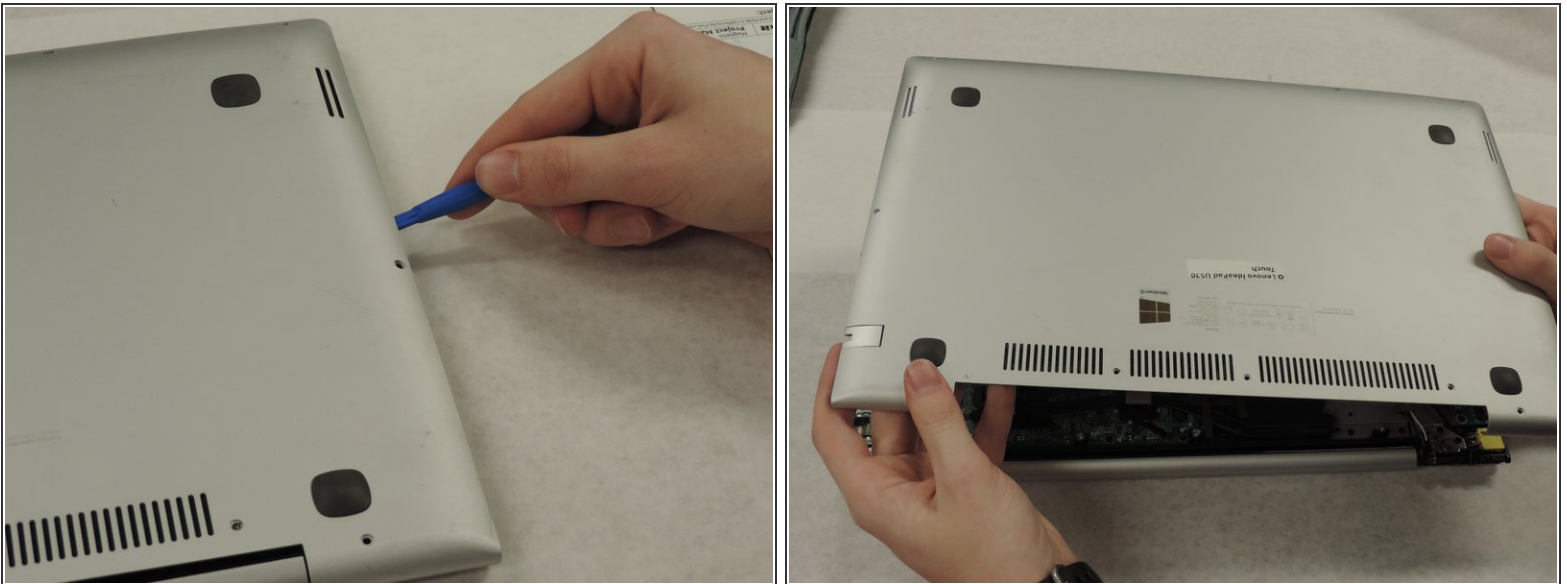



- To remove the panel, use a plastic opening tool to prevent any damage.

Step 3

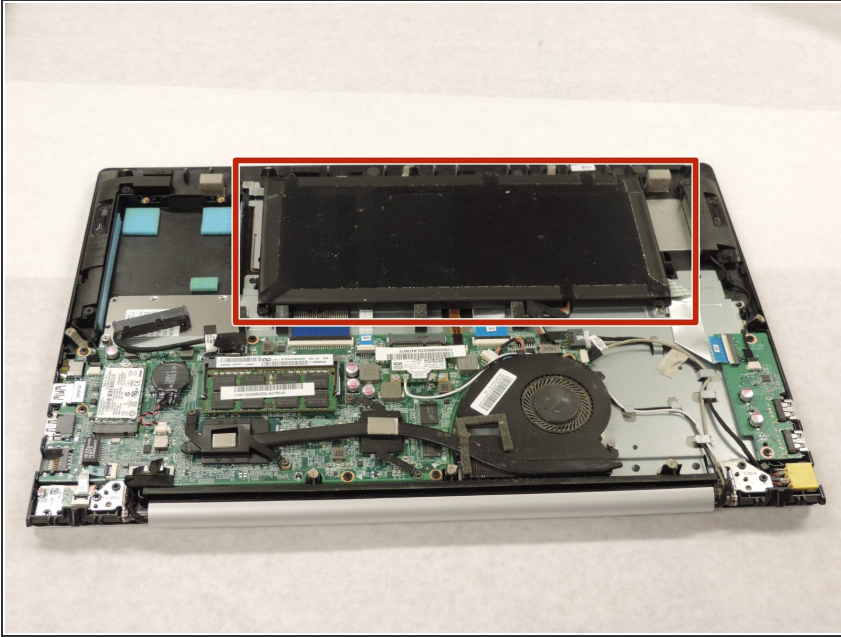


- Locate and assess the battery. Pictured in the upper right area of the computer.

Step 4

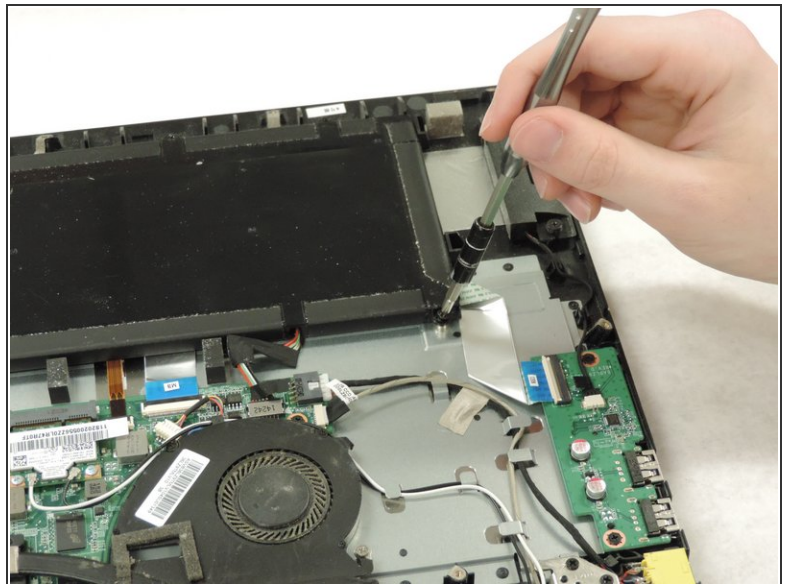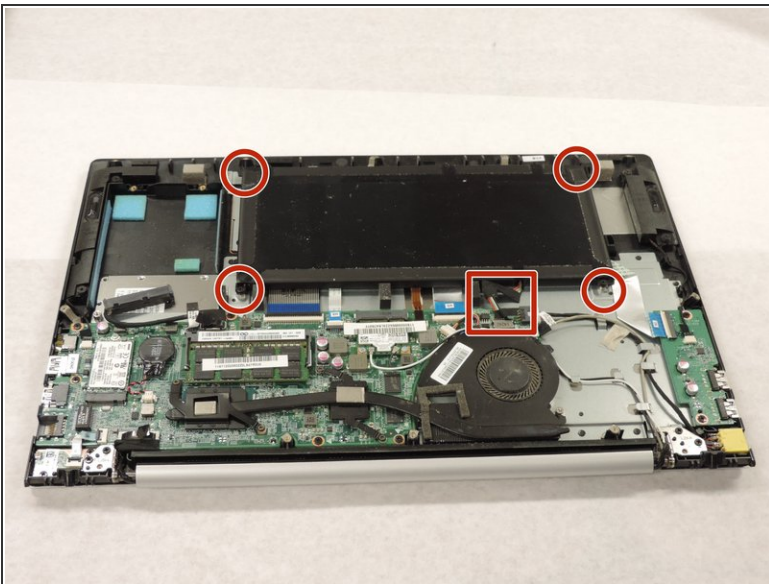


- Locate and remove all screws attaching the battery to the hull of the computer. It is recommended that you use a JIS #1 screwdriver head for this task.
- Be careful to keep track of all removed screws.

Step 5

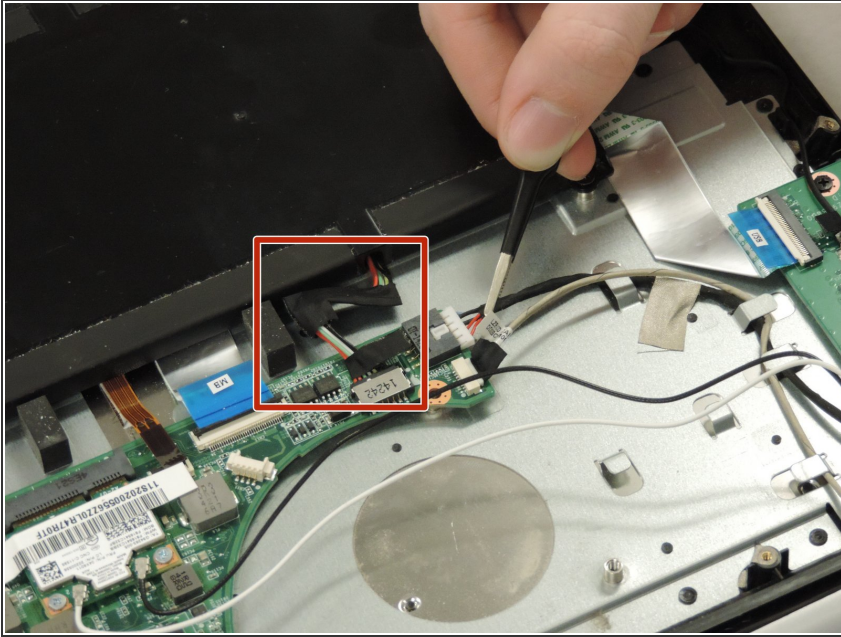


- Detach the connection from the battery to the motherboard. This is the only connection that needs to be disconnected for the battery.
- To remove the connection, please pull firmly, as it well secured.

Step 6

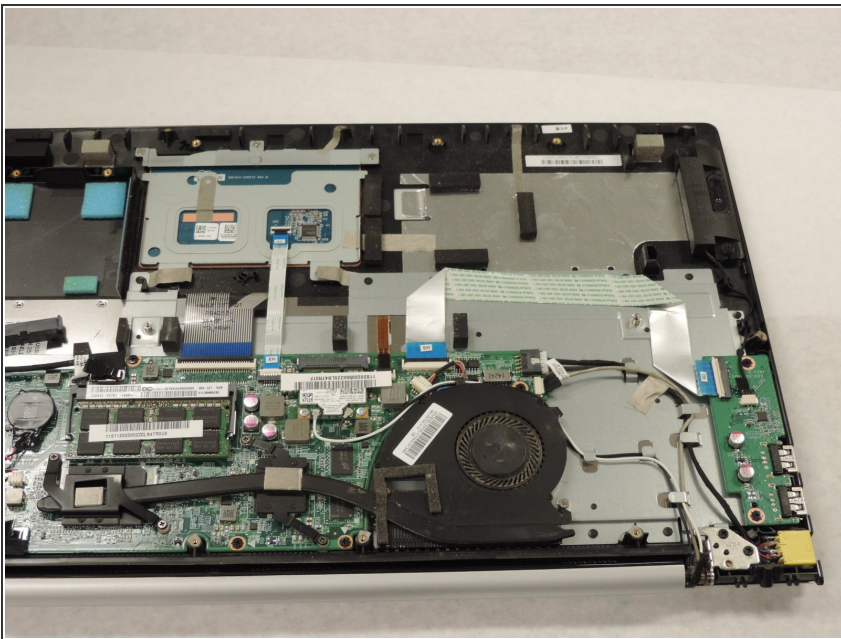

- Simply lift the battery out of the computer, and acquire a replacement.

Step 7 — Hard Drive

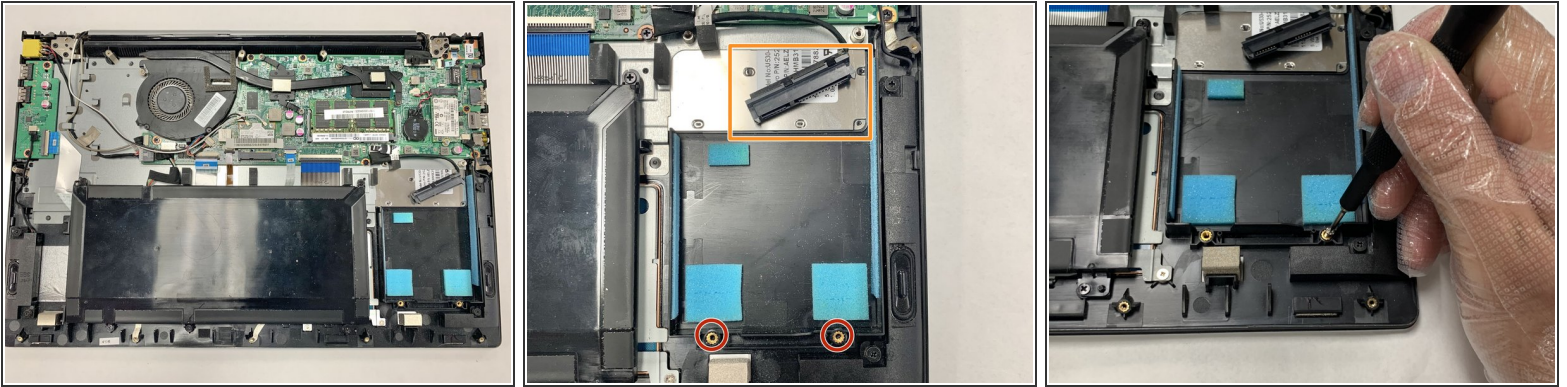

- Remove two 3 mm screws connecting the hard drive to the computer base using a JIS #1 screwdriver.
- Detach the connection from the hard drive to the motherboard.
- Remove the hard drive from the laptop.

To reassemble your device, follow these instructions in reverse order.