




# Nokia 1100b RH-36 Screen Replacement

Replace a cracked or defective screen in your Nokia 1100b.

Written By: JSwan

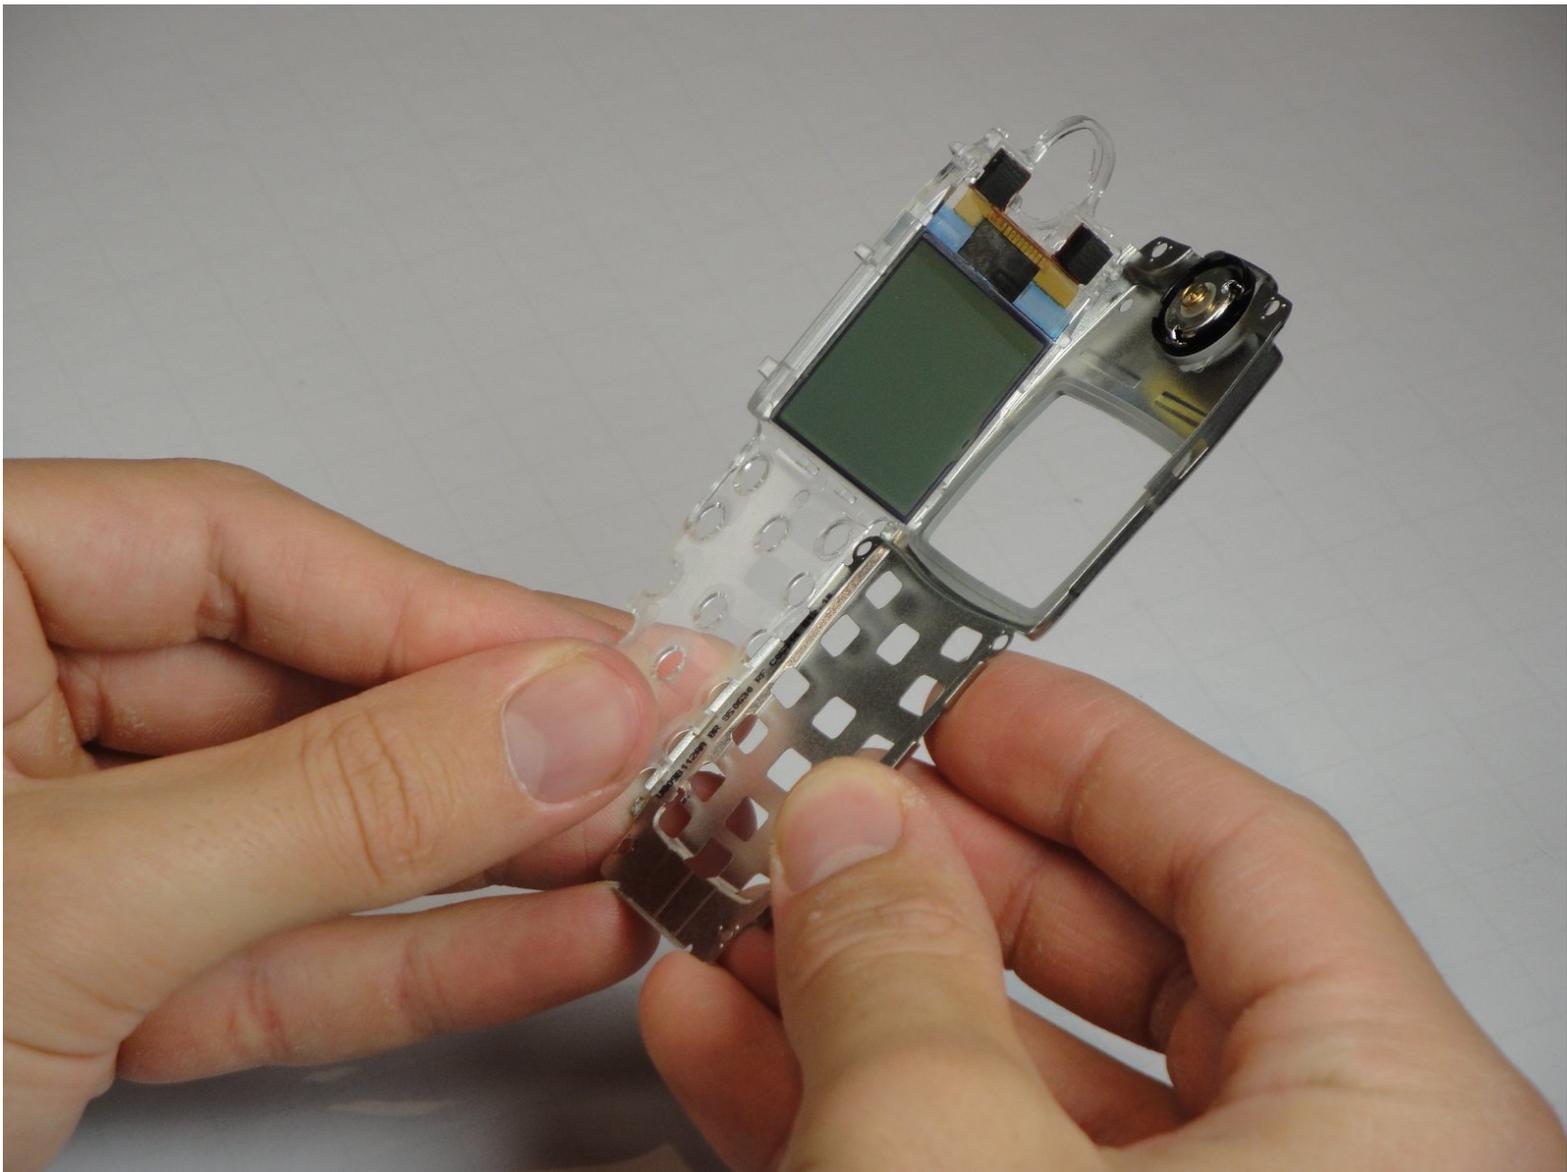

---

## INTRODUCTION

Use this guide to replace the screen in your phone.

---

### TOOLS:


- [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery Cover



- Flip the phone over so that the screen faces down.
- Press the gray button on the battery cover and slide it down off the back of the phone.

## Step 2 — Battery

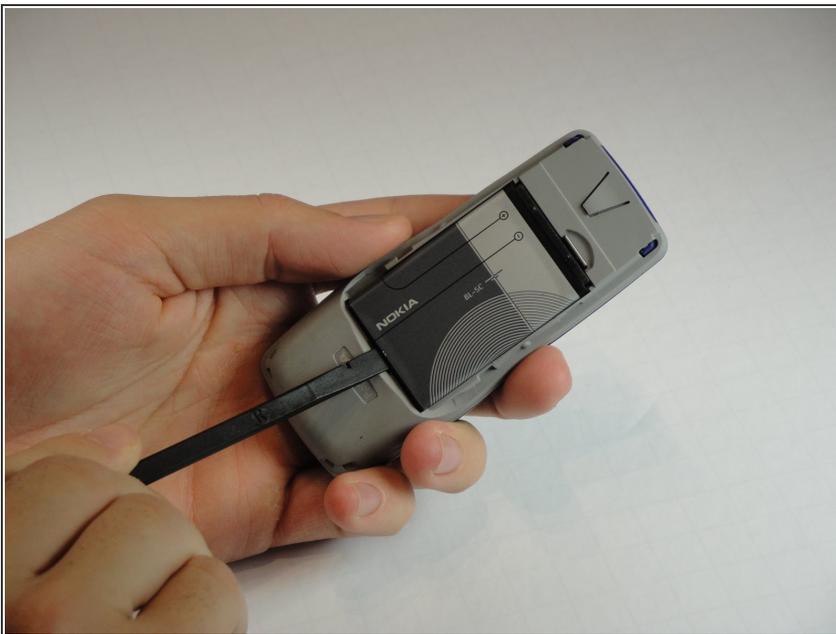

- Wedge the flat end of the spudger into the small indent next to the Nokia logo on the battery.
- Gently pry the battery out of the phone.

### Step 3 — Removing Nokia 1100b RH-36 Front Cover





- Firmly grip the back of the casing.
  - Separate the front and back casings either by pulling them apart from the middle or gently prying the front off with your fingers from the bottom.
- ⚠** Be sure not to bend the casing too much when prying from the bottom. Failure to do so may cause it to crack.

## Step 4 — Inner Casing



- Remove the six 6mm T6 Torx screws around the edge of the front of the phone.
- Remove the metal frame holding the screen and speaker.

## Step 5 — Screen

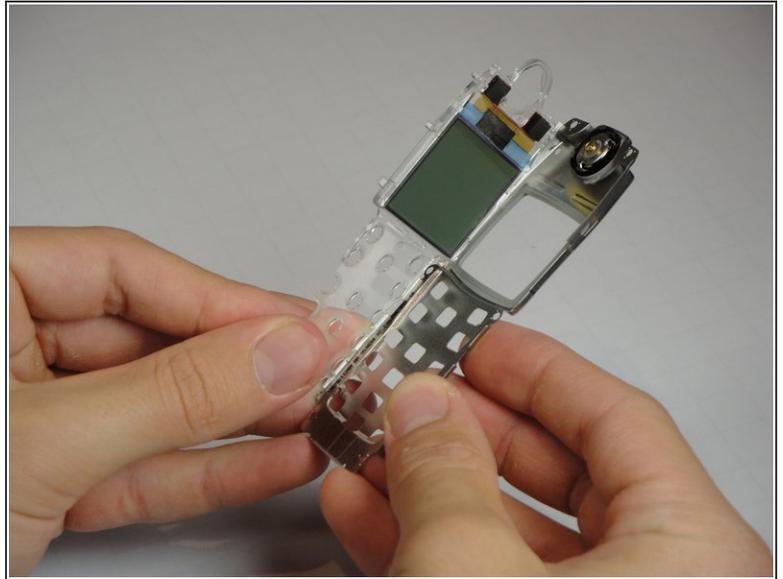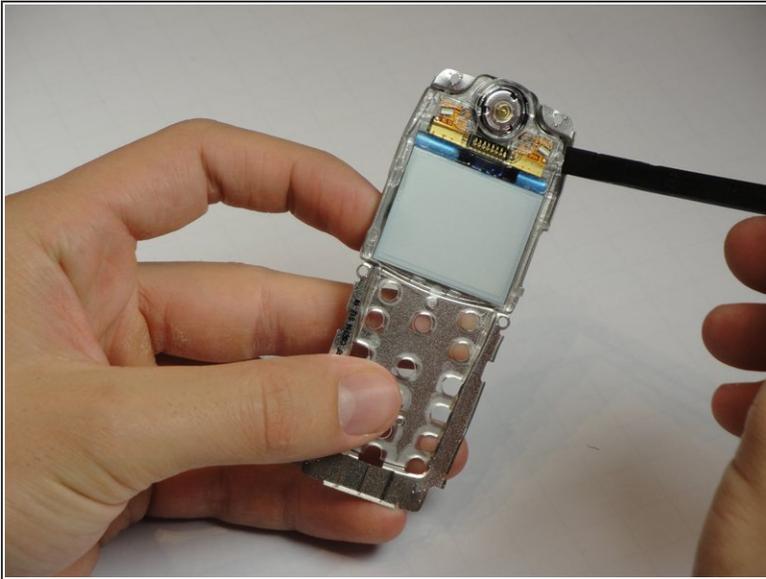

- Flip over the metal frame you just removed.
- Using the flat end of the spudger, pry apart the inner clear plastic frame with screen attached from the metal frame.
- Remove the screen bearing plastic frame.

To reassemble your device, follow these instructions in reverse order.