




MECHREVO Z2 Laptop RAM Replacement

MECHREVO Z2 Laptop RAM Replacement. This guide will tell you how to replace RAM for MECHREVO Z2 Laptop.

Written By: Songxun Cai

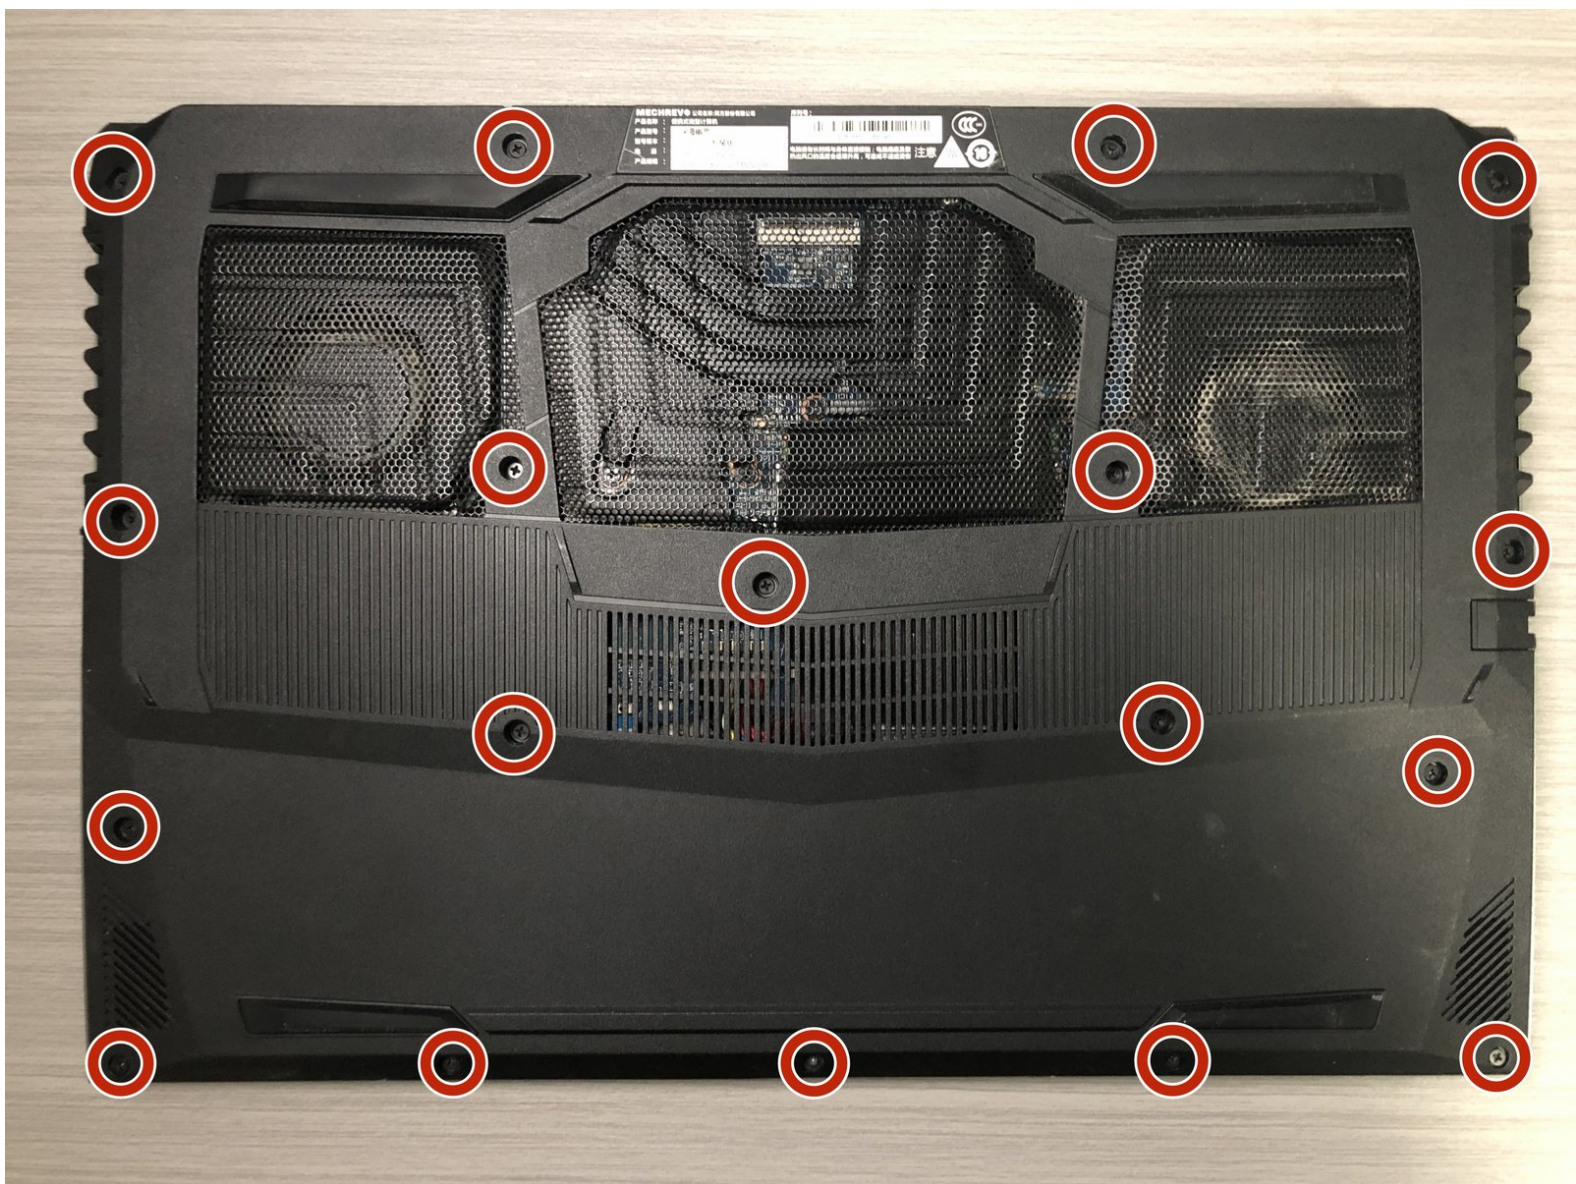

INTRODUCTION


- Device name: MECHREVO Z2
- The purpose of this guide is to replace the RAM of your laptop.
- If your MECHREVO Z2 Laptop gets slow in use, you may need to replace or add RAM to your Laptop.
- Please disconnect the power supply before working.
- [RAM](#)



TOOLS:



- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — RAM

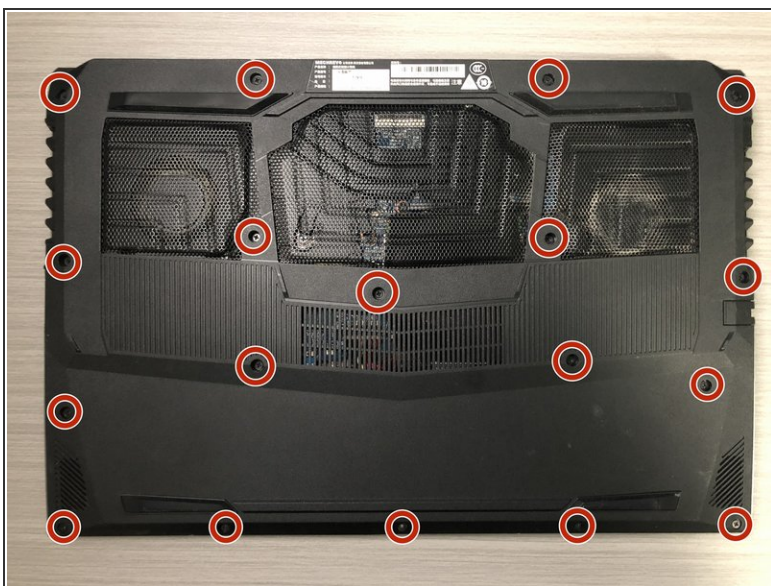

- Using a Phillips screwdriver, remove eighteen 1.2mm Phillips #1 screws on the back.

Step 2

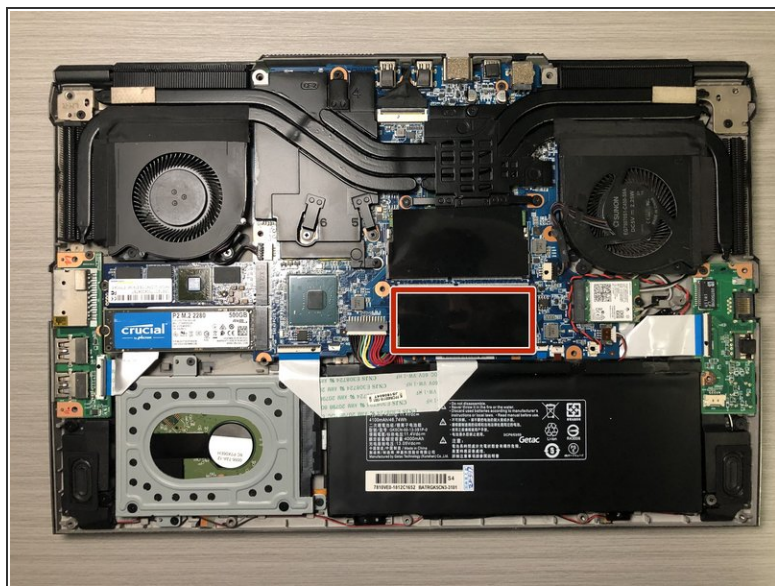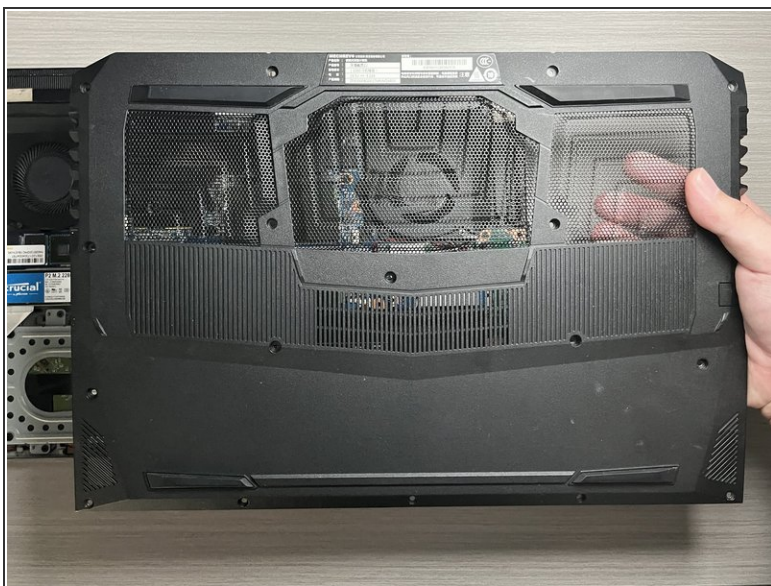

- Remove the back plane.
- Locate the memory slot.

Step 3



- Open the retaining latches on either side of the RAM card with your fingers or plastic tool.
- ❗ When both anchor pins are open, the RAM pops up.
- Remove the RAM.

Step 4



- Align the notched part of the RAM with the raised part of the card slot.
- Push inward until the notch and bulge coincide.
- Press the other end of RAM down with your finger.
- ❗ When you hear a clicking sound indicating that the retaining clips are reengaged, you are done installing.

Step 5



- Assemble the back plate.

要放大说明您的设备，请进行这些操作。