




# Lenovo ThinkPad X1 Carbon 5th Gen Battery Replacement

This guide shows how to replace the battery on...

Written By: Royve Mateos

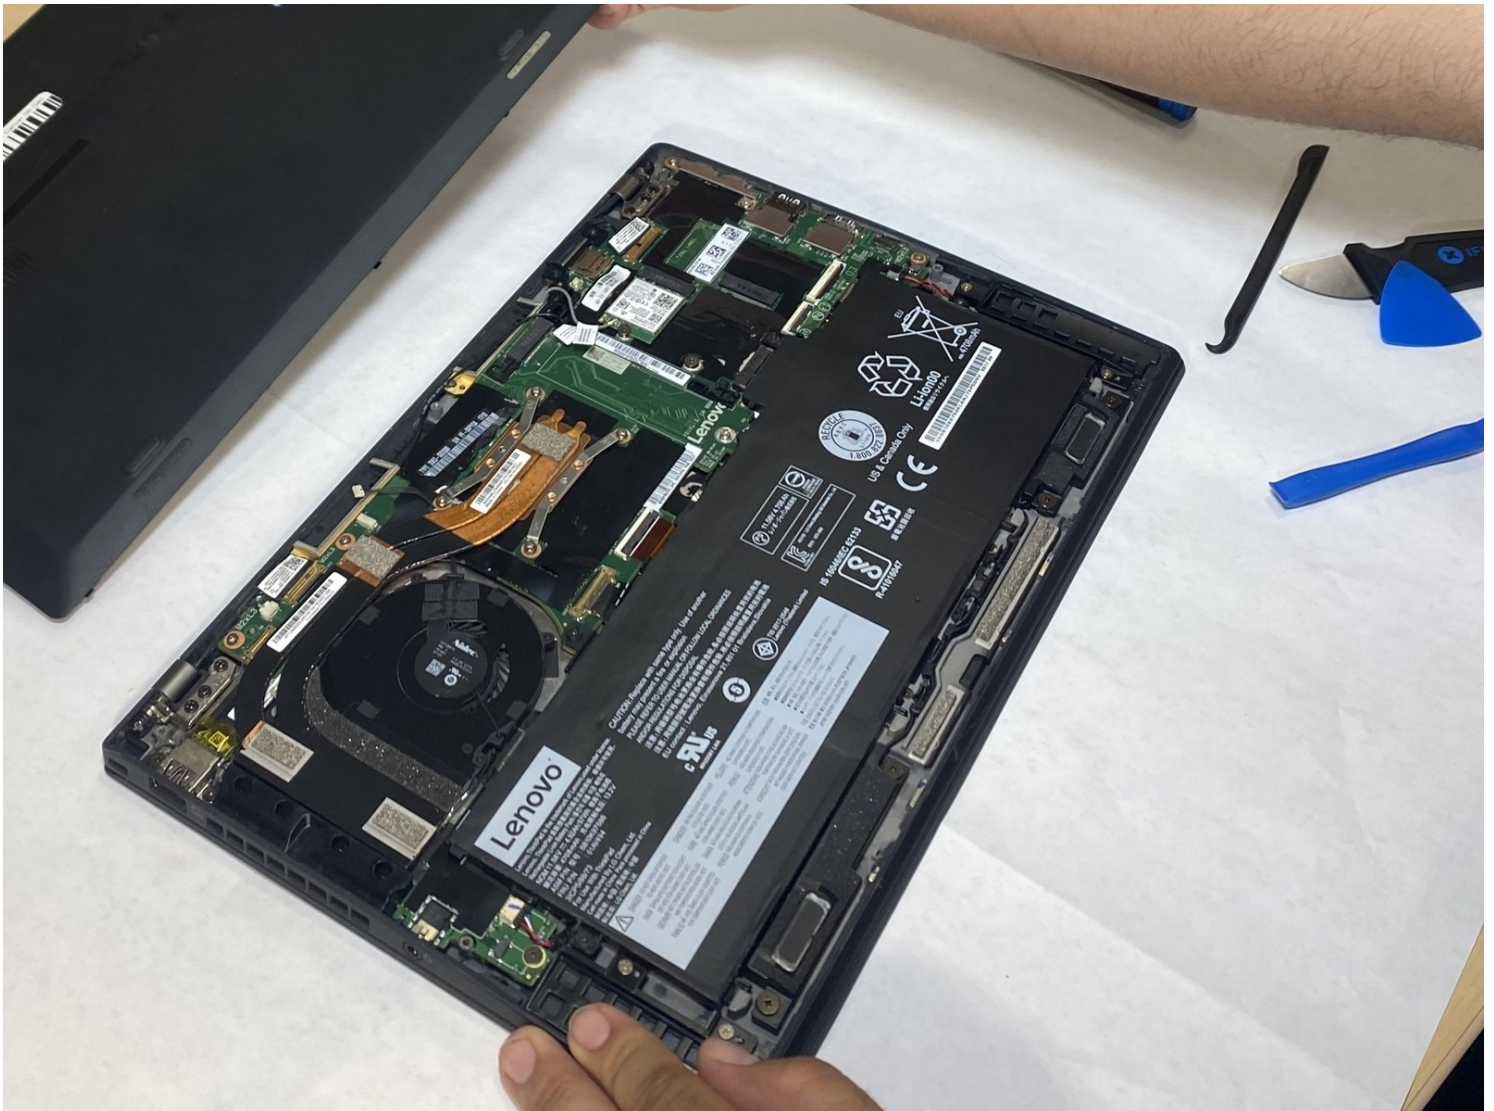

# INTRODUCTION

This guide shows how to replace the battery on the Lenovo ThinkPad X1 Carbon 5th Gen, Type 20K3-S0DQ00 S/N PF-0VPYSA 1710.

Users should have their device powered off for this.



## TOOLS:

[iFixit Opening Tool](#) (1)  
[Phillips #1 Screwdriver](#) (1)



## PARTS:

[Lenovo ThinkPad X1 Carbon Gen 5 and 6 Replacement Battery](#) (1)


---

## Step 1 — Back Cover



- Turn the laptop on to its back.

## Step 2

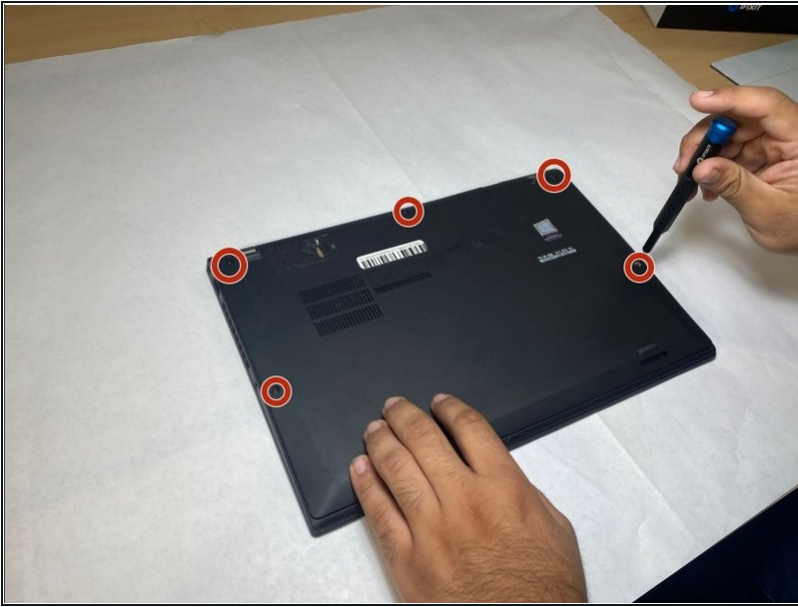

- Use the Phillips #1 screwdriver to remove five 1.2 mm screws from the back cover of the laptop.


## Step 3



- Remove the back cover using the opening tool, leaving the laptop back exposed.
  - Use the opening tool to pry the edge and work your way around the perimeter.
- ⚠ Careful to undo the clips before removing the back cover.





## Step 4 — Battery

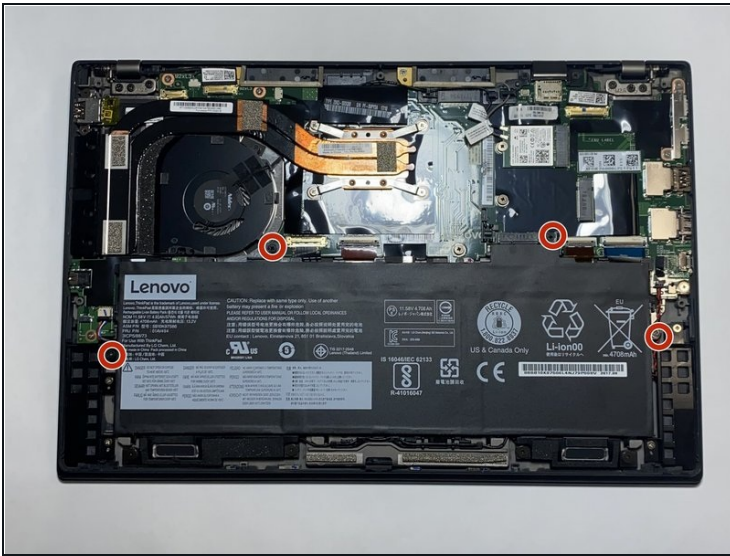

- Use the Phillips #1 screwdriver to remove the four 1.2 mm screws that secure the battery.

## Step 5

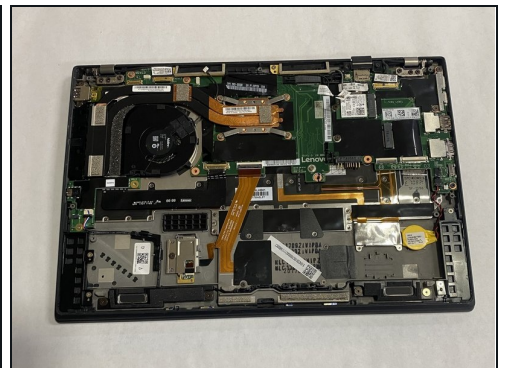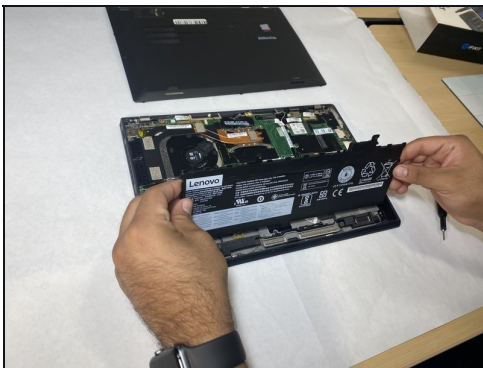

- Remove the battery using your hand or a prying tool.

To reassemble your device, follow these instructions in reverse order.