




Keurig B70 Platinum Check Valve Replacement

This guide will show you how to remove and replace the check valve in the Keurig B70 Platinum.

Written By: Ashlan Pate

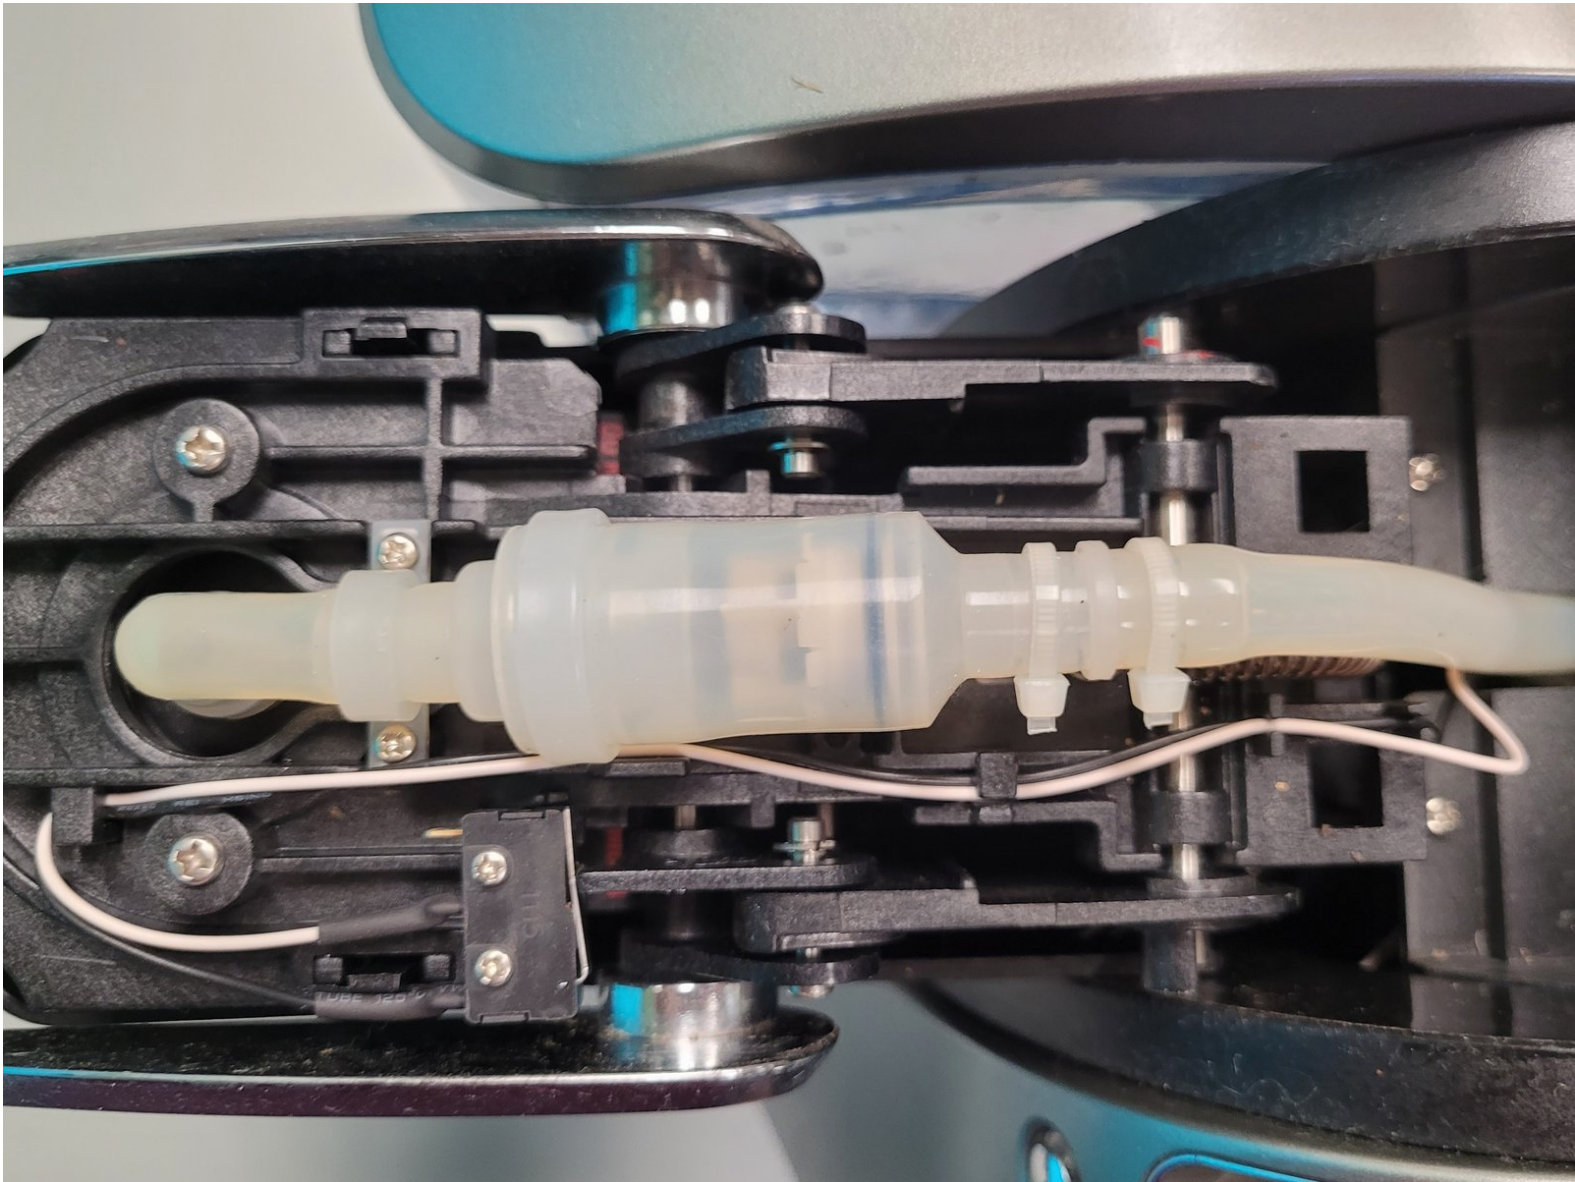

INTRODUCTION

Is your Keurig slow to brew or leaking water? This quick fix might be your answer to get you right back to brewing. This guide will show you how to easily replace your check valve in the Keurig B70 Platinum. The check valve is located at the top of the machine and can cause slow brewing or water not coming out of your machine if it is clogged or damaged.

Before continuing, make sure you unplug your machine and have a Phillips screwdriver and a pair of scissors handy.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Utility Scissors](#) (1)
-

Step 1 — Check Valve





- Lift up the top lid.
- Remove the two screws with a Phillips #0 screwdriver.

Step 2




- Push down on the lid.
- Lift up and remove the lid.

Step 3

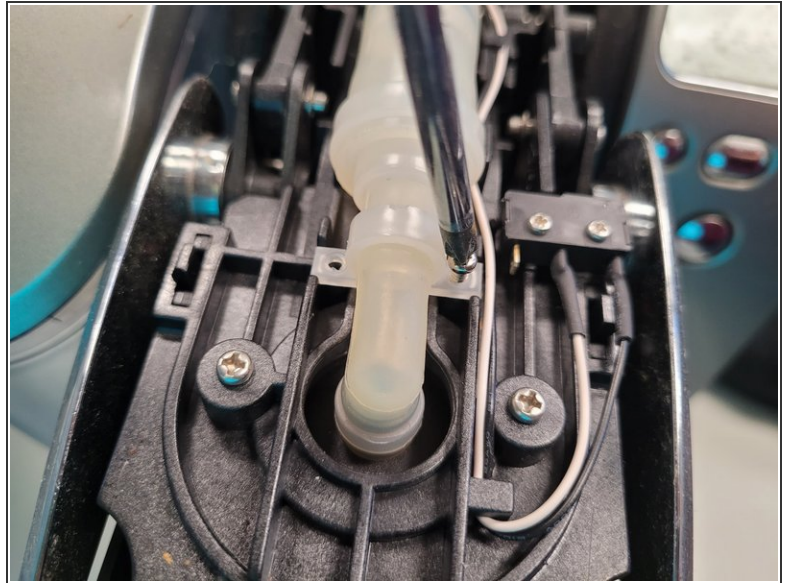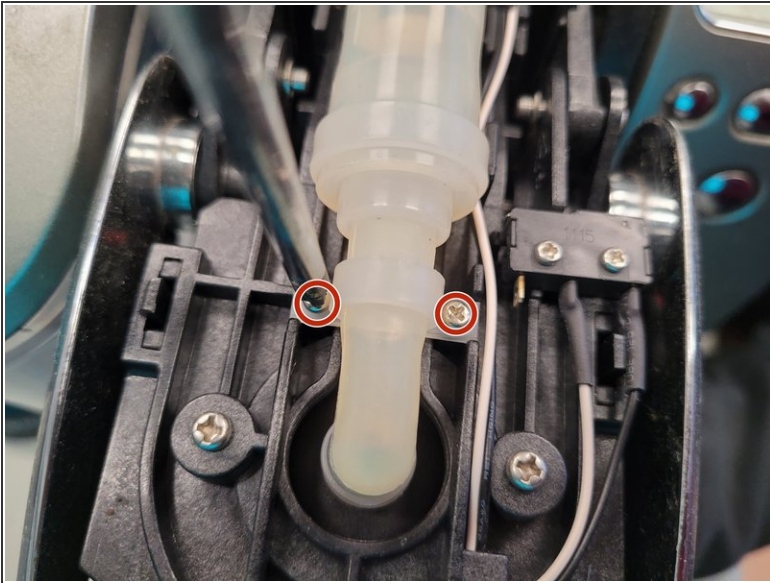


- Using the Phillips #0 screwdriver, remove the two screws holding the tubing to the puncture needle.

Step 4

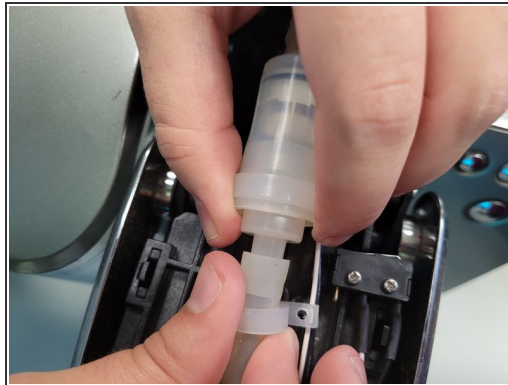


- Twist and pull to disconnect the valve on that side.

Step 5

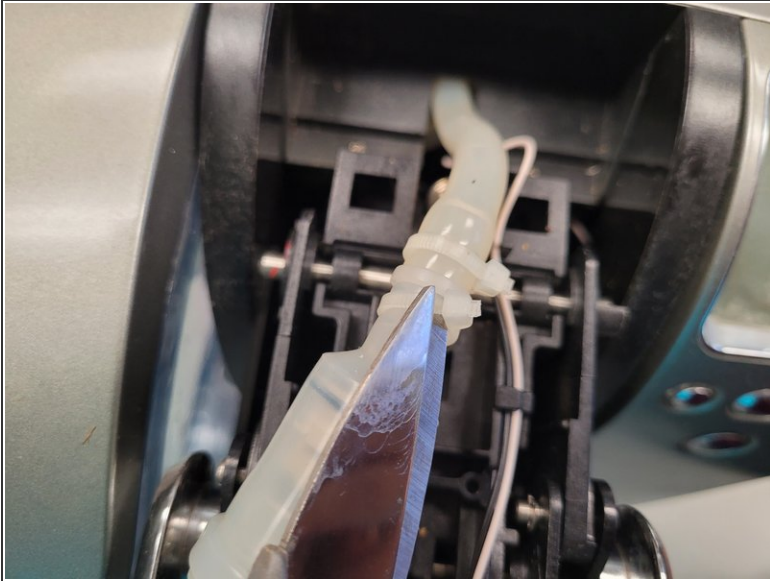


- On the other side, cut the one zip tie closest to the valve.

Step 6

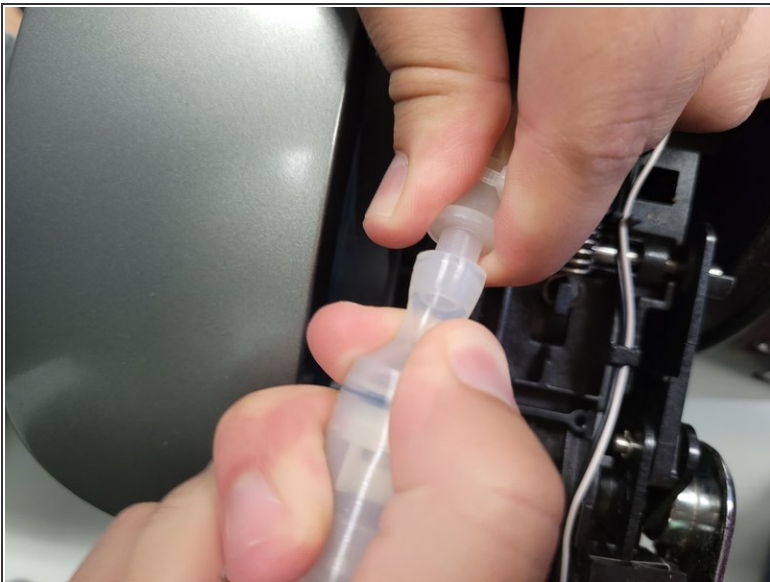

- Twist and pull to disconnect valve on the other side.

Step 7

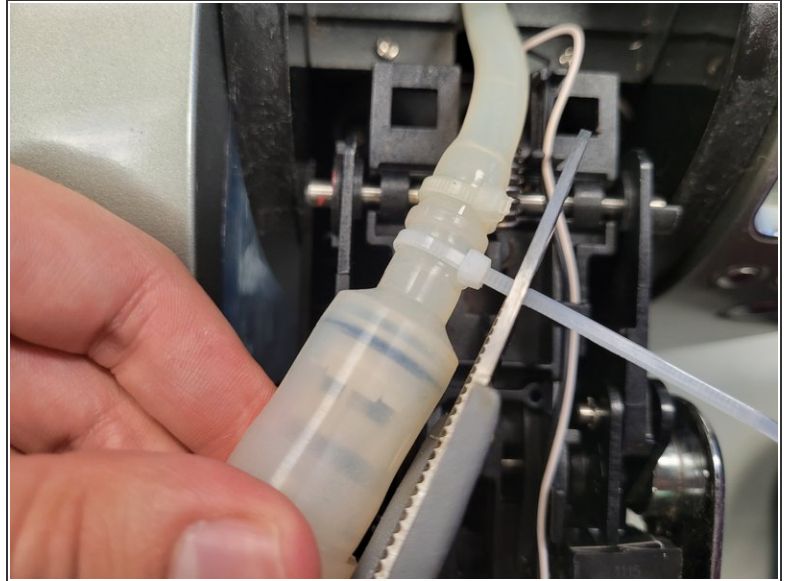

- Reassemble the valve in place.
- Resecure it with a zip tie.
- Trim the excess plastic off of the zip tie.

To reassemble your device, follow these instructions in reverse order.