


Logitech Webcam Pro 9000 USB Connection Replacement

Written By: Cory Davis

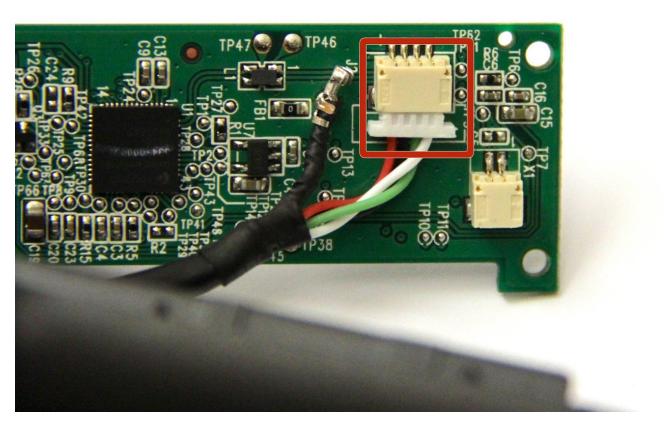



TOOLS:

- Soldering Workstation (1)
- Desoldering Braid (1)
- Spudger (1)
- Phillips #0 Screwdriver (1)


Step 1 — Front and Back Cover






- Remove the two 8 mm Phillips #0 screws on the back cover.
- ↑ The motherboard connects the two covers together. DO NOT separate the two yet.
- (i) There is a button that loosens as the Phillips screws are removed. Don't be alarmed if it falls out.

Step 2

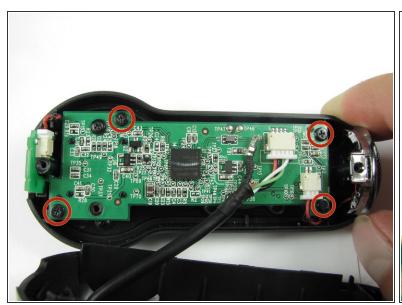

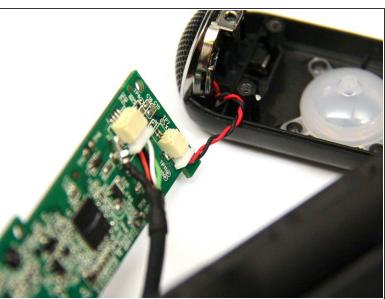

Remove the four 6mm Phillips #0 screws connecting the motherboard and front cover.

NOT detach the wire connecting the motherboard to the front cover.


Step 3 — USB Connection





- Use tweezers to grasp the white wire connector on the back of the motherboard.
- Wiggle the connector back and forth to remove it from the socket.

Step 4

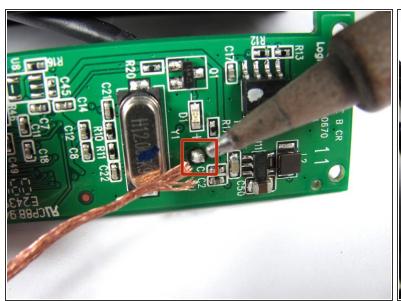



- Desolder the joint on the front of the motherboard to completely detach the USB cable.
- Follow this <u>link</u> to learn how to properly solder and desolder your parts.

To reassemble your device, follow these instructions in reverse order.