



# 2008 Toyota Corolla Battery Replacement

Show how to replace your car battery on a 2008 Toyota Car.

Written By: Lair Noriega



---

## INTRODUCTION

This guide will show you how to replace the battery in a 2008 Toyota Corolla. To get started, ensure the vehicle is parked in a safe place and turned off. Place the vehicle in park and engage the parking brake. Be sure to prepare baking soda mixed with water to clean the terminals.

---

### TOOLS:

- [Slip Joint Pliers](#) (1)
  - [Toothbrush](#) (1)
  - [Baking Soda](#) (1)
  - [Cup or Mug](#) (1)
-

## Step 1 — Battery



- Open the car hood.
- The battery will be located on the bottom right.

## Step 2



- i** There are two terminals on the battery. The positive terminal is on the left with the red cover. The negative terminal is on the right.
- Unscrew the bolt to loosen the negative terminal.
  - Remove the negative terminal from the battery.

### Step 3



- Take the red cover off the positive terminal.
  - Unscrew the bolt to remove the positive terminal.
- i** Loosening the screws of the terminal can be difficult. In the first picture, I used pliers to help loosen up the screw holding the terminal tight.

### Step 4



- Disconnect the battery's terminals from the battery, and remove the old battery.
- i** Batteries, over time, tend to get dirty. You can mix baking soda with water and use a brush to clean your terminals.

## Step 5



- Once everything is clean, you can begin installing your new battery.
- Install your new battery in the correct space. You will install the negative terminal first, then the positive terminal.

**⚠ Before moving on, make sure each screw on the terminal is tight and secured.**

## Step 6



- Ensure that every bolt is secured.
- Start your car and let your car run for a couple of minutes.