



Hori Real Arcade Pro N Push Button Replacement

To replace the 30mm and 24mm push button found on an Hori RAP N Fight Stick

Written By: gabriel garcia



INTRODUCTION

If your Hori Real Arcade Pro N button is not registering button presses, then use this guide to replace the Sanwa 30 or 24 mm push button found in the RAP N fight stick.

What is needed to replace the fight stick buttons is a Sanwa 30 or 24 mm push button and a Phillips head screwdriver to remove the screws found in this fight stick.

Before you begin if you need to fix the opt right button a 24mm push button is needed but if it is for the 8 buttons, you need the 30mm Sanwa buttons.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Push Button




- Flip your Fight Stick so the bottom is facing up.
- Remove the sticker covering the screw in the bottom middle of the device.
- Remove eight screws from the bottom of the device using a Phillips #0 screwdriver.

Step 2

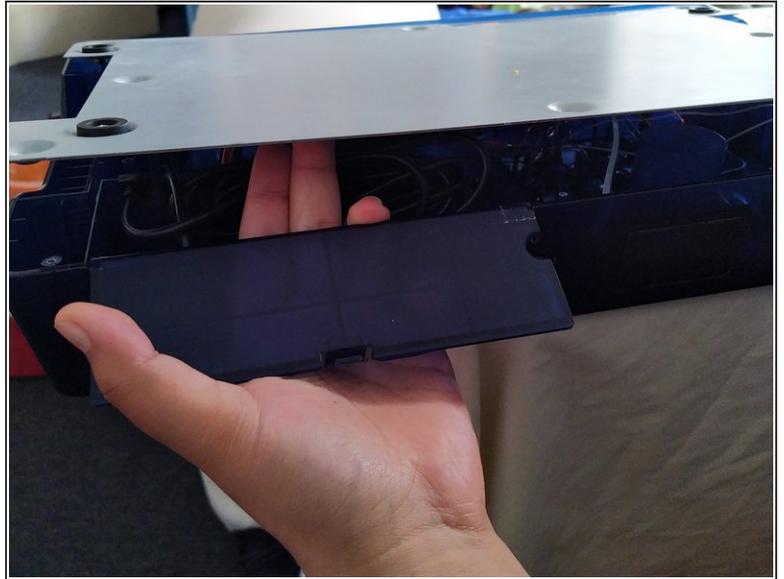


- Find the storage compartment that holds the USB wire.
- Open the case by putting your hand in the compartment and pushing up.
- ⓘ Put your Fight Stick on its side to make the other steps easier.

Step 3

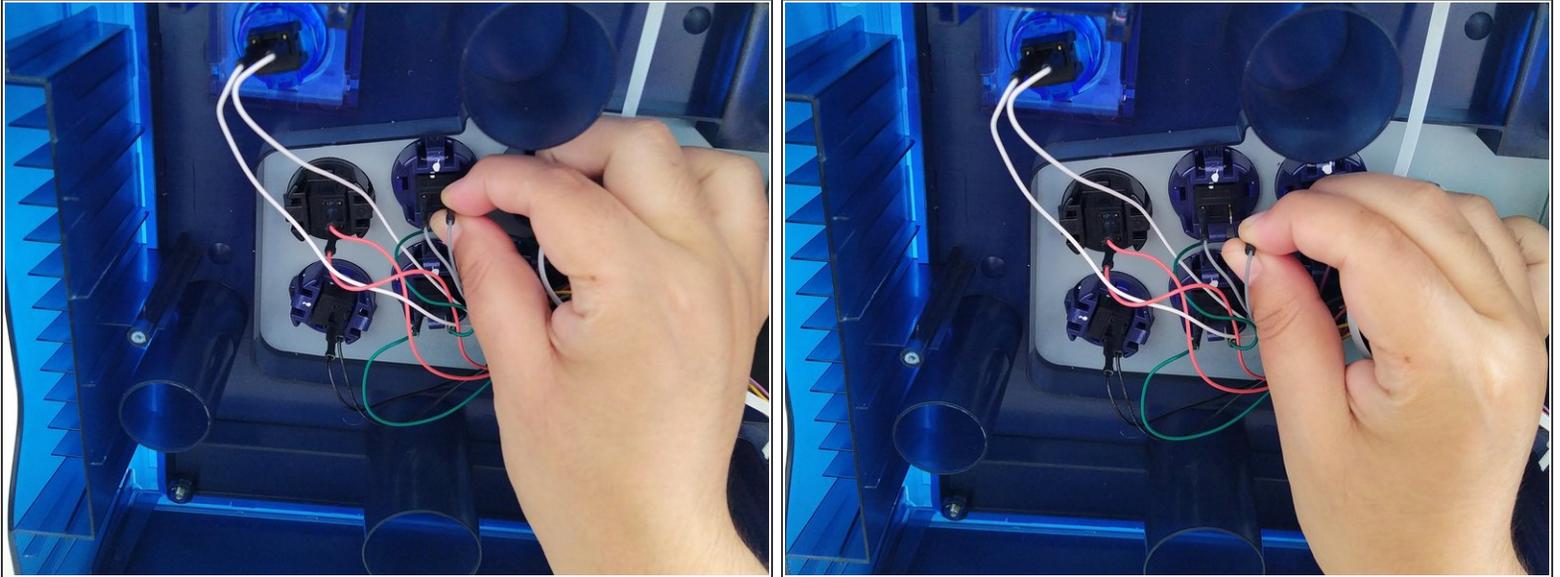


- Use your fingers to pull the black grip to detach both wires connected to the pushbutton.
- ⓘ Pulling the wire instead of the black grip can cause the wires to not function.

Step 4

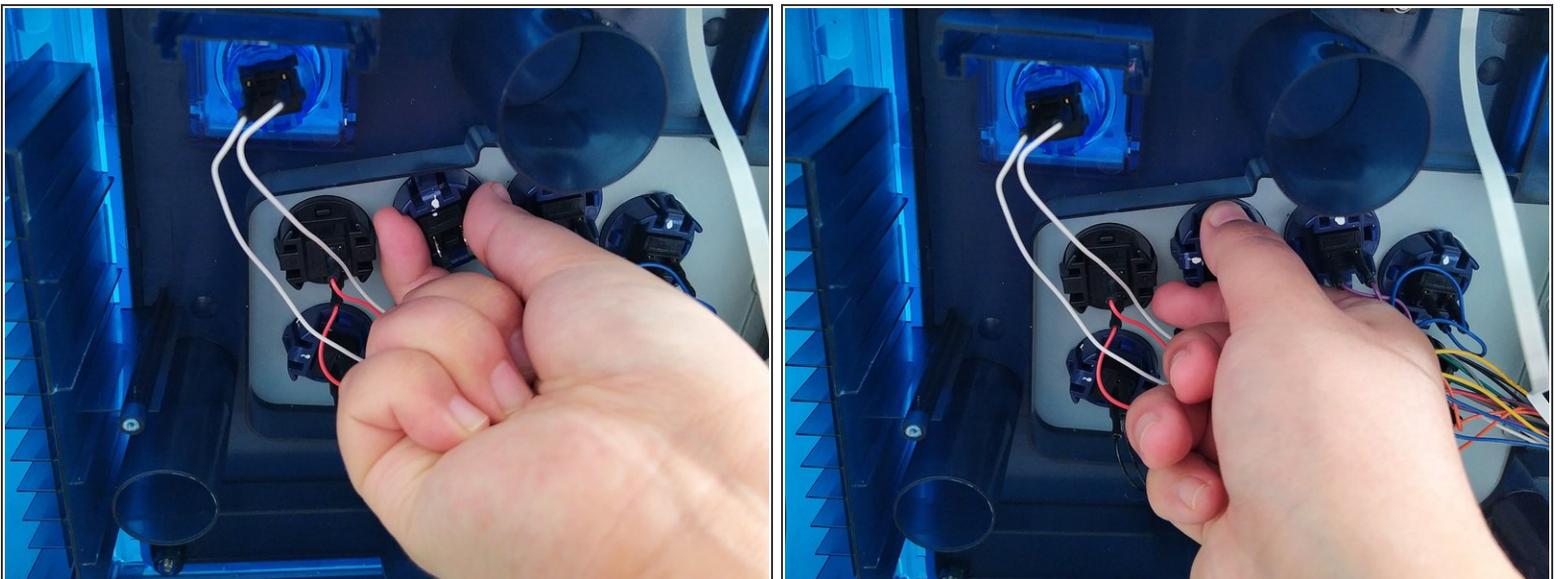

- Twist the button you are planning to remove.
- ⓘ The tabs must be on its side as shown in the second picture so it is easier to grab in the next step.

Step 5

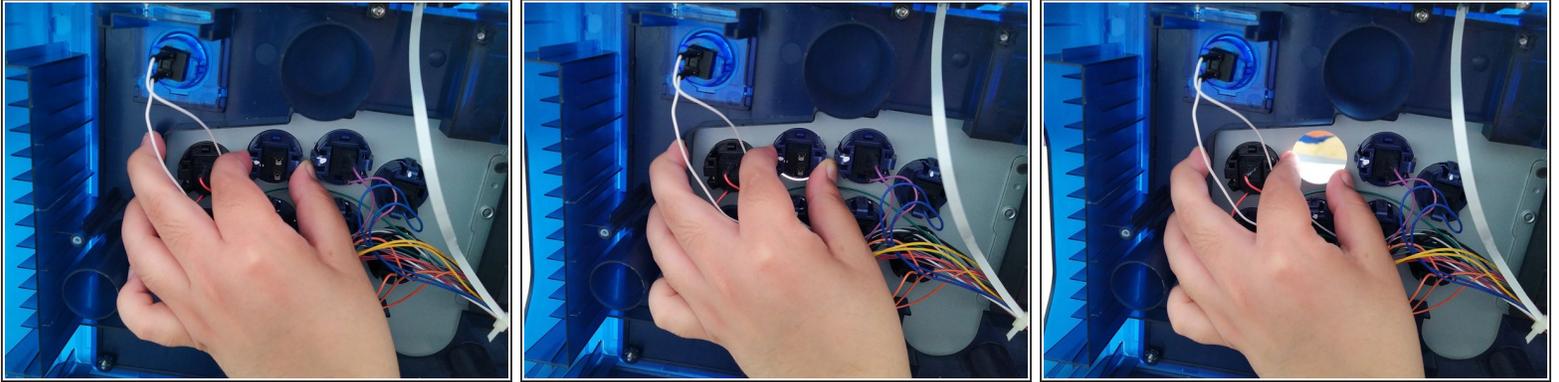

- Squeeze the tabs in the button.
- While squeezing, push the button inward, so it falls out.

To reassemble your device, follow these instructions in reverse order.