




Samsung Galaxy S Plus Front Panel Assembly Replacement

The front panel assembly, including the digitizer, speaker, and OK button, can be replaced on the Samsung Galaxy S Plus (i9001)

Written By: Joao de Matos

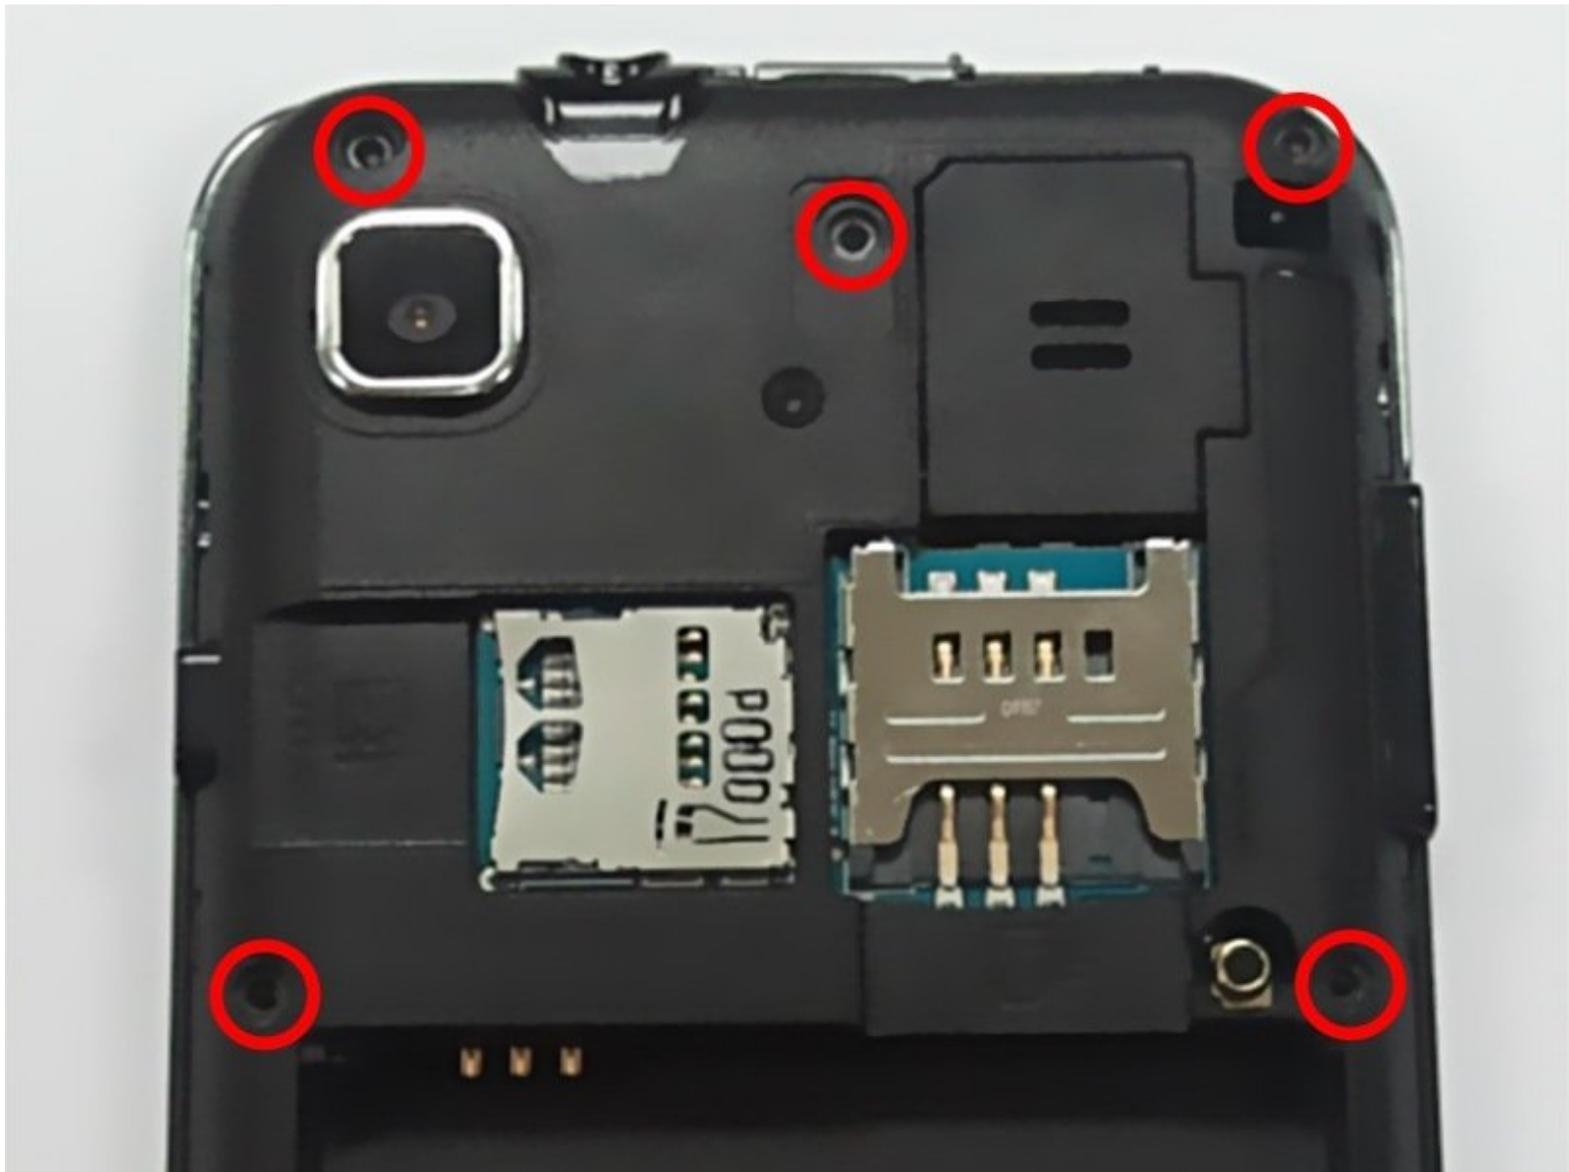

This document was generated on 2020-12-10 10:48:39 PM (MST).

INTRODUCTION

Use this guide to replace the front panel assembly, including the digitizer, speaker, and OK button on the Samsung Galaxy S Plus (i9001)


TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Samsung Galaxy S PLUS \(i9001\) Screen/Digitizer Frame](#) (1)

Step 1 — Front Panel Assembly

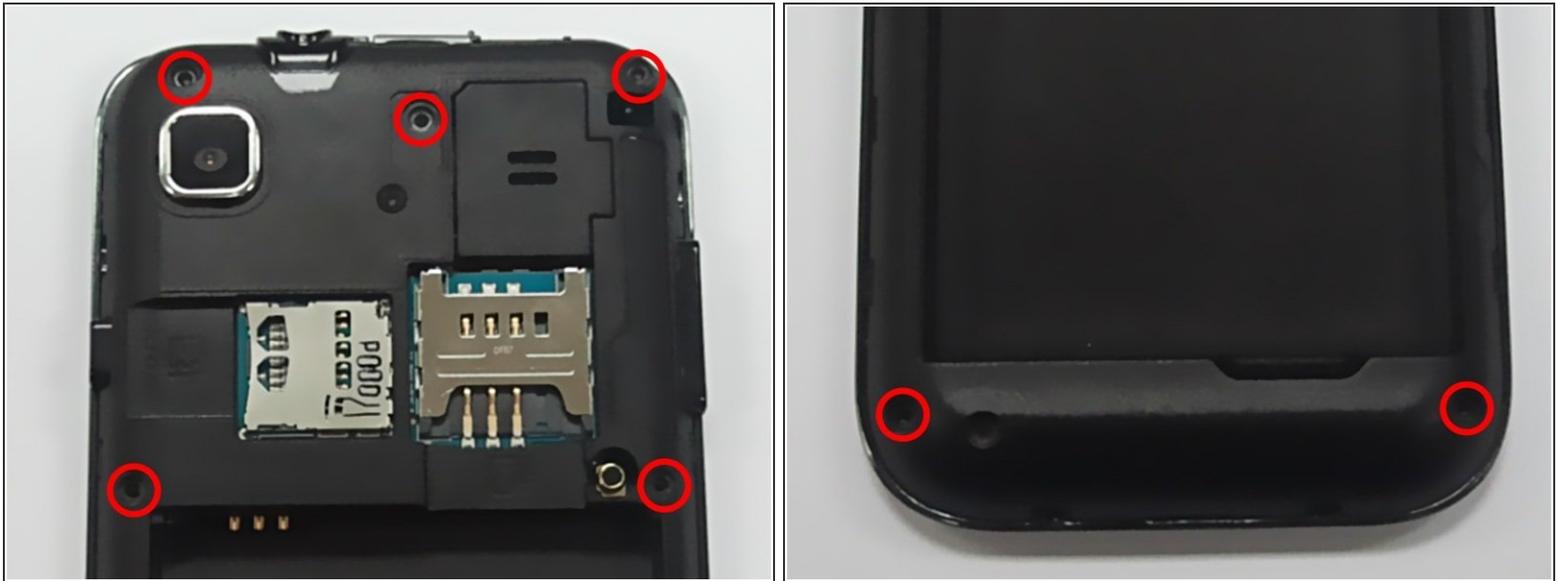

- Unscrew 7 screws on the rear using a Phillips screw driver.

Step 2




- Unhook the rear using a soft plastic prying tool to remove the rear cover
- **Be careful not to damage the rear cover when unhooking it.**

Step 3




- Detach the Power Key FPCB, that is stick to the bracket by a double-sided tape, using tweezers. Make sure to remove all remaining tape on the bracket.

Step 4

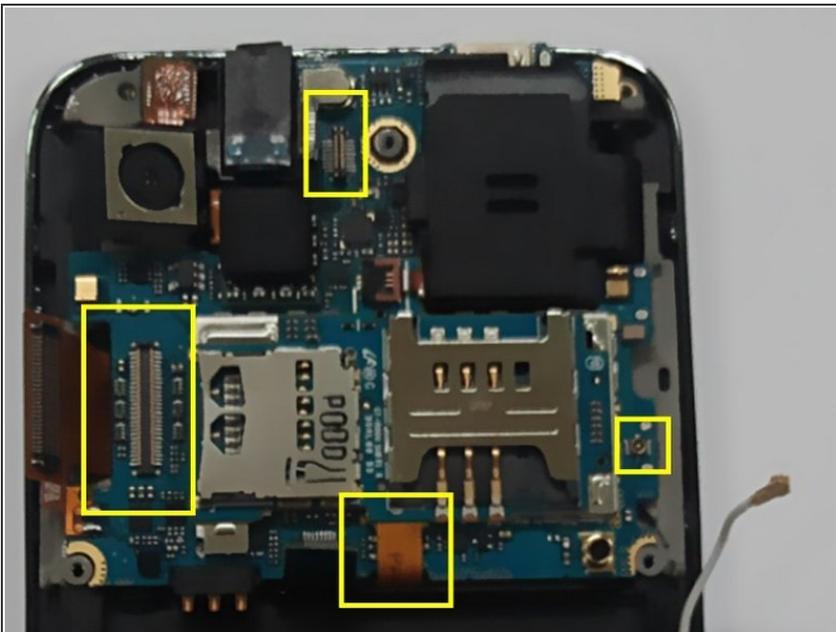



- Disconnect LCD Connector, Receiver Connector, Sub-touch Key Connector and Antenna cable from the Main PBA
- **Disconnecting the camera connector isn't necessary!**

Step 5

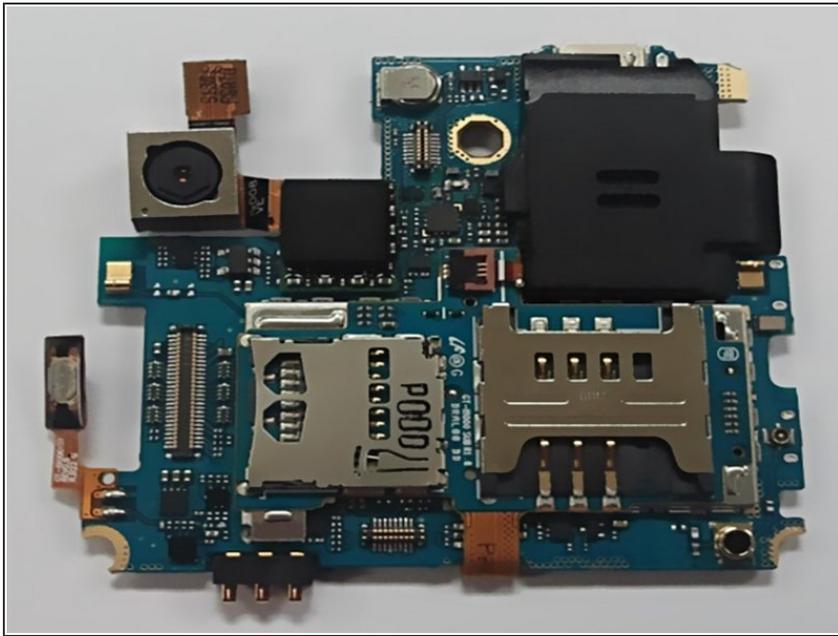

- After disconnecting the connectors carefully pull the Main PBA out of the bracket.
- **Make sure that the Power Key FPCB does not get stuck!**

Step 6

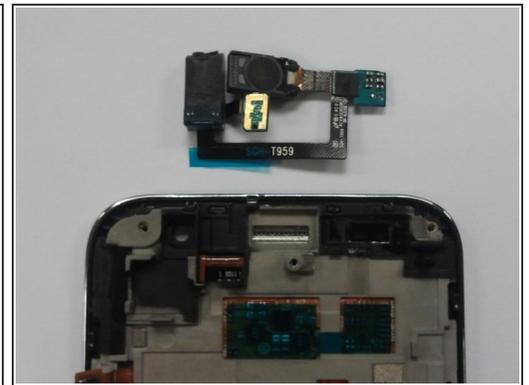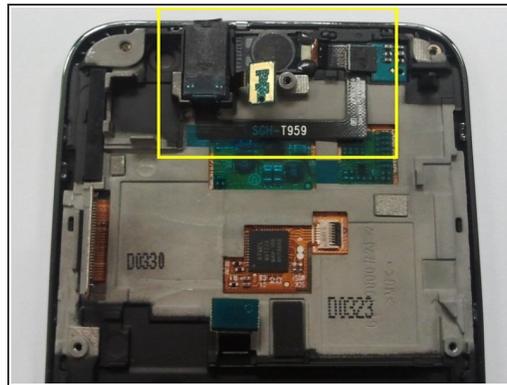

- Remove the antenna cable from the main Antenna PCB on the sub-touch key module of your broken Screen Digitizer Frame
- Pull out the Receiver module from the bracket. Be careful not to damage the FPC.
- **Now assembly both Receiver module and antenna cable into the new Screen Digitizer Frame and reverse the process of disassembly!**

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-12-10 10:48:39 PM (MST).

