



# Pioneer Steel Wheels Swivels Replacement

Removing the swivels from the Pioneer Steel Wheels Headphone.

Written By: Garrett Leung



---

## INTRODUCTION

This guide will show you the steps to remove the swivels.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Folding Hinges



- While holding the base of the headband with one hand, hold the ear cup with the other hand.
- Pull them apart to reveal the screw.

## Step 2




- While apart, remove the screw from the headphone.

### Step 3



- Loosen the plastic cover piece that protects the chrome folding hinge.
- Remove the plastic cover piece.
- ☞ During reassembly, make sure the plastic covering piece hooks onto the base of the chrome hinge before screwing it back in.

## Step 4

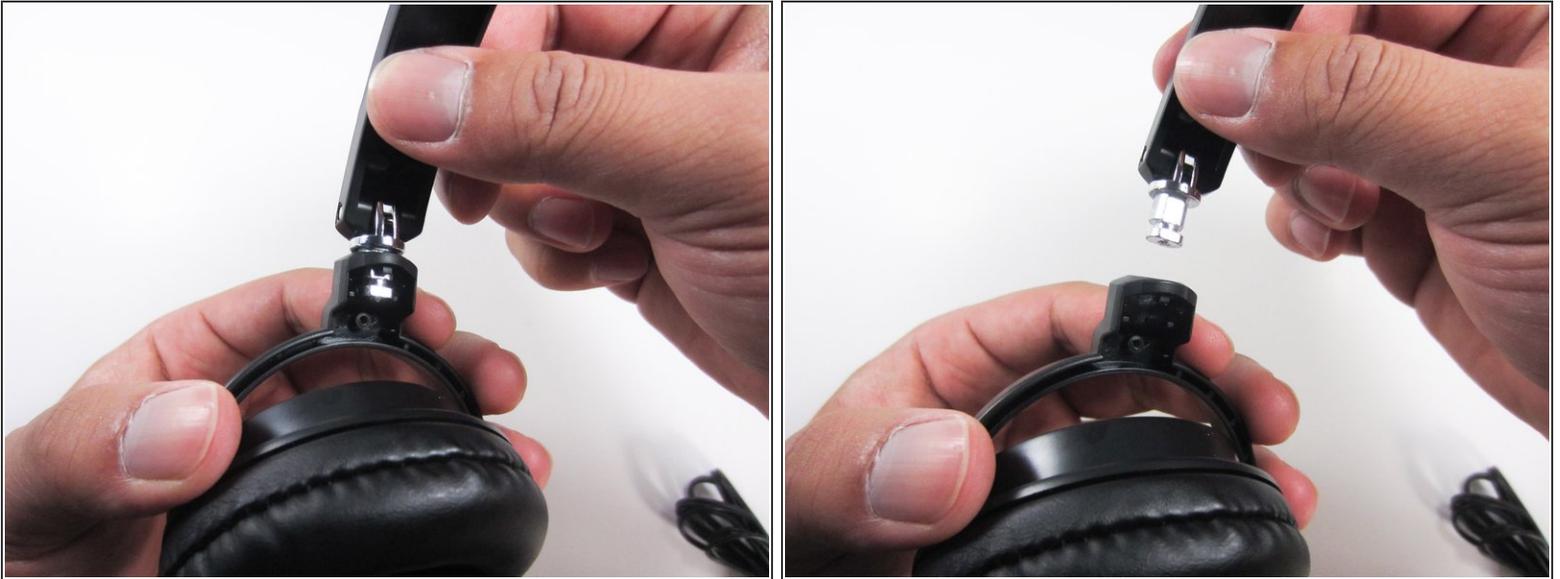


- Holding the ear cup with one hand, pull up on the base of the headband with the other hand to release the folding hinge.
- Repeat for the opposite side if necessary.

## Step 5 — Drivers



- Remove the three screws located on the driver cover of the ear cup with the PH0 Phillips screw driver.

## Step 6

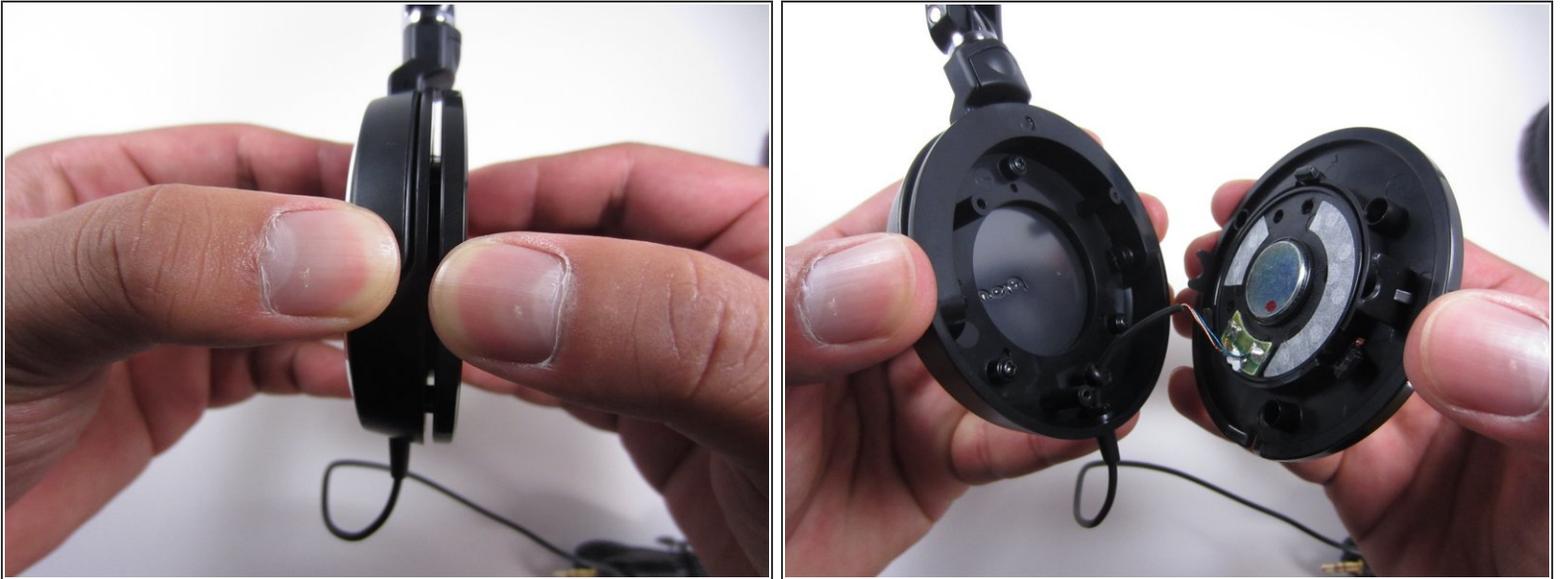

- Pull the driver cover away from the headphone.
- ⓘ Do not pull the driver cover away too fast since there are wires connecting the driver to the ear cup.
- ✦ During reassembly, make sure the two wires are pointing downward before screwing the driver back in.

## Step 7 — Swivels



- Separate the swivel from the ear cup.

## Step 8



- Grab the end of the swivel that is closest to "Pioneer" and pull outward.

## Step 9



- Switch sides and grab the other end of the swivel and pull outward as well.
- ☑ During reassembly, insert the swivel back at the tilted position so it can be popped in with ease.

To reassemble your device, follow these instructions in reverse order.