



Disassembling NEC LCD1770NX Stand

Use this guide to separate the adjustable stand from the rest of the monitor.

Written By: Michela Upson



INTRODUCTION

Removing the stand from the rest of the monitor allows you to access and replace parts inside the display assembly.

Before beginning this guide, prepare a clean, flat surface to use as a workstation. Avoid working over carpeting, as small screws are used and, if dropped, may be lost in the carpet.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Stand



- Place the monitor face down on a clean, flat surface.

Step 2



- Firmly remove the back panel of the stand by pulling it up and away from the monitor.

Step 3



- Unscrew the two 6mm Phillips PH2 screws to detach the stand enclosure from the stand.

Step 4



- Firmly grasp the stand enclosure with your hand and slide it to base of stand.

Step 5



- Unscrew the two 14.5mm Phillips PH2 screws holding the stand to the monitor.

Step 6



- Lift the the stand straight up to remove it.

To reassemble your device, follow these instructions in reverse order.