


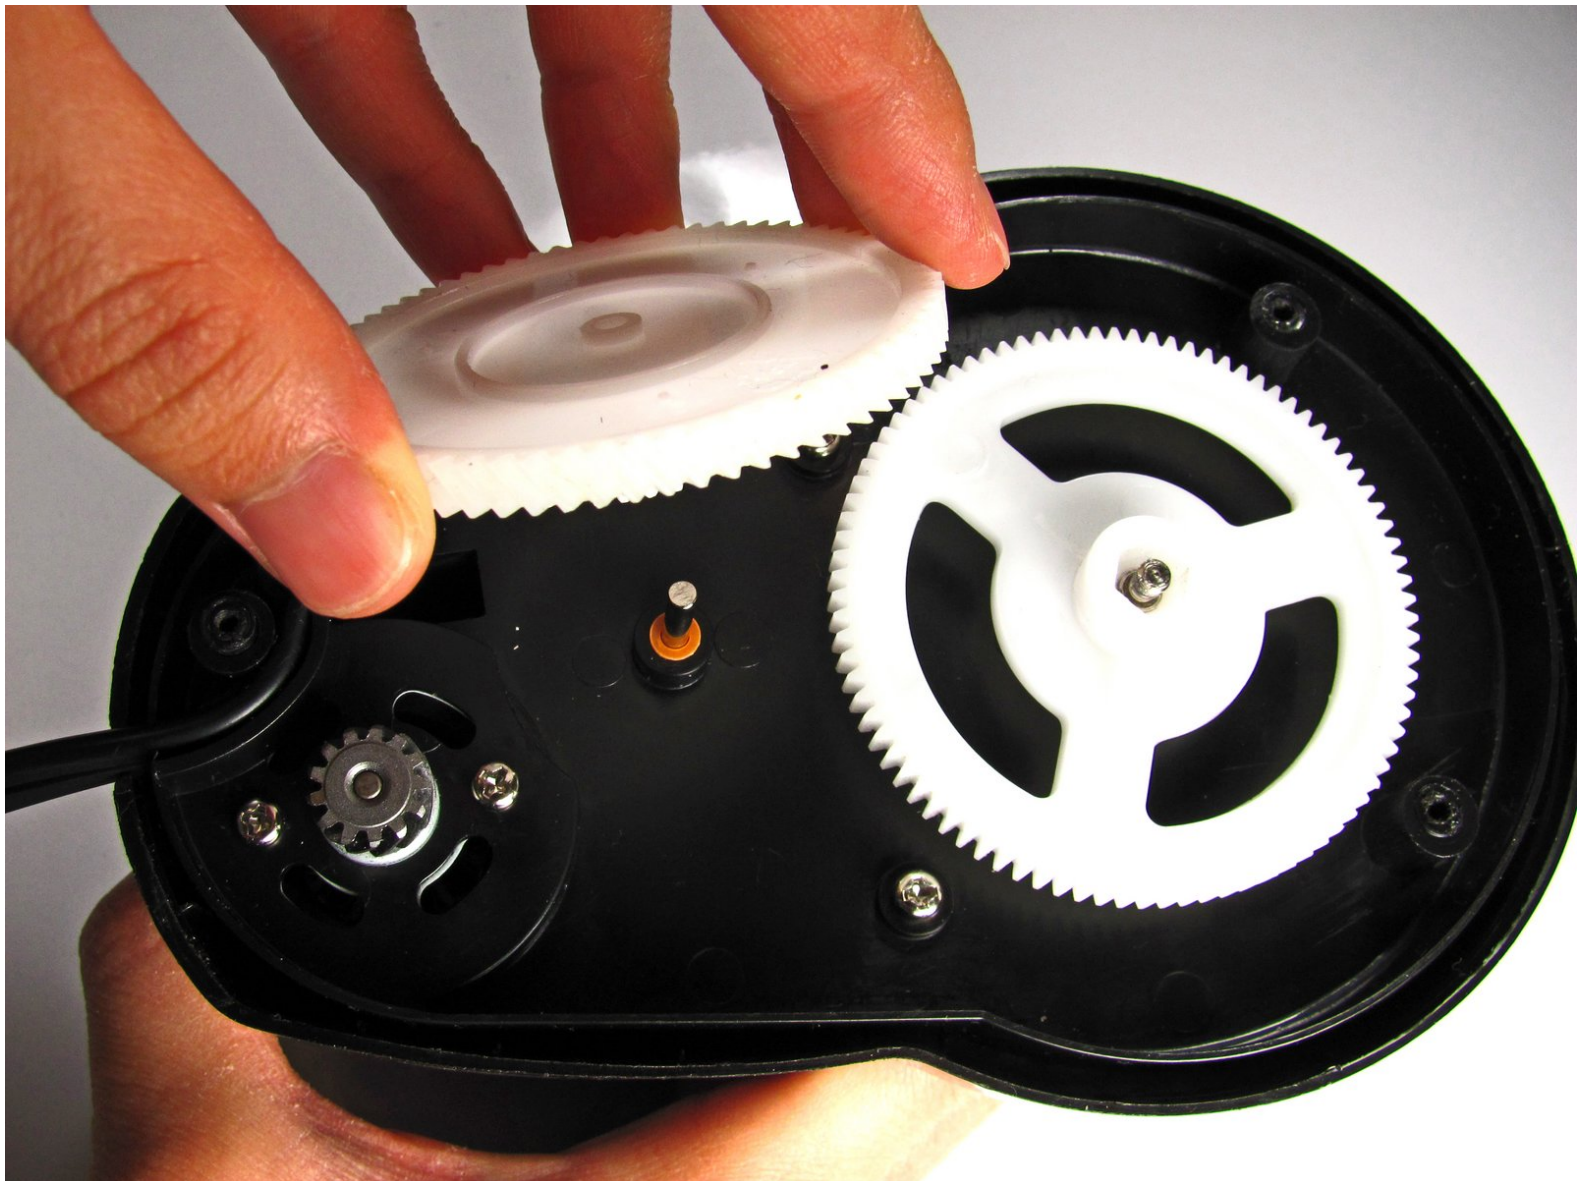

Rival Mini Chopper MC-67BL Turning Gears Replacement

Remove the turning gears of the Rival Mini Chopper.

Written By: Roxanne



INTRODUCTION

This guide will help you remove the turning gears of the Rival Mini Blender. Removing the gears will allow you to access the interior components of the device.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-

Step 1 — Turning Gears



- Twist the plastic lid counterclockwise to unlock it.
- Lift the lid to remove it from the container.

Step 2




- Carefully remove the blade from the container.
- ★ For reassembly, the teeth on the metal shaft line up with slots on the inside of the plastic hole.

Step 3




- With your hand, twist the container counter-clockwise until it unlocks from the base. Remove the container by lifting it straight up.

Step 4

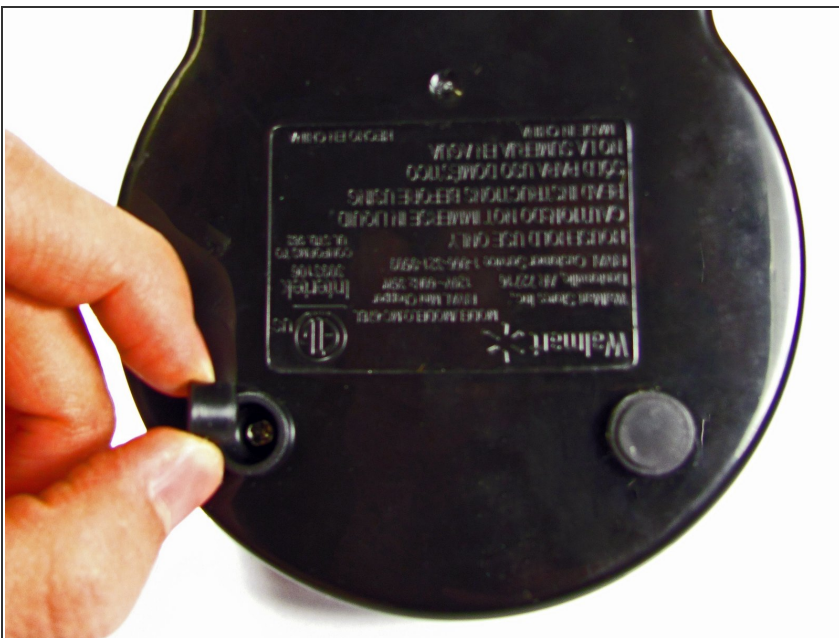

- Use your fingers to pry out the two rubber feet from the bottom cover of the base.
- ⓘ The two feet furthest from the button tower contain screws. The other two feet do not.

Step 5

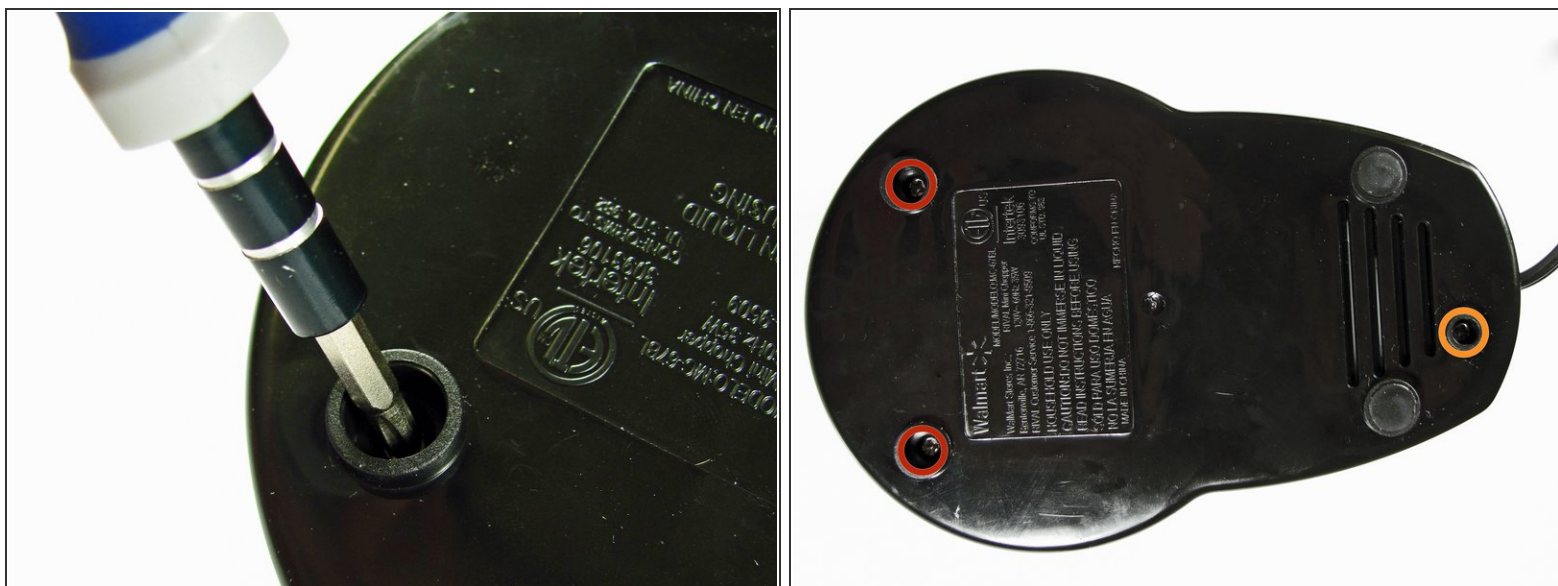


- Use the Phillips #2 screwdriver to unscrew the two 12.7-mm screws underneath the rubber feet.
- Use the same screwdriver to unscrew the 15.88-mm screw from the back of the chopper.

Step 6





- Firmly lift the bottom cover off of the base.

Step 7

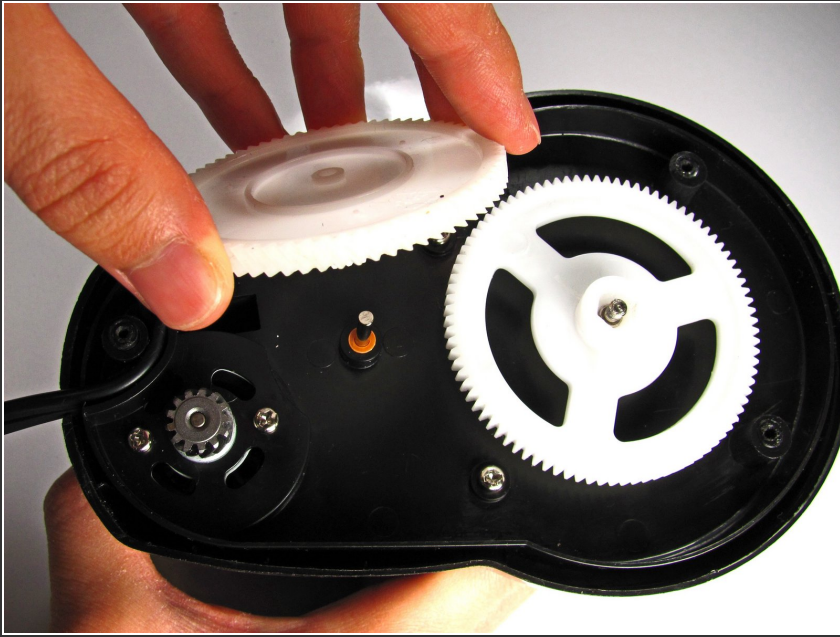

- Remove the smaller white gear by lifting it up with your hand.

Step 8

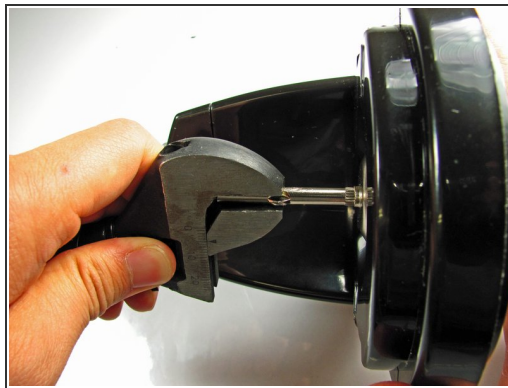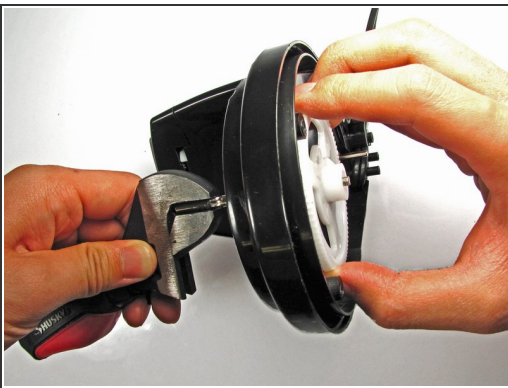

- Use a pair of pliers or any other clamping tool to securely hold the blade-shaft that sits above the base.
- ⚠ Grab the gear with your other hand and turn **CLOCKWISE**. Unlike most screws, the gear is reverse-threaded to allow the blade to spin.
- Continue turning the gear until completely removed from the blade-shaft.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-27 09:39:23 AM (MST).

