



# Planet Eclipse Geo3 Detents Replacement

Replacing one or both of the ball detents.

Written By: Rett Triplett



## INTRODUCTION

This guide is necessary if the detents are no longer preventing the paintball from rolling down the barrel. One indication of this is if paintballs are busting due to double feeding.



### TOOLS:


- [5/64" Allen Wrench](#) (1)



### PARTS:

- [Ball Detents](#) (1)

## Step 1 — Detents

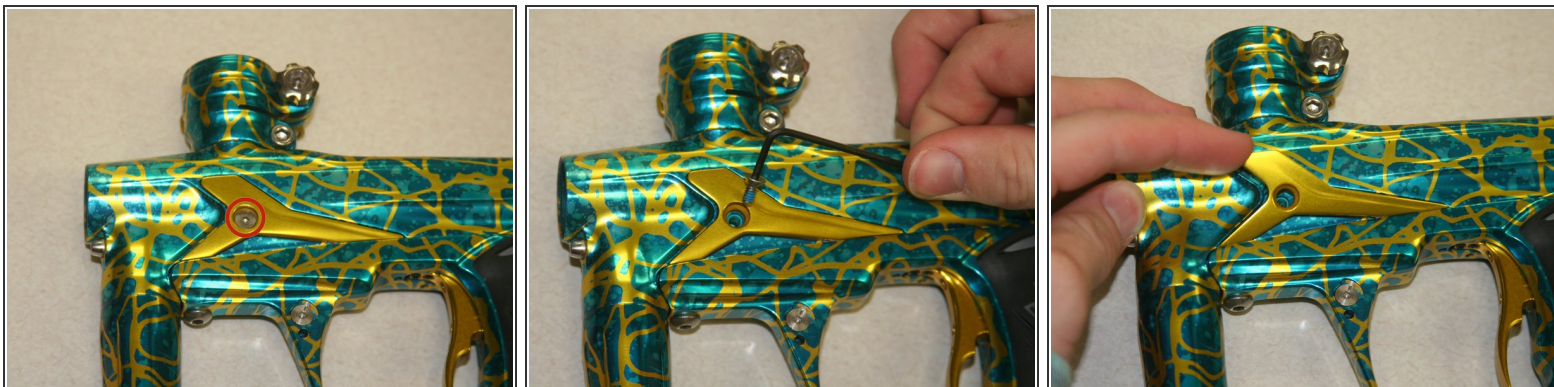

- Using 5/64" allen wrench to remove the screw in the eye covers on both sides of the marker.
- Remove the eye covers.

## Step 2



- Remove the ball detent.

To reassemble your device, follow these instructions in reverse order.